

## INSTALLATION AND SETUP GUIDE

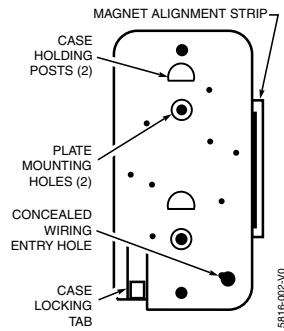


Diagram 1. Mounting Plate

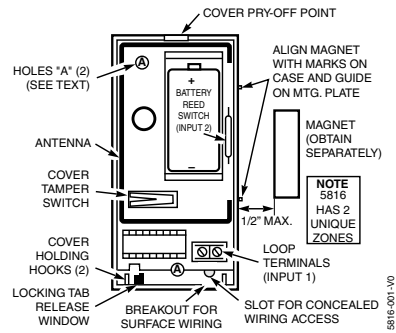


Diagram 2. Transmitter, Cover Removed

### GENERAL INFORMATION

The 5816AP is a Door/Window Transmitter intended for use in systems that support 5800AP wireless devices. It has its own unique serial number permanently assigned during manufacture. You must “enroll” the transmitter serial number in the control prior to its usage in the system. Refer to the control unit’s installation instructions for further details. **Note:** During programming of the control unit, 5816AP transmitters shall be defined as the Input Type “RF” (i.e., supervised RF).

The 5816AP has *two* unique zones; the *first* is for a wired closed circuit contact loop and the *second* for its built-in reed switch (used in conjunction with a magnet as described below). Either or both zones may be used.

A built-in cover tamper switch is activated when the cover is removed.

### INSTALLATION

#### Mounting

*For proper orientation of the unit in relation to the mounting plate, loop wiring, and/or magnet, read all of this section before installing the unit.*

The description that follows assumes that the unit will be mounted as shown in the diagrams, with the magnet (if used) located to the unit’s right. The unit may, however, be installed in *any* direction, as long as the relationship of the unit to its mounting plate and (if used) magnet is maintained.

Although two holes are provided in the unit that would permit mounting directly to a surface (holes ‘A’ in Diagram 2) it is recommended that the mounting plate be used, for ease in removing the unit for servicing should it become necessary.

*Before mounting the transmitter permanently, conduct Go/No Go tests (see control’s instructions) to verify adequate signal strength and reorient or relocate the transmitter if necessary.*

- 1. Remove the transmitter’s cover** by inserting the flat blade of a small screwdriver into the pry-off slot at the end of the unit farthest from the cover’s decorative ribs, and twisting the blade.
- 2. Disengage the supplied mounting plate from the unit** by inserting the blade of a small screwdriver into the locking tab release window (see Diagram 2) and pressing it against the locking tab (see Diagram 1) while sliding the plate downward along the case back.
- 3. If a wired contact loop is to be used with concealed wiring**, feed the wires through the concealed wiring entry hole at one corner of the mounting plate.  
For *surface* wiring entry, a thin “breakout” area is provided in the case wall. Wiring can be run through this “breakout” in the case when attaching the case in step 5.
- 4. Install the mounting plate**, with its case holding posts pointing up (in this example), in the location selected as described in the control unit’s installation instructions. Use the flat head screws supplied.
- 5. Attach the case back to the mounting plate** by sliding the keyhole slots in the case back down onto the mounting plate’s case holding posts. The locking tab will click as the case back locks in place.
- 6. If the unit’s reed switch is to be used**, a No. 5799 Magnet (obtain separately) shall be mounted adjacent to the alignment marks on the case and the mounting plate’s alignment strip (see Diagram 2).

### Wiring Connections

With the battery still not inserted, connect the contact loop (if used) to the unit's loop terminals (see Figure 2). *The contact loop must use closed circuit devices.*

**Note:** *If the contact loop is not to be used, no connection is needed across its terminals.*

### BATTERY INSTALLATION/REPLACEMENT

1. **Remove the transmitter's cover** (if it is not already off) as described in *Mounting Step 1*.
2. **Observe correct polarity and insert the battery** provided into the battery holder (see Diagram 2). *Take care not to bend the antenna.*

#### FCC ID: CFS8DL5816AP

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference.  
(2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** Replace battery *only* with:

Panasonic CR123A, Duracell DL123A,  
Sanyo CR123A, Varta CR123A, or  
ADEMCO 466.

3. **To replace the cover**, engage the hooks along one edge and snap shut.

### SPECIFICATIONS

**Transmission Frequency:** 315MHz

**Dimensions:** 1-9/16"W x 3-1/16"H x 1-3/16"D  
(40mm x 78mm x 30mm)

**Battery:** 3V Lithium (see Note in step 2 of *BATTERY INSTALLATION/REPLACEMENT*)

**BATTERY CAUTION: Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 212 F (100 C) or incinerate. Dispose of used batteries promptly. Keep away from children.**

### TO THE INSTALLER

Regular maintenance and inspection (at least annually) by the installer and frequent testing by the user are vital to continuous satisfactory operation of any alarm system.

The installer should assume the responsibility of developing and offering a regular maintenance program to the user, as well as acquainting the user with the proper operation and limitations of the alarm system and its component parts. Recommendations must be included for a specific program of frequent testing (at least weekly) to insure the system's operation at all times.

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE CONTROL WITH WHICH THIS DEVICE IS USED, FOR LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

### LIMITED WARRANTY

Honeywell International Inc., acting through its Security & Custom Electronics business ("Seller") 165 Eileen Way, Syosset, New York 11791, warrants its product(s) to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 24 months from the date stamp control on the product(s) or, for product(s) not having a manufacturer's date stamp, for 12 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product(s) which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product(s) is altered or improperly repaired or serviced by anyone other than Honeywell factory service. For warranty service, return product(s) transportation prepaid, to Honeywell Factory Service, 165 Eileen Way, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

Seller does not represent that the product(s) it sells may not be compromised or circumvented; that the product(s) will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product(s) will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery, fire, or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THAT THE PRODUCT(S) FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT(S), WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER.

This warranty replaces any previous warranties and is the only warranty made by Seller on this product(s). No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorize.

**Honeywell**

165 Eileen Way, Syosset, New York 11791  
Copyright © 2004 Honeywell International, Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)



N6482-4V1 Rev.A 4/05

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>