


CASIO®

Module No. 5062

ENGLISH

- Be sure to keep all user documentation handy for future reference.
- Your watch may differ somewhat from the one shown in the illustration.

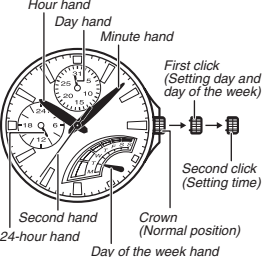

To set the time

1. When the second hand is at 12 o'clock, pull out the crown to the second click to stop it.
2. Set the hands by rotating the crown. Move the minute hand four or five minutes past the setting you want, and then back them up to the setting.
 - Carefully set the time, making sure to distinguish between AM and PM.
3. Push the crown back in on a time signal to resume timekeeping.

To set the day and day of the week

- Avoid setting the day and day of the week between 9:00 p.m. and 3:00 a.m. The day and day of the week may not change in the following day if you do.

1. Pull out the crown to the first click.
2. Set the day by rotating the crown counterclockwise.
3. Set the day of the week by rotating the crown clockwise.
 - Rotate the crown as slowly as possible and make sure that the day of the week hand stops exactly on the day of the week marker you want to set.
4. Push the crown back in to its normal position.



- For watch with the elapsed time bezel
Rotate the elapsed time bezel to align the ▽ mark with the minute hand.
After certain amount of time elapsed, read the graduation on the elapsed time bezel which the minute hand points to. The elapsed time is indicated.



- Some water resistant models are equipped with a screw lock crown.
- With such models, you must unscrew the crown in the direction noted in the illustration to loosen it before you can pull it out. Do not pull too forcibly on such crowns.
- Also note that such watches are not water resistant while their crowns are loosened. Be sure to screw the crowns back in as far as they will go after making any setting.



- Tightening the band too tightly can cause you to sweat and make it hard for air to pass under the band, which can lead to skin irritation. Do not fasten the band too tightly. There should be enough room between the band and your wrist so you can insert your finger.
- Deterioration, rust, or corrosion of the band can cause it to break, which may result in the watch falling off your wrist and becoming lost. Be sure to take good care of the band and keep it clean. Should you notice any breakage, discoloration, looseness or other problem with the band, immediately contact your original retailer or an authorized CASIO service center to have it checked, repaired, or replaced. Note that you will be charged for any repair or replacement of the band.
- To clean the watch and band, use a dry soft cloth or a soft cloth moistened in a solution of water and a mild neutral detergent. Never use volatile agents (such as benzene, thinner, spray cleaners, etc.).
- Avoid allowing the watch to come into direct contact with hair liquids, colognes, sun block creams, and other toiletries, which can cause deterioration of the plastic parts of the watch. Whenever the watch comes into contact with these or other toiletries, wipe it off immediately with a dry, soft cloth.
- Store your watch in a dry place when you are not using it.
- Avoid exposing the watch to gasoline, cleaning solvents, aerosol sprays, adhesive agents, paint, etc. Chemical reactions with such agents will destroy seals, case and finish.
- Painted finishes can be discolored and worn by very strong pressure, long-term rubbing, scraping, friction, etc.
- Some models feature silk screen printing on their bands. Be careful when cleaning such bands so that you do not rub on the printed designs too hard.
- Always keep batteries out of the reach of small children. If a battery is accidentally swallowed, contact your physician immediately.
- Keep this manual and any other documentation that comes with the watch in a safe place for future reference.

For watches equipped with resin bands...

- You may notice a whitish powdery substance on the band. This substance will not harm your skin or clothing, and can be removed by simply wiping it with a cloth.
- Leaving the resin band wet with sweat or water, or storing it in an area subjected to high humidity can cause the band to deteriorate, cut, or crack. To ensure long life for the resin band, wipe off dirt or water with a soft cloth as soon as possible.

For watches equipped with fluorescent bands and cases...

- Long-term exposure to direct sunlight can cause fluorescent coloring to fade.
- Long-term contact with moisture can cause fluorescent coloring to fade. Be sure to wipe all moisture from the surface of the watch as soon as possible.
- Long-term contact with any other surface while wet can cause discoloration of fluorescent colors. Be sure to keep moisture from fluorescent surfaces and avoid contact with other surfaces.
- Strongly rubbing a printed fluorescent surface with another surface can cause the color of the printing to transfer to the other surface.

CASIO COMPUTER CO., LTD. assumes no responsibility for any loss, or any claims by third parties that may arise through the use of this watch.

Specifications

Accuracy at normal temperature: ± 20 seconds a month

Display: 3 analog hands (hour, minutes, and seconds),
3 dials (24-hour, day, and day of the week)

Battery: One silver oxide battery (Type: SR621SW)
Approximately 3 years on type SR621SW

User Maintenance

Battery: The battery is fitted at the time of manufacture and should be replaced at the first sign of low power (no light or slow timing) by your dealer or CASIO distributor.

Water Resistance: Watches are ranked I through V according to water resistance. Check the ranking of your watch in the following chart to determine proper use.

*Rank	Case Designation	Splashes, rain, etc.	Swimming, car-washing, etc.	Snorkeling, diving, etc.	Scuba diving
I	—	No	No	No	No
II	WATER RESISTANT	Yes	No	No	No
III	50M WATER RESISTANT	Yes	Yes	No	No
IV	100M WATER RESISTANT	Yes	Yes	Yes	No
V	200M WATER RESISTANT 300M WATER RESISTANT	Yes	Yes	Yes	Yes

*Notes

- Not water-resistant. Avoid all moisture.
- Do not pull out the crown while the watch is wet.
- Do not operate buttons or pull out the crown while the watch is underwater.
- Do not pull out the crown while the watch is underwater. If the watch is exposed to salt water, wash thoroughly and wipe dry.
- Usable while scuba diving (except at depths that require helium-oxygen gas). Do not pull out the crown while the watch is underwater.

- Some water-resistant watches feature leather bands, be sure to dry the band thoroughly if it becomes wet. Prolonged wearing of the watch with a wet band may reduce the life of the band and cause it to discolor. It may also cause a skin reaction.

Care of your watch

- Never try to open the case or remove its back cover.
- Exposure to very strong electrostatic charge can cause the watch to display the wrong time and can even damage watch components.
- Electrostatic charge can also cause lines, which resemble circuitry, to appear momentarily on the display. This does not have any effect on the function of the watch.
- You should have the rubber seal that keeps out water and dust replaced every 2 to 3 years.
- Should moisture appear inside the watch, have it checked immediately by your dealer or a CASIO distributor.
- Avoid exposing the watch to temperature extremes.
- Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>