


DST Setting / Module : 5565

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>

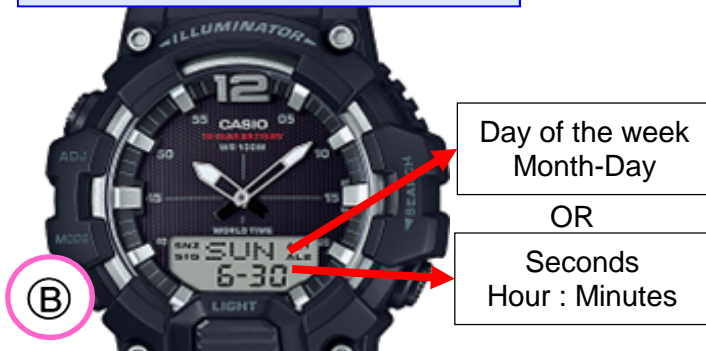

To return to the Timekeeping Mode,
hold down (B) for about one second.

<How to change the digital time.>

1.



In the Timekeeping Mode,
hold down (A) until the
seconds start to flash.

2.



Press (B) once to display
the DST setting screen.

3.



Press (D) to toggle ON and OFF.

4.



Press (A) to exit the setting screen.


<How to change the analog time.>

1.



In the Timekeeping Mode, press (B) six times to enter the Hand Setting Mode.

2.

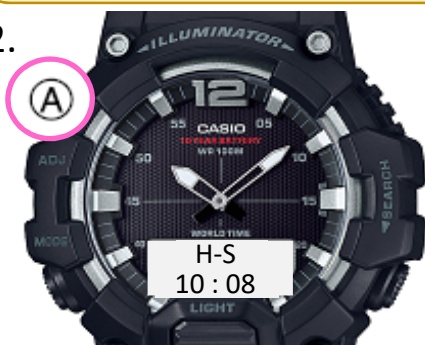

Hold down (A) until the current digital time starts to flash.

3.



Press (D) to advance the analog time setting by 20 seconds.

*Holding down (D) button advances the analog time setting at high speed.

4.



Press (A) to exit the setting screen.

5.



Press (B) to return to the Timekeeping Mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>