

Kodak EasyShare CX6200 digital camera



User's Guide

www.kodak.com

For interactive tutorials, www.kodak.com/go/howto




Eastman Kodak Company
343 State Street
Rochester, New York 14650
© Eastman Kodak Company, 2003

All screen images are simulated.

Kodak, EasyShare, and Max are trademarks of Eastman Kodak Company.


P/N 6B8476


Front View

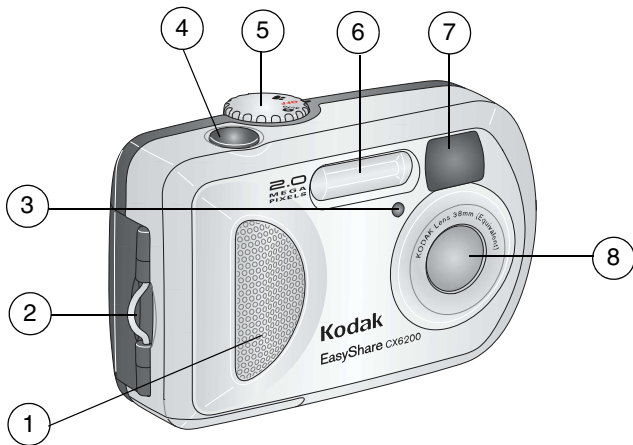


- | | | | |
|---|------------------------|---|-----------------|
| 1 | Grip | 5 | Mode dial |
| 2 | Wrist strap post | 6 | Flash unit |
| 3 | Self Timer/Video light | 7 | Viewfinder lens |
| 4 | Shutter button | 8 | Lens |


Back View

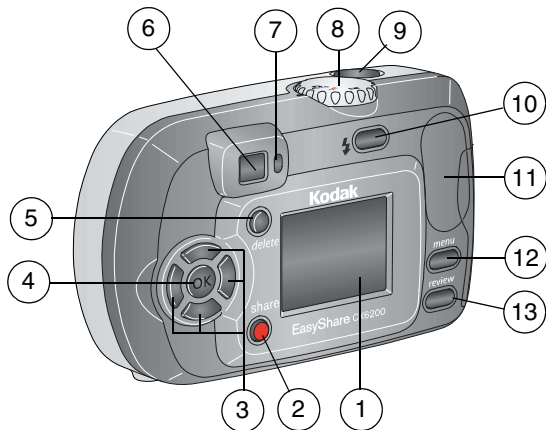


- | | | | |
|---|--|----|---------------------|
| 1 | Camera screen
(LCD, liquid crystal display) | 7 | Ready light |
| 2 | Share button (page 47) | 8 | Mode dial |
| 3 | Controller buttons  | 9 | Shutter button |
| 4 | OK button | 10 | Flash/Status button |
| 5 | Delete button | 11 | Thumb rest |
| 6 | Viewfinder | 12 | Menu button |
| | | 13 | Review button |

Side View

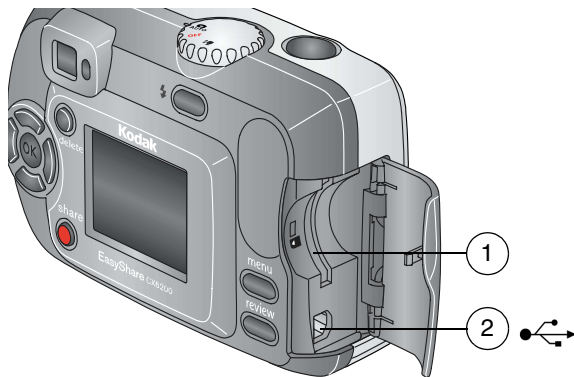

- 1 Slot for **optional** SD/MMC card
- 2 USB Port 

Top and Bottom Views

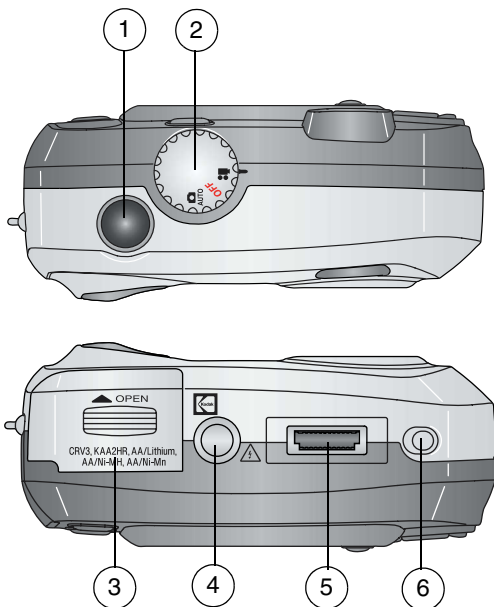

1 Shutter button

2 Mode dial

3 Battery door

4 Tripod socket/locator, dock 6000

5 Dock connector

6 Locator, dock 6000

Table of Contents

1	Getting Started	1
	Install Software First.....	1
	Need This User Guide in Larger Print?	1
	What Can I Do With My Camera?.....	2
	What Can I Do With My Pictures and Videos?	2
	Package Contents.....	3
	Loading the Batteries	4
	Attaching the Wrist Strap	5
	Turning the Camera On and Off	6
	Using the OK and Controller Buttons	6
	Setting the Date and Time	8
	Checking Camera Status.....	9
	Camera Screen Icons.....	10
	Inserting an SD/MMC Card.....	11
	Choosing Internal Memory or SD/MMC Card.....	12
	Important Battery Information.....	14
2	Taking Pictures	17
	Take a Picture	17
	Liveview—Framing with the Camera Screen.....	18
	Quickview—Reviewing the Picture Just Taken	19
	Using the Digital Zoom	20
	Using the Flash.....	21
	Changing Picture-Taking Options	22

Putting Yourself in the Picture.....	23
Setting Exposure Compensation	24
Setting Picture Quality.....	25
Setting Color Mode	26
Pre-tagging for Album Names	27
Placing the Date on Pictures	28
3 Taking Videos	29
Taking a Video.....	29
Quickview—Reviewing the Video Just Taken.....	30
Changing Optional Video Settings	30
Pre-tagging for Album Names	31
Putting Yourself in the Video	32
4 Reviewing Pictures and Videos	35
Viewing Single Pictures and Videos	35
Viewing Multiple Pictures and Videos.....	36
Playing a Video	36
Deleting Pictures and Videos	37
Changing Optional Review Settings.....	38
Magnifying Pictures	38
Protecting Pictures and Videos From Deletion	39
Tagging Pictures/Videos for Albums.....	40
Running a Slide Show.....	41
Displaying Pictures/Videos on a Television.....	43
Copying Pictures and Videos	44
Displaying Video Date	45
Viewing Picture/Video Information	45

5	Sharing Pictures and Videos	47
	When Can I Tag My Pictures and Videos?.....	47
	Tagging Pictures for Printing.....	48
	Tagging Pictures and Videos for Emailing.....	49
	Tagging Pictures and Videos as Favorites	50
	Need Help?.....	50
6	Customizing Your Camera Settings	51
	To Access Setup Mode/Menus	51
	Setup Menu.....	51
	Changing the Default Print Quantity	52
	Turning Off Quickview	52
	Turning On Liveview.....	53
	Setting Video Out.....	53
	Selecting a Language.....	54
	Formatting Internal Memory or SD/MMC Card	55
	Viewing Camera Information.....	55
7	Installing the Software	57
	Windows System Requirements.....	57
	Mac OS X System Requirements	58
	Mac OS 8.6 and 9.x System Requirements	58
	Install the Software	59

8	Connecting Camera to Computer	61
	Transferring Pictures With the USB Cable	61
	Printing Pictures From Your Computer	62
	Printing From an Optional SD/MMC Card.....	62
	Print With or Without a Computer.....	62
9	Using the Camera Dock 6000	63
	Camera Dock 6000 Package Contents	63
	Installing the Custom Camera Insert.....	64
	Connecting the Camera Dock 6000.....	65
	Installing the Rechargeable Battery.....	66
	Docking the Camera	67
	Charging the Battery	68
	Transferring Pictures With the Dock	69
	Reviewing Pictures and Videos.....	70
	Camera Dock 6000 Specifications	70
	Troubleshooting—Camera Dock 6000	71
	Earlier Cameras and Docks	71
10	Troubleshooting	73
	Camera Problems.....	73
	Camera/Computer Communications	77
	SD/MMC Cards and Internal Memory	78
	Camera Screen Messages	79
	Camera Ready Light Status	84

11	Getting Help	87
	Helpful Web Links	87
	Help in this Manual	87
	Software Help.....	87
	Telephone Customer Support	88
12	Appendix	91
	Camera Specifications.....	91
	Original Factory Settings.....	93
	Upgrading Your Software and Firmware	93
	Tips, Safety, Maintenance.....	94
	Storage Capacities.....	95
	Locating Pictures and Videos on a Card.....	96
	Picture Naming Conventions	96
	Power-Saving Features.....	97
	FCC Compliance and Advisory.....	98

1 Getting Started

Install Software First


Install the software from the Kodak EasyShare software CD **before** connecting the camera (or camera dock) to the computer. Failure to do so may cause the software to load incorrectly.


See the Start Here! guide or [Installing the Software, page 57](#).

Need This User Guide in Larger Print?


- 1 Go to www.kodak.com/go/cx6200support.
- 2 Navigate to the Manuals section.
- 3 Click *View as PDF* to open the User's Guide.
- 4 On a Windows OS-based computer or Mac OS 8.6 or 9.x:
 - From the File menu, select Print.
 - In the Print window, select Fit to Page.On Mac OS X:
 - From the File menu, select Page Setup.
 - Change Scale to 200%.
- 5 Print as usual.


What Can I Do With My Camera?

Capture Still Pictures —Use Auto mode to enjoy point-and-shoot operation.

Capture Videos —Capture videos as QuickTime movies.

Review —Display, protect, and delete pictures and videos; tag for albums.

Share —Share pictures (print, email, save as Favorites) and videos (email, save as Favorites).

Set Up Menu —Customize your camera functions.

What Can I Do With My Pictures and Videos?

Install the software from the Kodak EasyShare software CD, then:

Transfer—Transfer pictures and videos to your computer.

Share—Print pictures, order prints online, email pictures and videos.


Print—(see [page 62](#)) Print pictures directly to your home printer or Kodak EasyShare printer dock 6000. Order prints online from Ofoto, Inc. (www.ofoto.com), or purchase an optional Kodak secure digital (SD) card or a Kodak multimedia card (MMC) and:

- Automatically print to any printer with an SD/MMC slot
 - Make prints at an SD/MMC-capable Kodak picture maker
www.kodak.com/go/picturemaker
 - Take the card to your local photo retailer for professional printing
- Organize**—Use albums to organize and retrieve pictures on a computer.

Edit—Add special effects to your pictures, make a custom slide show, fix red-eye, crop, rotate, and much more.

For details, click the Help button in the Kodak EasyShare software. Some Macintosh operating systems may support limited Kodak EasyShare software features.

Package Contents

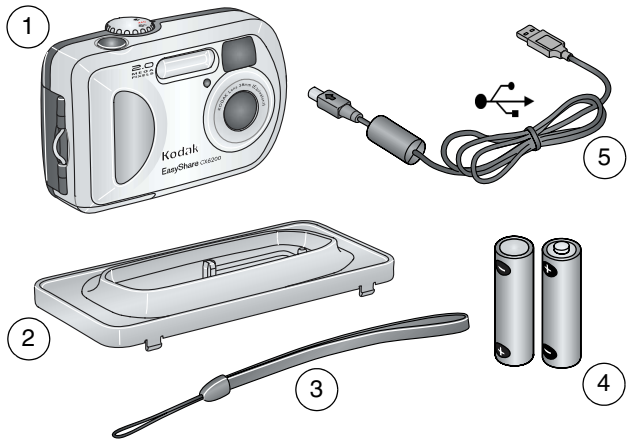

1 Camera

4 Kodak Max digital camera batteries
(2 AA, non-rechargeable)

2 Custom dock insert (for camera dock 6000 or printer dock 6000)

5 USB cable

3 Wrist strap

Not shown: User's Guide, Quick Start Guide, Kodak EasyShare software CD.
(In some countries, the User's Guide is provided on a CD. Contents may change without notice.)


Loading the Batteries

Two AA digital camera batteries (non-rechargeable) are included with your camera.

- 1 Turn off the camera.
- 2 On the bottom of the camera, slide the battery door and lift to open.



AA

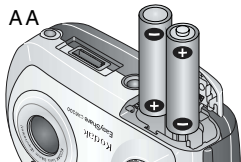


- 3 Insert the batteries, as shown.
- 4 Close the battery door.

IMPORTANT BATTERY INFORMATION

For acceptable battery life and to make sure your camera operates dependably, do not use alkaline batteries.

CRV3
(optional)

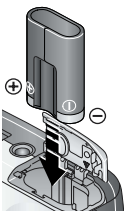


If you purchased an optional Kodak CRV3 lithium battery, insert it as shown.


If you purchased the Kodak EasyShare camera dock 6000 or printer dock 6000, [see page 66](#) for details on installing the included Kodak EasyShare Ni-MH rechargeable battery.

See [page 14](#) for the other types of batteries you can use in your camera.

Attaching the Wrist Strap

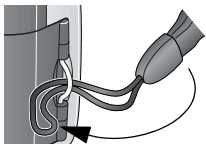


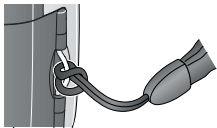

- 1 Thread the short loop of the wrist strap through the wrist strap post.
- 2 Thread the long loop through the short loop.




- 3 Pull until secure.

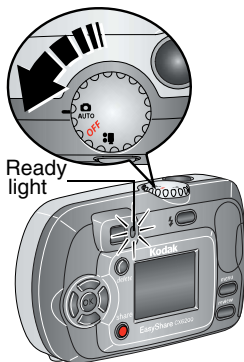Turning the Camera On and Off



- 1 Rotate the Mode dial to:
 for Still capture mode
 for Video mode


The ready light blinks green while the camera performs a self-check, then glows green when the camera is ready to take pictures (or videos, if the mode dial is set to ).





In Still and Video modes, status icons appear on the camera screen. See [Checking Camera Status, page 9](#).

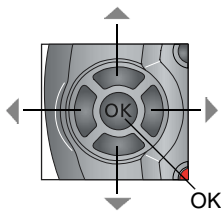

- 2 To turn off the camera, rotate the Mode dial to the OFF position.

The camera completes operations that are in process.

Using the OK and Controller Buttons



Navigating—use the / and / controller buttons to scroll through your pictures and menus.

Digital Zoom—use / to digitally zoom in or out when taking pictures. See [page 20](#).

OK—use OK to make a selection.

Adjusting the Display

If you want to	Then do this
Turn the camera screen on (enter Liveview) or off.	Press the OK button.
Change the Liveview setting so that it is on whenever the camera is on.	See Turning On Liveview, page 53 .
Redisplay the status icons.	Press ▲.
Turn off the camera.	Turn the Mode dial to Off. <i>The camera completes operations that are in process.</i>

Setting the Date and Time

Setting the Date & Time, First Time

The *Date & Time have been reset* message appears the first time you turn on the camera or if the battery is removed for an extended time.



OK

- 1 SET DATE & TIME is highlighted. Press the OK button.

The Date & Time screen appears. The date format is YYYY/MM/DD. The time is displayed in a 24-hour format.

Or, select CANCEL then press the OK button to set the date and time at a later time.

- 2 Press $\blacktriangle/\blacktriangledown$ to adjust the date and time. Press $\blacktriangleleft/\blacktriangleright$ to advance to the next setting.
- 3 When finished, press the OK button.
- 4 Press the Menu button to exit the menu.

The setting remains until you change it.

NOTE: Depending on your computer operating system, Kodak EasyShare software may allow your computer to automatically update the camera clock when you connect the camera. See the Kodak EasyShare software Help for details.

Setting the Date & Time, Anytime



OK


Menu

- 1 Turn on the camera. Press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu \equiv , then press the OK button.
- 3 Highlight the Date & Time icon, then press the OK button.
- 4 Go to Step 2 of [Setting the Date & Time, First Time](#).

Checking Camera Status

The icons that appear on the camera screen indicate the active camera and picture settings. See [page 10](#) for a list of the icons.

To check the current camera settings:

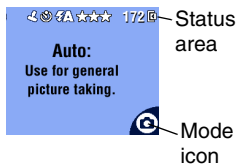

- Turn the Mode dial to Auto

The status screen appears.

Press to redisplay the status information at any time.




















- Press the Flash/Status button.

The current camera status icons are displayed in the bottom half of the Flash/Status screen.

Camera Screen Icons

These icons appear on your camera screen when the settings are active.

Capture Modes (also on Mode dial)	Camera/Picture Status		
 Video  Auto	Share Icons  Print  Email  Favorite	Quality Icons ★★★ Best ★★★ Best (3:2) ★★ Better ★ Good	Protect 
	 Self Timer	Storage/Picture location  Internal memory  Memory Card	
	 Date stamp	Battery power  Low  Exhausted	
	 Flash*	Digital zoom 	
	172 Pictures remaining	Exposure Compensation 	
	 Album		
	 Color mode		

*For all flash icons, see [page 21](#).

Inserting an SD/MMC Card


Your camera has 8 MB of internal memory. However, optional SD/MMC cards provide removable, reusable storage for pictures and videos.



CAUTION:

The card should only be inserted as explained below. If inserted incorrectly, the door won't close, and forcing it may damage the camera or card.

Do not insert or remove a card when the green ready light is blinking; doing so may damage your pictures, card, or camera.

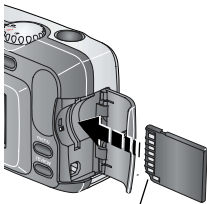

Notched
corner

To insert an SD/MMC card:


- 1 Turn off the camera.
- 2 Open the card door.
- 3 Orient the card as shown.
- 4 Push the card into the slot to seat the connector.
- 5 Close the door.


To remove the card, pull it out.

See [page 95](#) for storage capacities. Purchase SD/MMC cards at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.

Choosing Internal Memory or SD/MMC Card

The camera offers two options for storing pictures and videos:

Internal Memory —Store pictures and videos in 8 MB internal memory.

SD/MMC Card —Store pictures and videos on a card. The number of pictures or length of videos depends on the size of the card.

See [page 95](#) for storage capacities. Purchase SD/MMC cards at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.

Managing Your Storage Location Setting

- 1 Turn on the camera.
- 2 Press the Menu button.
- 3 Press  to highlight the Image Storage icon , then press the OK button.



- 4 Highlight an option, then press the OK button:

Auto (default)—the camera uses the card if one is in the camera. If not, the camera uses internal memory.


Internal—the camera always uses internal memory, even if a card is installed.





- 5 Highlight Continue, then press the OK button.
The setting remains until you change it and applies to all camera functions.
- 6 Press the Menu button to exit the menu.

Checking Your Storage Setting

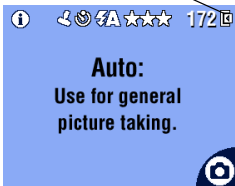In **Still and Video modes**, the storage location icon that appears in the status area indicates the camera's storage location. To check the location, either:

Storage location



- Turn the Mode dial to Auto , or
- In any capture mode, press .
 -  —Memory Card
 -  —Internal Memory



Checking a Picture or Video's Location

In **Review mode**, the storage location icon indicates the location of the picture or video.

Picture/video location



Press the Review button.


-  —Picture or video is stored on a card
-  —Picture or video is stored in internal memory

Important Battery Information

Choose the replacement battery that fits your needs—and get the best performance.

Kodak Battery Replacement Types/Battery Life

Your camera can use the following types of batteries. Actual battery life may vary based on usage.

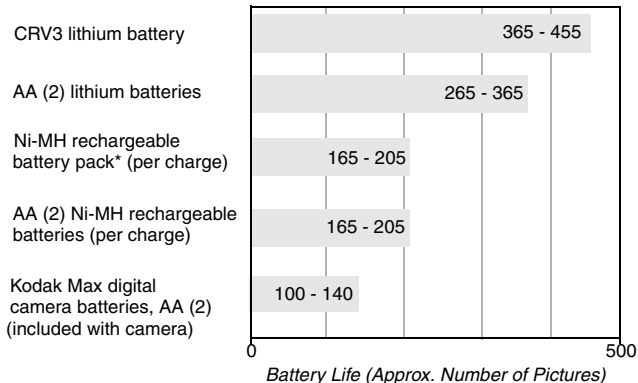

* Included with the Kodak EasyShare camera dock 6000 and printer dock 6000

We do not recommend or support alkaline batteries. For acceptable battery life, and to make sure your camera operates dependably, use the replacement batteries listed above.

For information on batteries, visit

<http://www.kodak.com/global/en/service/batteries/batteryUsage.jhtml>

Extending Battery Life

- Limit the following activities that quickly deplete battery power:
 - Reviewing your pictures on the camera screen (see [page 35](#))
 - Using Liveview (see [page 18](#))
 - Using Quickview (see [page 19](#) and [page 30](#)).
 - Excessive use of the flash
- Purchase an optional Kodak EasyShare camera dock 6000 (see [page 63](#)). The camera dock 6000 powers your camera, transfers pictures, and is also a battery charger for its included Kodak EasyShare Ni-MH rechargeable battery pack.
- Purchase an optional Kodak EasyShare printer dock 6000 (see [page 62](#)). The printer dock 6000 powers your camera, makes 4 x 6 prints with or without a computer, transfers pictures, and is also a battery charger for its included Kodak EasyShare Ni-MH rechargeable battery pack.
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera.
- Battery performance is reduced at temperatures below 41° F (5° C). Carry spare batteries when using your camera in cold weather, and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.


Battery Safety and Handling

- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- For rechargeable battery disposal information, visit the Rechargeable Battery Recycling Corporation Web site at www.rbrcc.com.


2 Taking Pictures

The camera is ready to take pictures when you turn it on—even if you are in Review, Share, or Setup. (In Video mode, the camera captures video.) Before you take a picture, make sure the storage location is set the way you want it (see [page 12](#)).

Take a Picture

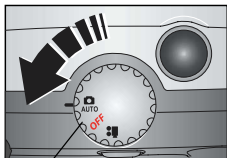

Mode dial

- 1 Turn the Mode dial to Auto .

The camera screen displays the mode name and description.


- 2 Use the viewfinder or camera screen to frame your subject. (Press the OK button to turn on Liveview. See [page 18](#).)

IMPORTANT: *Liveview significantly reduces battery life.*

- 3 Press the Shutter button to take the picture.

When the ready light blinks green, the picture is being saved; you can still take pictures. If the ready light is red, wait until it turns green.

See [Changing Picture-Taking Options, page 22](#).

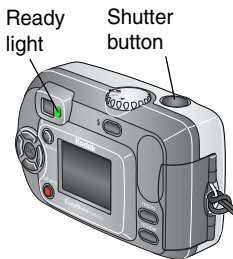


Liveview—Framing with the Camera Screen

When you turn on Liveview, the camera screen displays a live image of what the lens sees. Use the camera screen to frame your subject.

IMPORTANT: *Liveview significantly reduces battery life.*



OK

- 1 Turn the Mode dial to Auto .
- 2 Press the OK button to turn on Liveview.
- 3 Frame your subject in the camera screen.
- 4 Press the Shutter button to take the picture.
- 5 To turn off Liveview, press the OK button.




NOTE: If Picture Quality is set to Best (3:2) (see [page 10](#)), the Liveview image is displayed at a 3:2 aspect ratio, as shown, with a black bar at the top of the screen.

To change the Liveview setting so that it is on whenever the camera is on, see [page 53](#).

Quickview—Reviewing the Picture Just Taken

After you take a picture, the camera screen displays a Quickview of that picture for approximately 5 seconds. While the picture is displayed, you can:








- **Review it:** If you take no action, the picture is saved.
- **Share it:** Press the Share button to tag the picture for print, email, or as a Favorite (see [page 49](#)).
- **Delete it:** Press the Delete button while the picture and  are displayed. Follow the prompts to delete the picture.
To save battery power, you can turn off the Quickview feature (see [page 52](#)).

Using the Digital Zoom

Use Digital Zoom to get up to 3X closer to your subject. You must turn on Liveview to activate Digital Zoom.

IMPORTANT: *You may notice a decrease in printed image quality when using Digital Zoom.*


- 1 Press the OK button to turn on Liveview.
- 2 Press  to activate the Digital Zoom.
The LCD displays the zoomed image, the zoom value, and the Digital Zoom icon .
- 3 Use   to decrease or increase the amount of Digital Zoom.
To turn off Digital Zoom, from the lowest setting, press .
- 4 Use the LCD to frame your subject. You must use Liveview to take the picture because Digital Zoom is only displayed through the LCD and not the viewfinder.
- 5 Press the Shutter button to take the picture.


NOTE: Digital Zoom is turned off when you press the OK button again, turn off the camera, or when the camera enters Auto power-off.

Using the Flash

Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows. You can only change the flash setting in Auto mode. Use the flash at distances of 1.6-7.9 ft (0.5-2.4 m).

Setting the Flash Mode

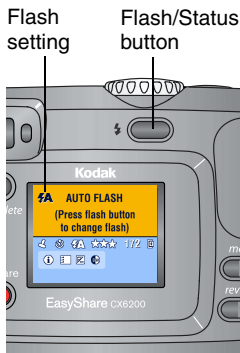

Press the  button repeatedly to scroll through the flash options.

The active flash icon is displayed in the camera screen status area (page 9).



Auto Flash—flash fires when the lighting conditions require it. When the picture is taken, the camera flashes twice, once to set the exposure and once to take the picture.



Off—flash never fires.



Fill—flash fires every time you take a picture, regardless of the lighting conditions.



Red-eye—flash fires so the subject's eyes become accustomed to the flash, then fires again when the picture is taken.

NOTE:

- Off and Fill flash options revert to Auto when the camera is turned off.
- When the picture is taken in Auto and Fill modes, the camera flashes twice, once to set the exposure and once to take the picture. When the picture is taken in Red-eye mode, the camera flashes three times, once to set the exposure, once to reduce red-eye, and once to take the picture.

Changing Picture-Taking Options

Use the Capture menus to change picture-taking options. If you are in Review, Share, or Setup modes you must return to Capture mode before you can access the Capture menus.









To Return to Capture From Another Mode

To return to Capture from:

- Review mode, press the Review button.
- Share mode, press the Share button.
- Setup mode (from Capture menu), press the Menu button.


To Access the Capture Menu





- 1 In Capture mode, press the Menu button.
- 2 Press the Menu button again to turn off the menu.

Capture Menus			
	Self Timer (page 23)		Color Mode (page 26)
	Image Storage (page 12)		Set Album (Still) (page 27)
	Exposure Compensation (page 24)		Date Stamp (page 28)
	Picture Quality (page 25)		Setup Menu (page 51)

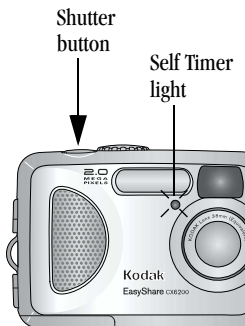Putting Yourself in the Picture

The Self Timer creates a 10-second delay between the time you press the Shutter button and the time the picture is taken.



- 1 In Auto mode , press the Menu button.
- 2 Press / to highlight the Self Timer icon , then press the OK button.
- 3 Highlight On, then press the OK button.
- 4 Press the Menu button to turn off the menu screen.

The Self Timer icon  appears in the status area.

- 5 Place the camera on a flat surface or use a tripod.
- 6 Compose the scene.

Press the Shutter button, then move so that you are in the scene.




The Self Timer light blinks slowly for 8 seconds (then quickly for 2 seconds) before the picture is taken.

The Self Timer turns off after you take the picture or turn off the camera.


Setting Exposure Compensation

Use Exposure Compensation to control how much light enters the camera. This setting is useful for taking pictures in high-contrast scenes, or for retaking pictures when you are not satisfied with the brightness.

Adjust the exposure by plus or minus 2 steps in 1/2-step increments.

- 1 In Auto mode , press the Menu button.
- 2 Press  to highlight the Exposure Compensation icon , then press the OK button.




- 3 Press  to select the Exposure Compensation setting.
 - If pictures are too light, decrease the value.
 - If pictures are too dark, increase the value.
- 4 Press the OK button to accept the change.
- 5 Press the Menu button to exit the menu.
- 6 Use the camera viewfinder or screen to frame your subject.
- 7 Press the Shutter button to take the picture.




This setting remains until you turn off the camera.

Setting Picture Quality


Use the Quality setting to select a picture resolution.


1 In Auto mode , press the Menu button.





2 Press / to highlight the Picture Quality icon , then press the OK button.


3 Highlight an option, then press the OK button:


Best  (2.0 MP)—for printing up to 8 x 10 in. (20 x 25 cm); pictures are highest resolution and largest file size.


 *appears in the status area.*


Best (3:2)  (1.8 MP)—for printing up to 8 x 10 in. (20 x 25 cm); ideal for printing to the Kodak EasyShare printer dock 6000 and other printing solutions (see [page 62](#)); optimal setting for 4 x 6 in. (10 x 15 cm) prints.

 *appears in the status area.*

Better  (1.0 MP)—for printing up to 5 x 7 in. (12.7 x 17.8 cm); pictures are medium resolution with smaller file size.

 *appears in the status area.*

Good  (0.5 MP)—for emailing, Internet, or screen display; pictures are lowest resolution and smallest file size.





 *appears in the status area.*


4 Press the Menu button to exit the menu.

This setting remains until you change it.

Setting Color Mode

Use Color Mode to select Black and White, Color, or Sepia.

- 1 In Auto mode , press the Menu button.
- 2 Press / to highlight the Color Mode icon , then press the OK button.

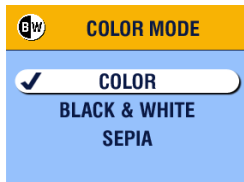

- 3 Highlight an option, then press the OK button:

Color (default)—for color pictures.

Black & White—for black and white pictures.

Sepia—for pictures with a reddish-brown, antique look.

- 4 Press the Menu button to exit the menu.

This setting remains until you turn off the camera.


Pre-tagging for Album Names





Use the Set Album (Still) feature to pre-select album names before you take pictures. Then, all the pictures you take are tagged with those album names.

First—On Your Computer

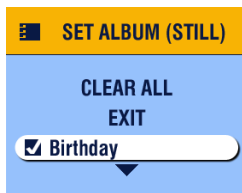Use Kodak EasyShare software, V 3.0 or higher, to create album names on your computer, then copy up to 32 album names to the camera's internal memory. See Kodak EasyShare software Help for details.

Second—On Your Camera



- 1 In Auto mode , press the Menu button.
- 2 Press / to highlight the Set Album (Still) icon , then press the OK button.
- 3 Highlight an album name, then press the OK button. Repeat to add pictures to more than one album.

Selected albums are noted with a check mark.



- 4 To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.
- 5 Highlight Exit, then press the OK button.

Your selections are saved. If you turn on Liveview, your album selection is displayed on the screen. A plus (+) after the album name means more than one album is selected.
- 6 Press the Menu button to exit the menu.





This setting remains until you change it.


Third—Transfer to Your Computer

When you transfer the tagged pictures to your computer, the Kodak EasyShare software opens and categorizes your pictures in the appropriate album folder. See the Kodak EasyShare software Help for details.

Placing the Date on Pictures

Use the Date Stamp setting to imprint the date on your pictures.


- 1 Make sure the camera clock is set to the correct date (page 8).
- 2 In Auto mode , press the Menu button.
- 3 Press / to highlight the Date Stamp icon , then press the OK button.

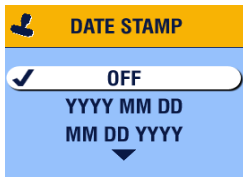

- 4 Highlight an option, then press the OK button.
- 5 Press the Menu button to exit the menu.

The current date is printed in the bottom right corner of new pictures. This setting remains until you change it. The date stamp becomes a permanent part of the image.


3 Taking Videos

Use Video mode  to take videos and to customize video-taking settings. Before you take a video, make sure your picture storage location is set the way you want it (see [page 12](#)).

NOTE: Flash is not available in Video mode. Also, the Kodak EasyShare CX6200 digital camera cannot record audio.

Taking a Video



- 1 Turn the Mode dial to Video .
A live image, camera status, and the recording time available appear on the camera screen. (The maximum recording time is 30 seconds).
- 2 Use the viewfinder or camera screen to frame your subject.
- 3 To begin recording, press the Shutter button and release within 2 seconds.
The Ready light blinks green, REC appears on the camera screen, and the Self Timer/Video light stays on.

- 4 To stop recording, press the Shutter button again.
Recording stops if storage is full. See [page 95](#) for storage capacities.


NOTE: If you prefer, press the Shutter button **and hold it** for more than 2 seconds to begin recording. To stop recording, release the Shutter button.

Quickview—Reviewing the Video Just Taken

After you take a video, the camera processes it, then displays the first frame of the video for approximately 5 seconds. While the frame is displayed, you can:








OK

- **Play it:** Press the OK button. Press the OK button again to pause the video.
- **Share it:** Press the Share button to tag the video for email or as a Favorite (see [page 50](#)).
- **Delete it:** Press the Delete button while the video and  are displayed.

You can turn off the Quickview feature (see [page 52](#)). When Quickview is turned off, the video is not displayed on the camera screen after you take it.

Changing Optional Video Settings

In Video  mode, press the Menu button to access optional video-taking settings.

	Self Timer (page 32)
	Image Storage (page 12)
	Set Album (Video) (page 31)
	Setup Menu (page 51)





Pre-tagging for Album Names


Use the Set Album (Video) feature to pre-select album names before you take videos. Then, all the videos you take are tagged with those album names.

First—On Your Computer

Use Kodak EasyShare software, V 3.0 or higher, to create album names on your computer, then copy up to 32 album names to the camera's internal memory. See Kodak EasyShare software Help for details.

Second—On Your Camera

- 1 In Video mode , press the Menu button.
- 2 Press / to highlight the Set Album (Video) icon , then press the OK button.

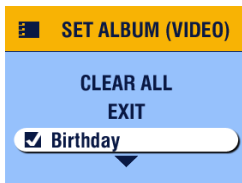

- 3 Highlight an album name, then press the OK button. Repeat to add videos to more than one album.

The album name appears with the picture. A plus (+) after the album name means the picture was added to more than one album.

- 4 To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.
- 5 Highlight Exit, then press the OK button.
Your selections are saved.
- 6 Press the Menu button to exit the menu.
This setting remains until you change it.






Third—Transfer to Your Computer

When you transfer the tagged videos to your computer, the Kodak EasyShare software opens and categorizes your videos in the appropriate album folder. See the Kodak EasyShare software Help for details.

Putting Yourself in the Video

The Self Timer creates a 10-second delay between the time you press the Shutter button and the time video recording begins.




- 1 In Video mode , press the Menu button.
- 2 Press / to highlight the Self Timer icon , then press the OK button.
The Self Timer icon  appears in the status area.
- 3 Highlight On, then press the OK button.
- 4 Highlight an option, then press the OK button:

Maximum—records until you stop recording or until storage is full. (The maximum recording time is 30 seconds.)

Seconds—records for the specified time or until storage is full.

NOTE: If the current storage location does not have adequate space, some video length options are not displayed. (See [page 95](#) for storage capacities.)

- 5 Place the camera on a flat surface or use a tripod.

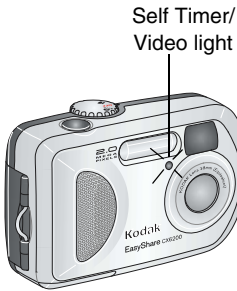

Self Timer/
Video light

6 Compose the scene.

Press the Shutter button, then move so that you are in the scene.

The Self Timer/Video light blinks slowly for 8 seconds (then quickly for 2 seconds) before the video begins recording. The light stays on while recording.

The Self Timer turns off after you record the video or turn off the camera.

4 Reviewing Pictures and Videos

Press the Review button to view and work with your pictures and videos. To save battery power, place your camera in the optional Kodak EasyShare camera dock 6000 or Kodak EasyShare printer dock 6000 to review pictures and videos (see [page 70](#)).

Remember, press the Shutter button to take a picture anytime—even in Review.

Viewing Single Pictures and Videos



- 1 Press the Review button.

The camera screen displays the last picture or video taken.

The icons displayed with each picture indicate the applied features. See [Camera Screen Icons, page 10](#).



- 2 Press \leftarrow/\rightarrow to scroll backward or forward through pictures and videos. For fast scrolling, press and hold \leftarrow/\rightarrow .
- 3 Press the OK button to magnify a picture (see [page 38](#)).
- 4 Press the Review button to exit Review.




NOTE: If Picture Quality is set to Best (3:2) (see [page 10](#)), the image is displayed at a 3:2 aspect ratio, as shown, with a black bar at the top of the screen.

Viewing Multiple Pictures and Videos



- 1 Press the Review button.
- 2 Press \blacktriangledown .

NOTE: You can also press the Menu button, highlight , then press the OK button.

Thumbnails of nine pictures and videos are displayed at once.

- 3 Press $\blacktriangle/\blacktriangledown$ to display the previous or next row of thumbnails.
- 4 Press $\blacktriangleleft/\blacktriangleright$ to scroll through the thumbnails one at a time.
The selected picture is highlighted in yellow.
- 5 Press the OK button to display a single view of the selected picture.


Playing a Video



- 1 Press the Review button.
- 2 Press $\blacktriangleleft/\blacktriangleright$ to locate a video (or highlight one in multiple view).
- 3 To play or pause a video, press the OK button.
- 4 To rewind a video, press \blacktriangleleft during playback.
- 5 To replay the video, press the OK button.
- 6 To go to the previous or next picture or video, press $\blacktriangleleft/\blacktriangleright$.

Deleting Pictures and Videos

- 1 Press the Review button.
- 2 Press ◀/▶ to locate a picture or video (or highlight one in multiple view), then press the Delete button.

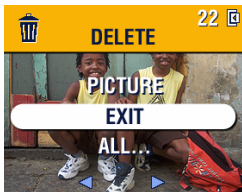

- 3 Press ▲/▼ to highlight an option, then press the OK button:

PICTURE or VIDEO—deletes the displayed picture or video.

EXIT—exits the Delete screen.










 

 
ALL—deletes all pictures and videos from your current storage location.

- 4 To delete other pictures and videos, press ◀/▶.
- 5 To exit delete, highlight EXIT then press the OK button; or just press the Delete button again.

NOTE: You cannot delete protected pictures and videos in this manner. Remove protection before deleting ([page 39](#)).

Changing Optional Review Settings

In Review mode, press the Menu button to access optional review settings.


	Magnify (pictures) (page 38)		Slide Show (page 41)
	Play (videos) (page 36)		Copy (page 44)
	Share (page 47)		Video Date Display (page 45)
	Image Storage (page 12)		Multi-up (page 36)
	Protect (page 39)		Picture/Video Information (page 45)
	Album (page 40)		Setup Menu (page 51)

Magnifying Pictures





1 Press the Review button, then locate a picture.



 
 
2 To magnify at 2X, press the OK button. To magnify at 4X, press the OK button again.

NOTE: You can also press the Menu button, highlight , then press the OK button.

The picture is magnified. The magnification value is displayed.

3 Press / / to see different parts of the picture.


4 Press the OK button again to redisplay the picture at the 1X (original) size.


5 Press / to locate a different picture, or press the Review button to exit Review mode.

Protecting Pictures and Videos From Deletion

- 1 Press the Review button, then locate the picture or video to protect.
- 2 Press the Menu button.



- 3 Press $\blacktriangle/\blacktriangledown$ to highlight Protect , then press the OK button.

The picture or video is protected and cannot be deleted. The Protect icon  appears with the protected picture or video.

- 4 To remove protection, press the OK button again.
- 5 Press the Menu button to exit the menu.



CAUTION:

Formatting internal memory or SD/MMC card deletes all (including protected) pictures, videos, email addresses, and album names.


Tagging Pictures/Videos for Albums


Use the Album feature in Review mode to tag the pictures and videos in your camera with album names.

First—On Your Computer

Use Kodak EasyShare software, V 3.0 or higher, to create album names on your computer, then copy up to 32 album names to the camera's internal memory. See Kodak EasyShare software Help for details.

Second—On Your Camera

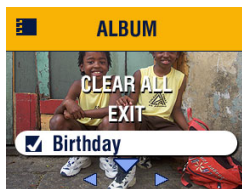

- 1 Press the Review button.
- 2 Press ◀/▶ to locate a picture, then press the Menu button.
- 3 Press ▲/▼ to highlight Album , then press the OK button.
- 4 Highlight an album folder, then press the OK button.

The album name appears with the picture. A plus (+) after the album name means the picture was added to more than one album.

To add other pictures to the same album, press ◀/▶ to scroll through the pictures. When the picture you want is displayed, press the OK button.

To add the pictures to more than one album, repeat step 4 for each album.

- 5 To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.

- 6 Highlight Exit, then press the OK button.

Your selections are saved.

- 7 Press the Menu button to return to Review mode.


Third—Transfer to Your Computer

When you transfer the tagged pictures and videos to your computer, the Kodak EasyShare software opens and categorizes your pictures and videos in the appropriate album folder. See Kodak EasyShare software Help for details.

Running a Slide Show

Use the Slide Show to display your pictures and videos on the camera screen. To run a slide show on a television or on any external device, see [page 43](#).

Starting the Slide Show

- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Slide Show , then press the OK button.




- 3 Highlight Begin Show, then press the OK button.

Each picture and video is displayed once, in the order in which you took them. Then the camera returns to the Menu screen.

- 4 To cancel the Slide Show, press the OK button.

Changing the Slide Show Display Interval

The default interval setting displays each picture for 5 seconds. You can increase the display interval to up to 60 seconds.

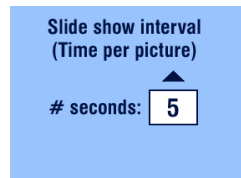


- 1 On the Slide Show menu, press $\blacktriangle/\blacktriangledown$ to highlight Interval, then press the OK button.
- 2 Select a display interval. To scroll through the seconds quickly, press and hold $\blacktriangle/\blacktriangledown$.
- 3 Press the OK button.

The interval setting remains until you change it.

Running a Continuous Slide Show Loop

When you turn on Loop, the slide show is continuously repeated.

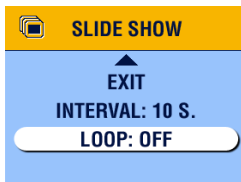

- 1 On the Slide Show menu, press ▲/▼ to highlight Loop, then press the OK button.
- 2 Highlight On, then press the OK button.


When you start a slide show, it repeats until you cancel it by pressing the OK button or until battery power is exhausted. The Loop setting remains until you change it.

Displaying Pictures/Videos on a Television

You can display pictures and videos on a television, computer monitor, or any device equipped with a video input using a Kodak EasyShare printer dock 6000 and an optional audio/video cable. Purchase these and other accessories at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.

NOTE: Image quality on a television screen may not be as good as on a computer monitor or when printed.

Make sure the Video Out setting (NTSC or PAL) is correct ([page 53](#)).

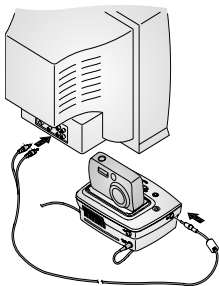

- 1 Connect the audio/video cable from the printer dock video-out port to the television video-in port (yellow). (The camera captures video with no audio so it is not necessary to connect the audio-in cable jack. Refer to your television user's guide for details.)

The camera screen turns off; the television screen acts as the camera display.

- 2 Review pictures and videos on the television screen.

NOTE: The slide show stops if you connect or disconnect the cable while the slide show is running.

Copying Pictures and Videos

You can copy pictures and videos from a card to internal memory or from internal memory to a card.

Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location **from** which you are copying. See [Choosing Internal Memory or SD/MMC Card](#), page 12.

Copy pictures or videos:

- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangleleft/\blacktriangleright$ to highlight Copy $\blacktriangleright\blacktriangleright$, then press the OK button.
- 3 Highlight an option, then press the OK button:



PICTURE or VIDEO—copies the current picture or video.

EXIT—returns to the Review menu.

ALL—copies all pictures and videos from your selected storage location to the other location.


A progress bar monitors the copy process until complete. (For information on picture numbering, see [page 95](#).)


NOTE:

- Pictures and videos are copied, not moved. To remove pictures and videos from the original location after they are copied, delete them (see [page 37](#)).
- Tags that you applied for print, email, and Favorites are not copied. Protection settings are not copied. To apply protection to a picture or video, see [page 39](#).

Displaying Video Date

To display the capture date and time (only during video playback on the camera):

- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Video Date Display , then press the OK button.

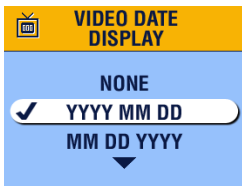

- 3 Highlight an option, then press the OK button.
- 4 Press the Menu button to exit the menu.

The capture date and time appear during video playback on the camera. This setting remains until you change it.

Viewing Picture/Video Information

- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Picture or Video Info, then press the OK button.



Information about the picture or video is displayed.

- 3 To view information on the next or previous picture or video, press $\blacktriangle/\blacktriangleright$. Press the Menu button to exit the menu.

5 Sharing Pictures and Videos

The Share button lets you “tag” your pictures and videos. When they are transferred to your computer, you can share:

Tagged Pictures

- By print
- By email
- As Favorites, for easy organization on your computer

Tagged Videos

- By email
- As Favorites



When Can I Tag My Pictures and Videos?

Press the Share button to tag pictures and videos:


- Any time (the last picture taken and the Share menu are displayed).
- Just after you take them, during Quickview (see [page 19](#) and [page 30](#)).
- After pressing the Review button (see [page 35](#)).


NOTE: Tags remain until removed. If a tagged picture or video is copied, the tag is **not** copied.

Tagging Pictures for Printing





OK, ▲/▼, ◀/▶ Share

- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight Print , then press the OK button.*
- 3 Press ▲/▼ to select the number of copies (0-99). Zero removes the tag for that picture.

The Print icon  appears in the status area. The default quantity is one. (To change the default, see [page 52](#).)

- 4 **Optional:** You can apply a print quantity to other pictures. Press ◀/▶ to locate a picture. Keep the print quantity as is, or press ▲/▼ to change it. Repeat this step until the desired print quantity is applied to the pictures.
- 5 Press the OK button. Then press the Share button to exit the menu.

* To tag all pictures in the storage location, highlight Print All , press the OK button, then indicate the number of copies as described above. Print All is not available in Quickview.

To remove the print tagging for all pictures in the storage location, highlight Cancel Prts , then press the OK button. You cannot cancel prints in Quickview.

Printing Tagged Pictures

When you transfer the tagged pictures to your computer, the Kodak EasyShare software print screen opens. For details, click the Help button in the Kodak EasyShare software.


For more information on printing from your computer or card, see [page 62](#).

Tagging Pictures and Videos for Emailing

First—On Your Computer

Use Kodak EasyShare software to create an email address book on your computer. Then, copy up to 32 email addresses to the camera's internal memory.

Second—Tag On Your Camera

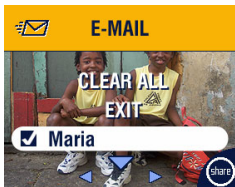

- 1 Press the Share button. Press $\blacktriangleleft/\blacktriangleright$ to locate a picture.
- 2 Highlight Email ✉ , then press the OK button.
- 3 Highlight an email address, then press the OK button.

To tag other pictures with the same address, press $\blacktriangleleft/\blacktriangleright$ to scroll through the pictures. When the picture you want is displayed, press the OK button.

To send the pictures to more than one address, repeat step 3 for each address.

Selected addresses are checked.

- 4 To remove a selection, highlight a checked address, then press the OK button. To remove all email selections, highlight Clear All.
- 5 Highlight Exit, then press the OK button.

Your selections are saved. The email icon ✉ appears in the status area.

- 6 Press the Share button to exit the menu.

Third—Transfer and Email

When you transfer the tagged pictures and videos to your computer, the Kodak EasyShare software email screen opens and lets you send the pictures and videos to the addresses you specified. For details, click the Help button in the Kodak EasyShare software.

Tagging Pictures and Videos as Favorites



- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight Favorite ♥, then press the OK button.
The Favorite icon ♥ appears in the status area.
- 3 To remove the tag, press the OK button again.
- 4 Press the Share button to exit the menu.

Using Favorites On Your Computer

When you transfer Favorite pictures and videos to your computer, you can use Kodak EasyShare software to retrieve, organize, and label them by subject, date, event, or any category you choose. For details, click the Help button in the Kodak EasyShare software.


Need Help?

Click the Help button in the Kodak EasyShare software for details on creating address books, and printing, emailing, and organizing tagged pictures on your computer.










6 Customizing Your Camera Settings

Use Setup to customize camera settings according to your preferences.

To Access Setup Mode/Menus

- 1 In any mode (including Review), press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu , then press the OK button.

Setup Menus

	Return to previous menu		Video Out (page 53)
	Default Print Quantity (page 52)		Language (page 54)
	Quickview (page 52)		Format (page 55)
	Liveview (page 53)		About (page 55)
	Date & Time Set (page 8)		

Changing the Default Print Quantity

The Default Print Quantity setting determines the value that is displayed on the Share Print screen (page 47). The default value is 1.

- 1 Press the Menu button.
- 2 Press ▲/▼ to highlight Setup Menu ☰, then press the OK button.




- 3 Highlight the Default Print Quantity icon 🖨️, then press the OK button.
- 4 Press ▲/▼ to select the new default quantity, then press the OK button.
- 5 Press the Menu button to exit the menu.

This setting remains until you change it.

Turning Off Quickview

After you take a picture or video, Quickview displays it on the camera screen for approximately 5 seconds (see page 19 and page 30). To save battery power, turn off Quickview.

- 1 Press the Menu button.
- 2 Press ▲/▼ to highlight Setup Menu ☰, then press the OK button.
- 3 Highlight the Quickview icon 👁️, then press the OK button.

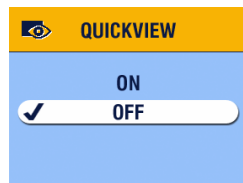

- 4 Highlight Off, then press the OK button.
- 5 Press the Menu button to exit the menu.



The picture is not displayed on the camera screen after you take it. To see the picture or video, press the Review button. This setting remains until you change it.


Turning On Liveview in Auto Mode

The Liveview feature lets you use the camera screen as a viewfinder (see [page 18](#)). The default setting is Liveview Off. Press the OK button to turn it on.

IMPORTANT: *Liveview significantly reduces battery life.*

To change the Liveview default to On:

- 1 Press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu , then press the OK button.
- 3 Highlight the Liveview icon , then press the OK button.

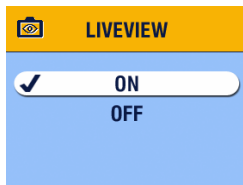

- 4 Highlight On, then press the OK button.



Liveview is now On by default. The camera screen is on whenever the camera is on (in Auto or Video mode). You can still press the OK button to turn Liveview off and on.

- 5 Press the Menu button to exit the menu.

This setting remains until you change it.

Setting Video Out

Video Out is a regional setting that lets you connect your camera to a television or other external device using an optional Kodak EasyShare printer dock 6000 and an audio/video cable (see [page 43](#)).

- 1 Press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu , then press the OK button.
- 3 Highlight the Video Out icon , then press the OK button.





- 4 Highlight an option, then press the OK button:
NTSC (default)—used in most countries except those in Europe and China. North America and Japan use NTSC.
PAL—used in Europe and China.
- 5 Press the Menu button to exit the menu.

This setting remains until you change it.

Selecting a Language

You can display menus and screen messages in different languages.

- 1 Press the Menu button.
- 2 Press ▲/▼ to highlight Setup Menu , then press the OK button.
- 3 Highlight the Language icon , then press the OK button.



- 4 Highlight an option, then press the OK button.
- 5 Press the Menu button to exit the menu.



*Text is displayed in the selected language.
 This setting remains until you change it.*


Formatting Internal Memory or SD/MMC Card



CAUTION:

Formatting erases all pictures and videos, including those that are protected. Removing a card during formatting may damage the card.

- 1 Press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu , then press the OK button.
- 3 Highlight Format , then press the OK button.

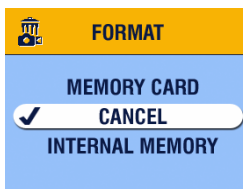

- 4 Highlight an option, then press the OK button:



MEMORY CARD—deletes everything on the card; formats the card.

CANCEL—exits without making a change.

INTERNAL MEMORY—deletes everything in internal memory including email addresses and album names; formats the internal memory.

- 5 Highlight Continue Format, then press the OK button.
When the formatting is complete, the Setup menu appears.

Viewing Camera Information

- 1 Press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu , then press the OK button.
- 3 Highlight About , then press the OK button.
The camera model and the current firmware version appear.
- 4 Press the Menu button to exit the menu.

7 Installing the Software

NOTE: To install software on computers running Windows 2000, Windows XP Pro operating systems, or Mac OS X, you need administrator privileges. See your computer user's guide.

Windows System Requirements

- Personal computer running Windows 98, 98SE, ME, 2000, or XP operating systems
- 233 MHz processor or greater (300 MHz recommended for Windows 2000 and XP operating systems)
- 64 MB of available RAM (128 MB recommended)
- 100 MB of available hard disk space
- CD-ROM drive
- Built-in USB port
- Color monitor with a minimum resolution of 800 x 600 pixels; High Color (16-bit) or True Color (24-bit) (recommended)
- Internet access for online printing and emailing

Mac OS X System Requirements

- Macintosh computer with a G3 or G4 processor
- Mac OS 10.1.2, minimum
- 128 MB of available RAM
- 200 MB of available hard disk space
- CD-ROM drive
- Built-in USB port
- Color monitor with a minimum resolution of 800 x 600 pixels; thousands or millions of colors recommended
- Internet access for online printing and emailing


Mac OS 8.6 and 9.x System Requirements

- PowerPC-based Macintosh computer
- Mac OS 8.6 or 9.x
- 64 MB of available RAM
- 200 MB of available hard disk space
- CD-ROM drive
- Built-in USB port
- Color monitor with a minimum resolution of 800 x 600 pixels; thousands or millions of colors recommended
- Internet access for online printing and emailing

NOTE: Mac OS 8.6 and 9.x do not support the Share button functions.
Mac OS X is recommended for full functionality.

Install the Software

For information on the software applications included on the Kodak EasyShare software CD, click the Help button in the Kodak EasyShare software.

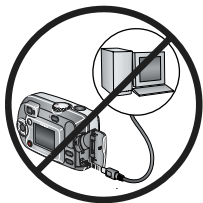

CAUTION:

Install Kodak EasyShare software *before* connecting the camera or optional camera dock to the computer. Failure to do so may cause the software to load incorrectly.



- 1 Before you begin, close all software applications that are open on your computer (including anti-virus software).
- 2 Place the Kodak EasyShare software CD into the CD-ROM drive.
- 3 Load the software:

Windows OS-based computer—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.

Mac OS 8.6 or 9.x—on the install window, click Continue.

Mac OS X—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software.
 - **Windows OS-based computers**—select Complete to automatically install the most commonly used applications. Select Custom to choose the applications you wish to install.
 - **Mac OS 8.6 or 9.x**—select Easy to automatically install the most commonly used applications.
 - **Mac OS X**—follow the on-screen instructions.

NOTE: When prompted, take a few minutes to electronically register your camera and software. This lets you receive information regarding software updates and registers some of the products included with the camera. You must be connected to your Internet service provider to register electronically.

To register later, see www.kodak.com/go/register.

- 5 If prompted, restart the computer. If you turned off anti-virus software, turn it back on. See the anti-virus software manual for details.

8 Connecting Camera to Computer




CAUTION:

Install Kodak EasyShare software *before* connecting the camera or optional camera dock to the computer. Failure to do so may cause the software to load incorrectly.

You can transfer pictures and videos from the camera to the computer using:

- The (included) USB cable.
- The (optional) Kodak EasyShare camera dock 6000. See [page 65](#) for connecting with the camera dock.
- The (optional) Kodak EasyShare printer dock 6000. Purchase these and other accessories at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.

Transferring Pictures With the USB Cable

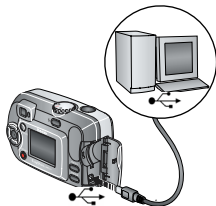

- 1 Turn off the camera.
- 2 Plug the labeled end of the USB cable into the labeled USB port on your computer. See your computer user's guide for details.
- 3 Plug the other end of the USB cable into the labeled USB port on the camera.
- 4 Turn on the camera.

NOTE: *Kodak EasyShare software opens on your computer. The software prompts you through the transfer process.*

NOTE: Go to www.kodak.com/go/howto for an online tutorial on connecting.

You can also use a Kodak multi-card reader or Kodak SD multimedia card reader-writer to transfer your pictures.

Printing Pictures From Your Computer

For details on printing pictures from your computer, click the Help button in the Kodak EasyShare software.

Ordering Prints Online

Kodak EasyShare print service (provided by Ofoto at www.ofoto.com) is one of the many online print services offered in the Kodak EasyShare software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Order high-quality prints, photo greeting cards, frames, and albums—and have them delivered to your door.

Printing From an Optional SD/MMC Card

- Automatically print tagged pictures when you insert your card into a printer with an SD/MMC slot. See your printer user's guide for details.
- Make prints at an SD/MMC-capable Kodak picture maker. (Contact a location prior to visiting. See www.kodak.com/go/picturemaker.)
- Take the card to your local photo retailer for professional printing.

Print With or Without a Computer

Dock your camera to the Kodak EasyShare printer dock 6000 and print directly—without using a computer. Purchase this and other accessories at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.


9 Using the Camera Dock 6000

The Kodak EasyShare camera dock 6000:

- Makes it easy to transfer pictures and videos to the computer.
- Charges the included Kodak EasyShare Ni-MH rechargeable battery pack. (Install the battery pack in the camera for charging.)
- Supplies power to the camera.

You can purchase a camera dock at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.

Camera Dock 6000 Package Contents

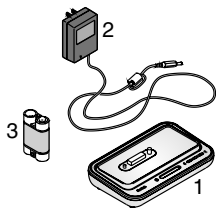

- 1 Camera dock 6000 (with universal insert installed)
- 2 AC power adapter, 5-volt
Your AC adapter may differ from the one pictured.
- 3 Kodak EasyShare Ni-MH rechargeable battery pack
- 4 Quick Start Guide (not shown)



CAUTION:

 
Do not use the AC power adapter, 5-volt to power your camera without the dock. It is not compatible with your camera alone.

Installing the Custom Camera Insert


A **universal insert** is pre-installed in the camera dock. It allows all Kodak EasyShare CX/DX6000 series and LS600 series cameras to use the camera dock.

A **custom insert** is included with your camera. It provides a perfect fit for your Kodak EasyShare CX6200 digital camera.

Remove the Universal Insert



 
- 1 Place your thumbs in the indents in the front of the universal insert; press in and lift.



- 2 Lift the insert at the side edge and remove the insert from the dock.
- 3 Save the universal insert as a spare.

Install the Custom Insert

Cutout

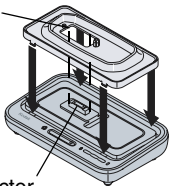

Connector

- 1 Position the custom insert so the cutout lines up with the connector on the camera dock.
- 2 Fit the insert into the groove in the dock and snap it into place.


You can purchase a custom insert for your camera at dealer of Kodak products. See www.kodak.com/go/cx6200accessories.


Connecting the Camera Dock 6000

After the Kodak EasyShare software is loaded (see [page 57](#)), connect the camera dock to your computer and to a power outlet. You need:

- The USB cable included with your camera
- The AC adapter, 5-volt included with the camera dock

IMPORTANT: *Make sure your camera is NOT in the camera dock when you are connecting to power and the computer.*

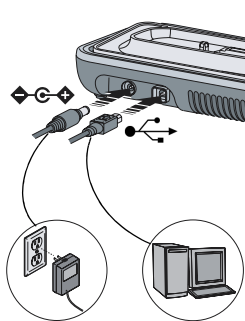

- 1 Plug the labeled  end of the USB cable into the labeled USB port on your computer. See your computer user's guide for details.
- 2 Plug the other end of the USB cable into the square USB connector on the back of the camera dock.
- 3 Plug the AC adapter into the round power connector on the back of the camera dock and into a power outlet.


Your AC adapter may differ from the one pictured or may have additional plugs. Use the plug that accommodates your type of power outlet.

IMPORTANT: *Use only the AC adapter, 5-volt included with the camera dock 6000. Other adapters may cause damage to your camera, camera dock, or AC adapter.*

Leave the camera dock connected so it's always ready to transfer pictures and videos.

Installing the Rechargeable Battery

You received non-rechargeable batteries with your camera. To take full advantage of your camera dock 6000, replace the batteries with the Kodak EasyShare Ni-MH rechargeable battery pack that is packaged with the camera dock.

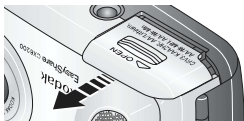


- 1 Open the battery door on the bottom of the camera.
- 2 Install the Ni-MH rechargeable battery pack as illustrated.



CAUTION:

The battery pack can only be inserted into the camera in the orientation shown. If the battery pack does not easily install, reposition it and try again. **DO NOT FORCE IT.** Doing so can damage your camera.

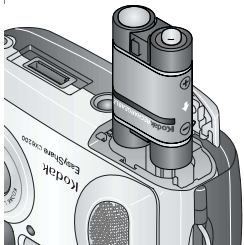


- 3 Close the battery door.

IMPORTANT: *The battery pack is not charged when you receive it. See [page 68](#) for charging instructions.*

Docking the Camera

To charge the battery or to transfer pictures and videos from the camera to the computer:

Alignment pins

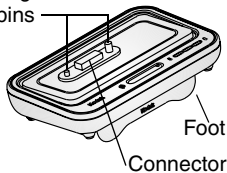

- 1 Flip down the camera dock foot.

The camera dock now sits at the proper angle for viewing the camera screen.


- 2 Turn off the camera.

- 3 Match the connector and alignment pins on the camera dock to the camera. Push down until the camera is securely seated.

The Transfer light glows green when the camera is seated.

If a rechargeable battery is in the camera, the first battery charging light glows green.

The camera is now powered by the camera dock instead of the camera batteries.

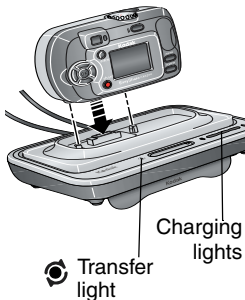

NOTE: If the Kodak EasyShare Ni-MH rechargeable battery pack requires charging, charging begins (see [page 68](#)).

Charging the Battery







Charging lights

- 1 Make sure the Kodak EasyShare Ni-MH rechargeable battery pack is installed in the camera (see [page 66](#)).
- 2 Turn off the camera and place it in the camera dock (see [page 67](#)).

If the battery requires charging, charging begins after a brief battery check.


- Full charging takes about 2.5 hours.
- Charging stops if you turn on the camera. If the camera is left in the camera dock with the power on, charging resumes when the camera enters auto power-off (see [page 97](#)).
- Charging is suspended during picture transfer.

Charging Lights Status

Charging Lights	Cause
Green lights   	Camera is properly docked. Battery is either being checked or is less than half charged. Battery is more than half charged. Battery is fully charged.
Red light (blinking) 	Battery is not properly installed (see page 66). Battery or connector pin is damaged. Camera and battery have been exposed to extreme temperatures. Slowly return to room temperature.
No lights	Camera is not properly seated in the camera dock. AC adapter is not connected. Rechargeable battery is not installed (see page 66).

Transferring Pictures With the Dock

After the Kodak EasyShare software is loaded on your computer (see [page 57](#)), you can transfer pictures and videos from your camera to your computer.

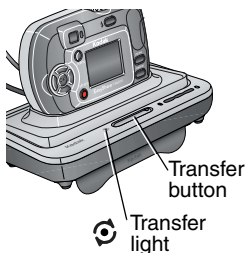

- 1 Turn off the camera and place it in the camera dock.
- 2 Push the Transfer button.

The Transfer light blinks green while the pictures and videos are transferring.

Messages about the transfer status appear on the camera screen. Kodak EasyShare software automatically opens on your computer.

NOTE: After transferring, the camera dock resumes charging as necessary.

Transfer Light Status

Light	Cause
Steady	The camera is properly seated in the camera dock. The camera dock is connected to AC power and to a computer via the USB cable.
Blinking	Pictures are being transferred to the computer.
Off	The camera is not seated in the camera dock (page 67).
	The camera dock is not plugged into AC power (page 65).
	The USB cable is not connected (page 65).

Need Help Using the Software?

For details on transferring, organizing, printing, emailing, and editing your pictures, click the Help button in the Kodak EasyShare software screens.

Reviewing Pictures and Videos

When the camera is in the dock, the camera is powered by the dock, not the camera batteries. Save battery power by using the dock to review pictures and videos on the camera screen.



- 1 Turn on the camera and place it in the camera dock.
- 2 Press the Review button to display the last picture or video taken. See [page 35](#) for details.

You can perform any camera function with the camera in the dock (ex., run a slide show, check or change settings).

Camera Dock 6000 Specifications

Specifications—Kodak EasyShare camera dock 6000		
Communication with computer	USB	Cable (included with Kodak EasyShare cameras)
Dimensions (without insert)	Width	6.1 in. (155 mm)
	Depth	3.7 in. (94.5 mm)
	Height	1.2 in. (31 mm)
	Weight	6.0 oz (170 g)
Transfer light (page 69)		Indicates connection/transfer
Charging lights (page 68)		Indicate charging status and error conditions
Input voltage		5 ±0.25 V DC
Power	DC input	AC adapter (included with camera dock)

Troubleshooting—Camera Dock 6000

Problem	Cause	Solution
Pictures are not transferred to the computer	AC adapter or USB cable is not securely connected.	Check the connections (page 65).
	Software is not installed.	Install the software (page 57).
	Too many applications running on computer.	Close all software applications and try again.
	Camera was removed from the camera dock during picture transfer.	Replace the camera on the camera dock and press the Transfer button.
	Transfer button was not pressed.	Press the Transfer button.

Earlier Cameras and Docks

Your Kodak EasyShare camera dock 6000 requires a Kodak EasyShare CX/DX6000 or LS600 series digital camera.

Earlier camera models (Kodak EasyShare 4000 series and previous) require the original Kodak EasyShare camera dock or camera dock II.

10 Troubleshooting

When you have questions about your camera or camera dock 6000, start here. Additional technical information is available in the ReadMe file located on the Kodak EasyShare software CD. For updates to Troubleshooting information, see www.kodak.com/go/cx6200support.

Camera Problems

Problem	Cause	Solution
Camera does not turn on.	Battery is not properly installed.	Reinstall the battery (page 4).
	Battery is not charged.	Recharge the battery (page 68).
Camera does not turn off.	A non-approved battery may be in the camera.	Use the battery that came with your camera, or an approved replacement battery (page 14).
Pictures remaining number does not decrease after taking a picture.	The picture does not take up enough space to decrease the number.	The camera is operating normally. Continue taking pictures.
	You did not take a picture.	Use Review (page 35) or Quickview (page 19) to make sure a picture was taken.

Problem	Cause	Solution
Shutter button does not work.	Camera is not turned on.	Turn on the camera (page 6).
	The camera is processing a picture; the ready light (near the viewfinder) is blinking red.	Wait until the ready light stops blinking red before attempting to take another picture.
	The card or internal memory is full.	Transfer pictures to the computer (page 61), delete pictures from the camera (page 37), switch storage locations (page 12), or insert a card with available memory (page 11).
	The Shutter button was not pressed.	For best pictures, see page 17 .
Part of the picture is missing. (Also see Stored pictures are corrupted.)	Something was blocking the lens when the picture was taken.	Keep hands, fingers, or other objects away from the lens when taking pictures.
	Your eye or the picture was not centered correctly in the viewfinder or camera screen.	Leave space around subject when centering picture in viewfinder or camera screen.
Stored pictures are corrupted.	The card was removed or the battery expired while the ready light was blinking.	Retake picture. Do not remove card while the ready light is blinking. Keep battery charged.

Problem	Cause	Solution
In Review mode, you do not see a picture (or the expected picture) on the camera screen.	The camera may not be accessing the correct storage location.	Check the picture storage location setting (page 12).
Picture is too dark.	Flash is not on.	Turn on the flash (page 21).
	The subject is too far away for the flash to have an effect.	Move so there is no more than 7.9 ft (2.4 m) between the camera and the subject.
	The subject is in front of a bright light (backlit).	Use Fill flash (page 21) or change your position so light is not behind the subject.
	Not enough light.	Increase Exposure Compensation (page 24).
Picture is too light.	The flash is not needed.	Change to Auto flash or Flash Off (page 21).
	The subject was too close for flash.	Move so there is at least 1.6 ft (0.5 m) between camera and subject.
	Too much light.	Decrease Exposure Compensation (page 24).

Problem	Cause	Solution
In Review mode, a blue screen is displayed instead of a picture.	The picture has no thumbnail or an unrecognized thumbnail.	Transfer the picture to the computer (page 61), or delete the picture (page 37).
Picture is not clear.	The lens is dirty.	Clean the lens (page 94).
	Subject too close when taking picture.	Move so there is at least 19.7 in. (50 cm) between the camera and the subject.
	Subject or the camera moved while the picture was taken.	Place the camera on a flat, steady surface or use a tripod.
	The subject is too far away for the flash to be effective.	Move so there is no more than 7.9 ft (2.4 m) between the camera and the subject.
Slide show does not run on external video device.	Video Out setting is incorrect.	Adjust the camera Video Out setting (NTSC or PAL, page 53).
	External device is set incorrectly.	See the external device's user's guide.
Camera freezes up when a card is inserted or removed.	Camera detected an error when the card was inserted or removed.	Turn the camera off, then back on. Make sure the camera is turned off before inserting or removing a card.

Camera/Computer Communications

Problem	Cause	Solution
The computer cannot communicate with the camera. (For communication problems with a camera dock 6000, see page 65 .)	There is a problem with the configuration of the USB port on the computer.	See this file on the EasyShare software CD: USB.html Or, go to: www.kodak.com/go/camerasupport
	Camera power is off.	Turn on the camera (page 6).
	Battery is not charged.	Recharge the battery (page 68).
	Some Advanced Power Management utilities on laptops turn off ports to save battery life.	See the Power Management section of the laptop user's guide to disable this feature.
	USB cable is not securely connected.	Connect cable to camera and computer port (page 61).
	Software is not installed.	Install the software (page 57).
	Software is installed incorrectly.	Disconnect the USB cable. Close all open applications. Uninstall, then re-install the software (page 57). To uninstall, go to Start/Settings/Control Panel/Add/Remove Programs.
	Too many applications are running on the computer.	Disconnect camera from the computer. Close all software applications, reconnect camera.
	The Battery Monitor or similar software runs constantly.	Close that software before starting the Kodak software.

Problem	Cause	Solution
Cannot transfer pictures. (The Add New Hardware Wizard cannot locate drivers.)	Software is not installed.	Disconnect USB cable. (If using camera dock, disconnect cable and remove camera from dock). Install EasyShare software (page 57).
	Software is installed incorrectly.	Disconnect the USB cable. Close all open applications. Uninstall, then re-install the software (page 57). To uninstall, go to Start/Settings/Control Panel/Add/Remove Programs.

SD/MMC Cards and Internal Memory

Problem	Cause	Solution
The camera does not recognize SD/MMC card.	The card may not be SD/MMC certified.	Purchase a certified SD/MMC card.
	The card may be corrupt.	Reformat the card (page 55). Caution: Formatting erases all pictures and videos, including protected files.
	Card is not properly inserted in camera.	Insert a card into the slot, then push to seat (page 11).
Camera freezes up when a card is inserted or removed.	Camera detects an error when the card was inserted or removed.	Turn the camera off, then back on. Make sure the camera is off when inserting or removing a card.

Problem	Cause	Solution
Memory card full	Storage is full.	Transfer pictures and videos to the computer, then delete them from the camera.
	The maximum number of files or folders is reached (or other directory concern).	Transfer pictures and videos to the computer, then format the card or internal memory (page 55). Caution: Formatting a card erases all pictures and videos, including protected files. (Formatting internal memory also erases email addresses and album names. To restore addresses and albums, see Kodak EasyShare software Help.)

Camera Screen Messages

Message	Cause	Solution
No images to display	There are no pictures in the current storage location.	Change picture storage location setting (page 12).
Memory card requires formatting	The card is corrupted or formatted for another digital camera.	Insert a new card or format the card (page 55).
Memory card cannot be read (Please format memory card or insert another card)		Caution: Formatting erases all pictures and videos, including protected files.

Message	Cause	Solution
Internal memory requires formatting	The camera internal memory is corrupted.	Format the internal memory (page 55).
Internal memory cannot be read (Please format internal memory)		Caution: Formatting erases all pictures and videos, including protected files. (Formatting internal memory also erases email addresses and album names. To restore them, see Kodak EasyShare software Help.)
Remove USB cable in camera Restart computer if needed	USB cable is connected to camera.	Unplug the USB cable from the camera.
No memory card (Files not copied)	There is no card in the camera. Pictures were not copied.	Insert a card (page 11).
Not enough space to copy files (Files not copied)	There is not enough space in the location you are copying to (internal memory or the card).	Delete pictures from the location you are copying to (page 37), or insert a new card.
Read-only memory card, change to internal memory to capture	The card in the camera is write-protected.	To take a picture, insert a new card or change storage location to internal memory (page 12).


Message	Cause	Solution
Memory card is protected (Reset switch on memory card)	Switch on card is in write-protect position.	Reset the switch as shown on camera screen.
Memory card is locked (Insert new memory card)	The card is write-protected.	To take a picture, insert a new card or change storage location to internal memory (page 12).
Memory card is unusable (Insert new memory card)	The card is slow, corrupted, or unreadable.	Insert a new card (page 11).
Recording stopped. Record in internal memory (Card speed is slow)	Card cannot be used to take videos.	Change storage location to internal memory (page 12). Use this card to take pictures only.
Memory card is full (Cannot save album tagging)	There is no space remaining.	Insert a new card (page 11), transfer pictures (page 61), or delete pictures (page 37).
Internal memory is full (Cannot save album tagging)		
Memory card is full (Cannot save share tagging)		
Internal memory is full (Cannot save share tagging)		

Message	Cause	Solution
Date and time have been reset	This is the first time you turned on the camera; or the battery has been removed for an extended period of time; or the battery is exhausted.	Reset the clock (page 8).
High camera temperature. (Camera will be turned off.)	The internal temperature of the camera is too high for the camera to operate. The viewfinder light glows red and the camera turns off.	Leave the camera off for several minutes, then turn it back on. If the message reappears, contact Customer Support (page 87).
Memory card is full	There is no more space on the card in the camera.	Transfer pictures to the computer (page 61), delete pictures from the card (page 37), insert a new card, or change storage location to internal memory (page 12).
Internal memory card is full	There is no more space in the camera's internal memory.	Transfer pictures to the computer (page 61), delete pictures from the internal memory (page 37) or change storage location to Auto (page 12) and insert card (page 11).

Message	Cause	Solution
Unrecognized file format	The camera cannot read the picture format.	Transfer the unreadable picture to the computer (page 61), or delete the picture (page 37).
No address book on camera (Connect with computer to import address book)	Address book has not been copied to the camera from the computer.	Create and copy address book from computer. See EasyShare software Help.
No album names on camera (Connect with computer to import album names)	Album names have not been copied to the camera from the computer.	Create and copy album names from computer. See EasyShare software Help.
Camera error #XXXX. See user's guide.	An error is detected.	Turn the Mode dial off, then back on. If the message reappears, contact Customer Support (page 87).

Camera Ready Light Status

Ready light

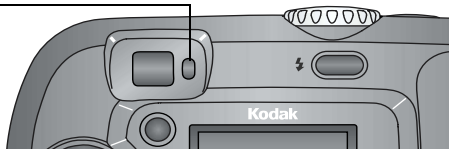

Status	Cause	Solution
Ready light does not turn on and the camera does not work.	Camera is not turned on.	Turn on the camera (page 6).
	Battery is exhausted.	Recharge the battery (page 68) or install a new one (page 4).
	Mode dial was on when battery was reloaded.	Turn Mode dial off, then back on.
Ready light glows steady green.	Camera is on; ready to take a picture or video.	Camera is operating normally.
Ready light blinks green.	Picture is being processed and saved to the camera.	Camera is operating normally.
	Camera is initializing.	
Ready light blinks amber.	Flash is not charged.	Wait. Resume picture taking when the light stops blinking and turns green.

Status	Cause	Solution
Ready light blinks red.	Battery is low or exhausted.	Recharge the battery (page 68) or install a new one (page 4).
Ready light glows steady red.	Camera's internal memory or card is full.	Transfer pictures to the computer (page 61), delete pictures from the camera (page 37), switch storage locations (page 12), or insert a card with available memory (page 11).
	Camera processing memory is full.	Wait. Resume picture taking when the light turns green.
	Card is read-only.	Change storage location to internal memory (page 12), or use a different card.

11 Getting Help

Helpful Web Links

Help with your camera	www.kodak.com/go/cx6200support
Help with Windows operating system and working with digital pictures	www.kodak.com/go/pcbasics
Download the latest camera software and firmware	www.kodak.com/go/cx6200downloads
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch
Get support for cameras, software, accessories, more	www.kodak.com/go/support
Purchase camera accessories	www.kodak.com/go/6200accessories
Register your camera	www.kodak.com/go/register
View online tutorials	www.kodak.com/go/howto

Help in this Manual

See [Troubleshooting, page 73](#) for help with problems you may have with your camera, camera/computer connections, or SD/MMC cards. See [page 71](#) for help with the EasyShare camera dock 6000.

Software Help

Click the Help button in the Kodak EasyShare software.

Telephone Customer Support

If you have questions concerning the operation of the software or camera, you may speak with a customer support representative.

Before You Call

- Have the camera or camera dock connected to your computer.
- Be at your computer.
- Have the following information available:

Operating system _____

Processor speed (MHz) _____

Computer model _____

Amount of memory (MB) _____

Exact error message you received _____

Version of Kodak EasyShare software CD _____

Camera serial number _____

Telephone Numbers

Australia	1800 147 701
Austria/Osterreich	0179 567 357
Belgium/Belgique	02 713 14 45
Brazil	0800 150000
Canada	1 800 465 6325
China	800 820 6027
Denmark/Danmark	3 848 71 30
Ireland/Eire	01 407 3054
Finland/Suomi	0800 1 17056
France	01 55 1740 77
Germany/Deutschland	069 5007 0035
Greece	00800 441 25605
Hong Kong	800 901 514
India	91 22 617 5823
Italy/Italia	02 696 33452
Japan	03 5644 5050
Korea	00798 631 0024
Netherlands/Nederland	020 346 9372
New Zealand	0800 440 786
Norway/Norge	23 16 21 33
Philippines	1 800 1 888 9600
Portugal	021 415 4125
Singapore	800 6363 036


Spain/Espana	91 749 76 53
Sweden/Sverige	08 587 704 21
Switzerland/Schweiz/Suisse	01 838 53 51
Taiwan	0 080 861 008
Thailand	001 800 631 0017
UK	0870 243 0270
United States	1 800 235 6325
Outside the United States	585 726 7260
International Toll Line	+44 131 458 6714
International Toll Fax	+44 131 458 6962

For the most up-to-date listings, visit:

<http://www.kodak.com/US/en/digital/contacts/DAIInternationalContacts.shtml>

12 Appendix

Camera Specifications

Kodak EasyShare CX6200 digital camera		
Color		24-bit, millions of colors
Color modes		Color, black & white, sepia
Communication with computer		USB, via: USB cable; EasyShare camera dock 6000; or printer dock 6000
Dimensions	Width	4.1 in. (104 mm)
	Depth	1.6 in. (41 mm)
	Height	2.6 in. (65 mm)
	Weight	6.5 oz (185 g) with battery and card
File format	Still	JPEG/EXIF v2.2 
	Video	QuickTime
Flash	Modes	Auto, Fill, Red-eye, Off
	Range	1.6-7.9 ft (0.5-2.4 m)
	Charging Time	Less than 7 seconds with charged battery
ISO speed	Automatic (100 - 200, 140 in Flash Mode)	
Image Sensor	1/3.2 in. CCD, 4:3 aspect ratio, RGB Bayer CFA, 2.1 MP	

Kodak EasyShare CX6200 digital camera		
Lens	Type	Combination glass/plastic with cover glass lens protection
	Aperture	f/4.5
	Focal Length	37 mm (equivalent)
	Focus Distance	Standard Wide: 19.7 in. (50 cm) to infinity
Liquid Crystal Display, LCD (Camera screen)		1.6 in. (40 mm), color, 220 x 279 (61k) pixels. Preview rate: 20 fps
Operating Temperature		32 to 104 ^o F (0 to 40 ^o C)
Picture/Video storage		8 MB internal; optional SD Card or MMC
Pixel resolution	Best ★★★	1632 x 1232 (2.0 M) pixels
	Best (3:2) ★★★	1632 x 1088 (1.8 M) pixels
	Better ★★	1184 x 888 (1.0 M) pixels
	Good ★	816 x 616 (0.5 M) pixels
Power	Battery	Kodak Max digital camera batteries 2-AA, 2-AA lithium, 2-AA Ni-MH, CRV3, Ni-MH rechargeable battery pack
	AC adapter	3V DC (purchase separately)
Self Timer		10 seconds
Tripod socket		Yes
Video Out		NTSC or PAL selectable
Video resolution		320 x 240 pixels, 15 fps
Viewfinder		Reverse Galilean
White balance		Auto
Zoom (still capture)		3X digital

Original Factory Settings

Feature	Factory Setting
Date/Time	2003/01/01; 12:00
Date/Time Stamp	Off
Default Print Quantity	1
Exposure Compensation	0.0
Flash	Still: Auto Video: Off
Image Storage	Auto
Language	English
Liveview	Off
Self Timer	Off
Picture Quality	Best
Quickview	On
Slide Show Interval	5 seconds
Slide Show Loop	Off
Storage Location	Auto
Video Date Display	yyyy/mm/dd
Video Out	NTSC

Upgrading Your Software and Firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See www.kodak.com/go/cx6200downloads.

Tips, Safety, Maintenance

- Always follow basic safety precautions. Refer to the “Important Safety Instructions” booklet packed with your camera.
- Do not allow chemicals, such as suntan lotion, to come into contact with the painted surface of the camera.
- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera again. If this does not resolve the problem, contact customer support ([page 87](#)).
- Clean the lens and camera screen:
 - 1 Blow gently on the lens or camera screen to remove dust and dirt.
 - 2 Wipe the lens or camera screen gently with a soft, lint-free cloth or an untreated lens-cleaning tissue.

Do not use cleaning solutions unless they are designed specifically for camera lenses. **Do not wipe the camera lens or camera screen with chemically treated eyeglass lens tissue. It may scratch the lens.**
- Wipe the outside of the camera with a clean, dry cloth. Never use harsh or abrasive cleaners or organic solvents on the camera or any of its parts.
- Connect a tripod directly to the camera; do not connect a tripod to the camera dock.
- Service agreements are available in some countries. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or the Kodak Web site at www.kodak.com/go/cx6200support.

Storage Capacities

File sizes can vary. You may be able to store more or fewer pictures and videos. Purchase accessories at a dealer of Kodak products. See www.kodak.com/go/cx6200accessories.

Video Storage Capacity

Minutes/seconds of video	
8 MB internal memory	23 sec.
16 MB SD/MMC	53 sec.
32 MB SD/MMC	1 min., 50 sec.
64 MB SD/MMC	3 min., 44 sec.
128 MB SD/MMC	7 min., 31 sec.

Picture Storage Capacity

	Approximate number of pictures			
	Best ★★★	Best (3:2) ★★★	Better ★★	Good ★
8 MB internal memory	8	9	15	30
16 MB SD/MMC	18	20	35	70
32 MB SD/MMC	37	42	73	145
64 MB SD/MMC	74	85	148	295
128 MB SD/MMC	149	170	298	595

Locating Pictures and Videos on a Card

Pictures stored on SD/MMC Cards use a standard (DCF-Digital Camera Format) agreed upon by many camera manufacturers. This lets you use the cards in different cameras. If you use a card reader to retrieve your files, the following description of the card file structure may be helpful.

MISC folder—contains the order files created when you use the Share feature to tag files for printing, emailing, and as favorites; also contains the address book and album names copied from the computer.

SYSTEM folder—created and used while updating camera firmware.

DCIM folder—root level folder, contains the 100K6200 folder. Each time you turn on the camera or insert a different card, any empty folders within the DCIM folder are removed.

100K6200 subfolder—initially contains all pictures and videos on the card.

Picture Naming Conventions

- Pictures are named 100_nnnn.JPG, and are numbered in the order in which they are taken. The first picture is named 100_0001.JPG; the highest number allowed is 100_9999.JPG.
- When a card contains a picture named 100_9999.JPG in the \DCIM\100K6200 folder, subsequent pictures appear in a new folder (\DCIM\101K6200), beginning with picture 101_0001.JPG.
- Even if you transfer pictures to the computer or delete pictures from the camera, the camera continues to use consecutive numbers for all subsequent pictures. For example, if the last picture taken was 100_0007.JPG and you delete it, the next picture you take is named 100_0008.JPG.

- When you insert a different card into your camera, the next picture number is defined by incrementing the higher of the last picture taken by the camera, or the highest existing picture number in the folder.
- If you use the card in a camera other than the Kodak EasyShare CX6200 digital camera, and that camera manufacturer adheres to this file structure standard, the \DCIM folder contains a folder named by that camera. For more information, refer to the documentation that accompanied that camera.

Power-Saving Features

If No Activity For	The Camera	To Turn It Back On
1 minute	screen turns off.	Press the OK button.
8 minutes	enters auto power off.	Press any button (or insert or remove a card).
3 hours	turns off.	Turn Mode dial Off, then back on.

FCC Compliance and Advisory

Kodak EasyShare CX6200 digital camera
Tested to comply with FCC Standards.
FOR HOME OR OFFICE USE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC Statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Index

A

A/V out, 43, 53

AC adapter

5-volt, camera dock, 65

accessories

battery, 15

buying, 87

camera dock, 63

printer dock, 62

SD/MMC card, 11

adjusting screen display, 7

advanced digital zoom, 20

albums, tagging

in review mode, 40

pictures, 27

videos, 31

alkaline batteries, warning, 4

auto

flash, 21

power-down, 97

B

batteries

alkaline warning, 4

charge via camera dock, 68

door location, iv

expected life, 14

extending life, 15

loading, 4, 66

safety and handling, 15

types, 14

black & white pictures, 26

button

controller, ii, 6

delete, ii, 19

flash/status, ii, 21

menu, ii

OK, ii, 6

review, ii, 35

Share, ii, 47

shutter, i, ii, iv

C

cable

audio/video, 3, 43

power, camera dock, 65

USB, 3, 61, 65

camera dock

camera compatibility, 71

charging battery, 68

connection, 65

connector on camera, iv

- docking camera, 67
- installing custom insert, 64
- lights status, 69
- package contents, 63
- reviewing pictures, 70
- specifications, 70
- troubleshooting, 71
- camera overviews, i—iv
- camera screen
 - adjusting display, 7
 - error messages, 79
 - liveview, 18
 - reviewing pictures/videos, 35
 - status area, 9
 - status icons, 10
 - turning off liveview, 53
 - using as viewfinder, 18
- Canadian compliance, 98
- capture mode, accessing
 - menus, 22
- card, memory, 96
- caring for your camera, 94
- changing storage location, 12
- charging battery via camera
 - dock, 68
- charging lights, camera dock, 68
- checking
 - camera status, settings, 9
 - storage setting, 13
- cleaning camera lens, 94
- clock, setting, 8
- color mode, 26
- computer
 - connecting camera, 61
 - connecting camera dock, 65
 - installing software, 59
 - system requirements, 57
 - transfer to, 61, 69
- connecting
 - camera dock, 65
 - camera to camera dock, 67
 - camera to computer, 61
- contents, package
 - camera, 3
 - camera dock, 63
- controller buttons, ii, 6
- copy pictures
 - card to memory, 44
 - memory to card, 44
 - to computer via camera, 61
 - to computer via camera dock, 69
- CRV3 battery
 - expected life, 14
 - installing, 4
- custom insert, 64
- customer support, 88
- customizing camera settings, 51

D

date

- displaying on video, 45
- imprinting on pictures, 28
- setting, 8

DCIM folder, card, 96

default settings, original, 93

delete button, ii

deleting

- by formatting, 55
- during quickview, 19, 30
- from internal memory, 37
- from SD/MMC Card, 37
- protected pictures/videos, 39

digital zoom, using, 20

disposal, recycling, 94

dock

- camera, 63
- printer, 62

downloading pictures, 61, 69

EEasyShare software *See also*

- Kodak EasyShare
- software, 57

emailing pictures, videos, 49

error messages, camera
screen, 79

exposure compensation, 24

external video device

- setting video out, 53
- viewing pictures, videos, 43

F

favorites, tagging, 50

FCC compliance, 98

file names, card, 96

fill flash, 21

firmware

- upgrading, 93
- version, 55

flash

- range, 21, 91
- settings, 21
- unit location, i
- using, 21

flash/status button, ii, 21

focus distance, 92

folders, card, 96

formatting internal

- memory/card, 55

G

grip, i

guidelines, battery, 15

H

help

- camera, 73
- camera dock, 71
- support, 87
- troubleshooting, 73
- web links, 87

I

icons

- camera screen, 10
- capture menus, 22
- review menu, 38
- setup menu, 51
- Share menu, 47

image storage menu, 12

information

- about camera, 55
- about pictures/videos, 45

insert, custom/universal, 64

installing

- batteries, 4
- custom insert, 64
- rechargeable battery, 66
- SD/MMC card, 11
- software, 59

internal memory

- formatting, 55

setting storage location, 12

storage capacity, 95

K

Kodak EasyShare software

- getting help, 87
- installing, 59
- upgrading, 93

Kodak web sites, 87

L

language, setting, 54

LCD (liquid crystal display). *See*

camera screen

lens

- cleaning, 94
- location, i

light

- camera dock, 68, 69
- ready, ii, 84
- self timer, i, 23, 33
- video record, i

lithium batteries, expected

life, 14

liveview

- camera screen as
viewfinder, 18
- turning default on, 53
- turning on/off, 18

- loading
 - batteries, 4, 66
 - SD/MMC card, 11
 - software, 59
- locator for dock, iv
- M**
- Macintosh OS
 - installing software on, 59
 - system requirements, 58
- magnify picture, 38
- maintenance, camera, 94
- memory
 - inserting card, 11
 - internal, 11, 12
 - removeable card, 12
 - storage capacities, 95
 - storage location setting, 12
- menu
 - button, ii
 - review mode, 38
 - setup mode, 51
 - Share mode, 47
 - still modes, 22
 - video mode, 30
- MISC folder, card, 96
- MMC card, inserting, 11
- mode dial, i, ii, iv
- modes, picture taking
 - menu options, 22
 - monitor, requirements, 57
 - movies. *See* videos
 - multiple pictures, viewing, 36
- N**
- Ni-MH rechargeable battery
 - expected life, 14
 - installing, 66
- NTSC, video out setting, 53
- O**
- OK button, ii, 6
- online prints, ordering, 62
- overview, camera, ii
- P**
- package contents
 - camera, 3
 - camera dock, 63
- PAL, video out setting, 53
- pictures
 - checking location, 13
 - copying, 44
 - date imprint, 28
 - deleting, 37
 - emailing tagged, 49
 - file naming, 96
 - locating on card, 96
 - magnifying, 38
 - printing, 62

- printing tagged, 48
 - protecting, 39
 - quality, setting, 25
 - reviewing, 35
 - reviewing, camera dock, 70
 - storage capacity, 95
 - tagging, 27, 40
 - taking, 17
 - transfer via camera, 61
 - transfer via camera dock, 69
 - viewing multi-up, 36
 - viewing on television, 43
 - playing a video, 36
 - power
 - auto off, 97
 - camera, 6
 - camera dock, 65
 - printer dock, 62
 - printing
 - 4 x 6 prints, 25
 - changing default quantity, 52
 - from a card, 62
 - optimizing printer, 87
 - order online, 62
 - pictures, 62
 - tagged pictures, 48, 62
 - this user guide, 1
 - without a computer, 62
 - product overview, ii
 - protecting pictures, videos, 39
- Q**
- quality setting, 25
 - quickview
 - turning off, 52
 - using, 19, 30
- R**
- ReadMe file, 73
 - ready light, ii, 84
 - recycling, disposal, 94
 - red-eye, flash, 21
 - regulatory information, 98
 - removeable card, 11
 - requirements
 - Macintosh OS, 58
 - Windows OS, 57
 - resolution, setting, 25
 - review button, ii, 35
 - reviewing pictures
 - as you take them, 19
 - camera dock, 70
 - camera screen, 35
 - deleting, 37
 - magnifying, 38
 - menu options, 38

- multi-up, 36
- protecting, 39
- slide show, 41
- reviewing videos
 - as you take them, 30
 - camera dock, 70
 - camera screen, 35
 - deleting, 37
 - menu options, 38
 - protecting, 39
 - slide show, 41
- running slide show, 41
- S**
- safety, 94
- screen, camera, ii
- SD/MMC card
 - file names, 96
 - formatting, 55
 - inserting, 11
 - printing from, 62
 - setting storage location, 12
 - slot location, iii
 - storage capacities, 95
- self timer
 - light, i
 - using, 23
 - with videos, 32
- sepia tone pictures, 26
- service and support, telephone numbers, 88
- setting
 - date and time, 8
 - flash, 21
 - language, 54
 - picture quality, 25
 - resolution, 25
 - review menu options, 38
 - self timer, 23, 32
 - storage location, 12
 - video out, 53
- setup mode, 51
- Share button, ii, 47
- shutoff, auto, 97
- shutter
 - problems, 74
 - self timer delay, 32
- shutter button
 - location, i, ii, iv
 - self timer delay, 23
- sleep mode, 97
- slide show
 - changing display time, 41
 - continuous loop, 42
 - problems, 76
 - viewing on camera, 41
 - viewing on television, 43

- software
 - getting help, 87
 - installing, 59
 - upgrading, 93
 - specifications
 - camera, 91
 - camera dock, 70
 - status
 - camera dock, charging
 - lights, 68
 - camera dock, transfer
 - light, 69
 - camera ready light, 84
 - checking on screen, 9
 - screen icons, 10
 - storage location, 13
 - storage capacity, 95
 - strap, wrist, 5
 - support, technical, 88
 - system folder, card, 96
 - system requirements
 - Macintosh OS, 58
 - Windows OS, 57
- T**
- tagging
 - favorites, 50
 - for albums, 27, 31, 40
 - for email, 49
 - for print, 48
 - when to tag, 47
 - taking pictures, 17
 - taking videos, 29
 - telephone support, 89
 - television, slide show, 43
 - thumb rest, ii
 - time, setting, 8
 - timer, shutter delay, 23, 32
 - tips
 - battery guidelines, 15
 - maintenance, safety, 94
 - ReadMe file, 73
 - transfer
 - via camera, 61
 - via camera dock, 69
 - trash can, deleting, 19, 30
 - tripod socket, iv
 - troubleshooting
 - camera, 73
 - camera dock, 71
 - turning camera on and off, 6
- U**
- universal insert, 64
 - upgrading software,
 - firmware, 93

URLs, Kodak web sites, 87
USB (universal serial bus)
 connecting to camera, 61
 connecting to camera
 dock, 65
 connection location, iii
 transferring pictures, 61

V

videos

 checking location, 13
 copying, 44
 date display, 45
 deleting, 37
 emailing tagged, 49
 file naming, 96
 locating on card, 96
 protecting, 39
 record light, i
 reviewing, 35, 36
 storage capacities, 95
 tagging, 31
 taking, 29
 transfer to computer, 61, 69
 viewing, 35

viewfinder

 lens, i
 location, ii
 using camera screen, 18

viewfinder lens, i
viewing
 camera information, 55
 magnified picture, 38
 picture after taking, 19, 35
 picture/video
 information, 45
 pictures and videos, 35
 video after taking, 30, 35

W

Windows OS

 installing software, 59
 system requirements, 57

wrist strap, 5

wrist strap post, i

Z

zoom, digital, 20

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>