

EL-6053

EL-6810

OPERATION MANUAL

NOTICE

SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.

- SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, loss or alteration of stored data, etc.
- The information provided in this manual is subject to change without notice.

In Europe:

This equipment complies with the requirements of Directive 89/336/EEC as amended by 93/68/EEC. Dieses Gerät entspricht den Anforderungen der EG-Richtlinie 89/336/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans la directive 89/336/CEE modifiée par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijn 89/336/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti della direttiva 89/336/EEC come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/EOK, όπως ο κανονισμός αυτός συμπληρώθηκε από την οδηγία 93/68/EOK.

Este equipamento obedece às exigências da directiva 89/336/CEE na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de la Directiva 89/336/CEE modificada por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjen 89/336/EEC så som kompletteras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivet 89/336/EEC i endringen 93/68/EEC.

 
Tämä laite täyttää direktiivin 89/336/EEC vaatimukset, jota on muutettu direktiivillä 93/68/EEC.

Notes

- While operations are described mainly for EL-6053, unless otherwise specified, the text materials apply to both models. In case of need, the operations are described as "For EL-6810 only".
- One of the models described in this manual may not be available in some countries.


Part Names

EL-6053

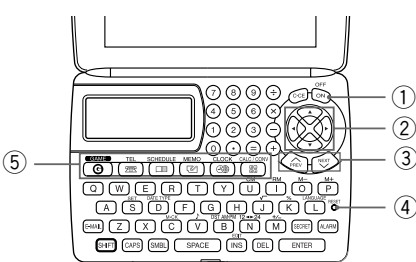


- Power ON/OFF key
- Cursor keys
- Search keys
- RESET switch
- Mode keys

 The following notations are used for key operations.

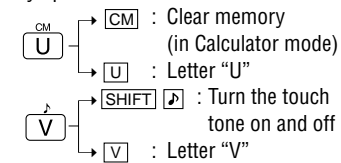

EL-6810

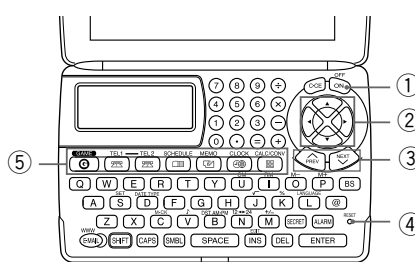 

- Yellow colored functions are operated by pressing [SHIFT] ("SHIFT" is turned on) and the appropriate keys.
- In this manual, only the display symbols necessary for explanation of this product are shown.

Using the Organizer for the First Time

Be sure to perform the following operations before using the Organizer for the first time.

- Remove the isolating film that is affixed to the battery holder on the back of the unit.
- Press the RESET switch with a ball-point pen or similar object. "RESET?" is displayed.
- Press [SHIFT] [ENTER] to initialize the Organizer. After "RESET!" is displayed, Home clock is displayed. (See "Clock Mode".) You have deleted all the memory contents now.

NOTES

- If the Organizer is subjected to strong, extraneous electrical noises or shocks during use, an abnormal condition may occur in which no keys (including [ON]) will respond. Press the RESET switch and press [SHIFT] [ENTER] to delete all the memory contents.
- To minimize battery consumption, the Organizer is designed to automatically turn off when no key has been pressed for approximately 7 minutes.
- The key touch tone is turned on and off by pressing [SHIFT] [T]. When the tone is turned on, "✓" is turned on.

Changing the Guidance Language

Guidance messages can be displayed in 7 languages – English, Dutch, Portuguese, Italian, German, French, and Spanish. After initializing the Organizer, the default setting is English.

To change the language, press [SHIFT] [LANGUAGE] followed by [PREV] or [NEXT] to select the desired language, then press [ENTER].

Entering Characters

- Alphanumeric letters, symbols, and "+ - × ÷ ." can be entered into the dot display area (the 1st line).
- Numbers and some characters (only space, -, and F and P in Telephone mode) can be entered into the number display area (the 2nd and the 3rd lines).
- Basically letters are entered in capital letters ("CAPS" is turned on). To enter small letters, press [CAPS] to turn "CAPS" off.

Entering symbols and letters with an accent mark

- To enter a symbol, press [SMBL] repeatedly until the desired symbol appears:

@#%&¥€()~': _ &<>ß!?!¿

- To enter a letter with an accent mark, press [SHIFT] [SHIFT] to turn "SHIFT LOCK" on, and press the appropriate key repeatedly. (Refer to the "QUICK REFERENCE GUIDE" inside the cover.)
- To turn "SHIFT LOCK" off, press [SHIFT] again.

Making corrections

Move the cursor to the character to be corrected. Enter the correct character to replace the previous one.

Cursor

The cursor () indicates the position for entering a character. Move the cursor with the cursor keys ([] [] [] []).

Inserting characters

Each time [INS] is pressed, a space is inserted at the cursor position to allow you to enter a character.

Deleting characters

 
Press [DEL] to delete the character at the cursor position.

Press [C<CE] to clear all the characters that you have entered and not stored yet.

For EL-6810 only: Press [BS] to delete the character at the left of the cursor.

Clock Mode

Home clock

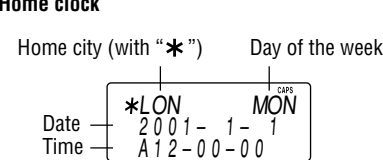

Each time you press [CLOCK], the clock switches between Home and World clocks. (For World clock, "*" is not displayed.)

1. Before setting the clock

- The default setting for the date is "YYYY/MM/DD" (year-month-day). To change the setting to "MM/DD/YYYY" (month-day-year) or "DD/MM/YYYY" (day-month-year):
 - Press [CLOCK] once or twice to display Home clock (with "*").
 - Press [SHIFT] [DATE TYPE].
 - Press [PREV] or [NEXT] to select the desired type.
 - Press [ENTER] to store the new setting.
- To change the 12-hour clock to the 24-hour clock, press [12<24] ("A" or "P" is cleared). Each time you press [12<24], the clock switches.
- In the period of daylight saving time/summer time, press [DST] in advance ("#" is displayed).

2. Setting the clock

- Press [CLOCK] once or twice to display Home clock (with "*").
- Press [SHIFT] [SET] to start setting. The cursor starts to flash on the city name.

Zone No.	Display	City	Zone No.	Display	City
0	TNG	TONGA	10	MOW	MOSCOW
1	WLG	WELLINGTON	11	CAI	CAIRO
2	NOU	NOUMEA	12	PAR	PARIS
3	SYD	SYDNEY	13	LON	LONDON
3.3	ADL	ADELAIDE	14	AZO	AZORES ISLANDS
4	TYO	TOKYO	15	-2H	2hrs behind LON
5	HKG	HONG KONG	16	RIO	RIO DE JANEIRO
6	BKK	BANGKOK	17	COS	CARACAS
6.3	RGN	YANGON	18	NYC	NEW YORK
7	DAC	DHAKA	19	CHI	CHICAGO
7.3	DEL	NEW DELHI	20	DEN	DENVER
8	KHI	KARACHI	21	LAX	LOS ANGELES
8.3	KBL	KABUL	22	ANC	ANCHORAGE
9	DXB	DUBAI	23	HNL	HONOLULU
9.3	THR	TEHRAN	24	MID	MIDWAY

3. Using World clock

- Press [CLOCK] once or twice to display World clock (without "*").
- Press [PREV] or [NEXT] to select the desired city.

4. Changing the cities between Home and World clocks

You can change the home city for a city in another time zone without adjusting the stored correct time.

- Press [CLOCK] once or twice to display World clock (without "*").
- Press [PREV] or [NEXT] and select the desired city to be set as the new home city.
- Press [SHIFT] [SET] to change the cities between Home and World clocks.
 - The previous home city is now set as the world city (without "*").
- Press [CLOCK] to check the home city.
 - The selected city in step 2 is set as the home city (with "*").
- Press [CLOCK] to recheck the world city, and press [PREV] or [NEXT] to select the new world city, if needed.

5. Setting daylight saving time (DST: summer time)

- Press [CLOCK] once or twice to display Home or World clock.
- Press [DST].
 - "#" is displayed. The time is set 1 hour ahead. To clear DST, press [DST] to clear "#". The time is set 1 hour behind.

Notes

- DST can be set independently in either Home or World clock.
- When DST is set for one world city, it is used for all cities displayed in World clock.

Telephone Mode

Telephone mode is composed of two files, TEL1 ("1" is turned on) and TEL2 ("2" is turned on). Use these files for convenience, e.g. business and private files.

A telephone entry consists of name, address, E-mail address, and number fields.

For EL-6810 only:

- Moreover, EL-6810 has the web address (URL) field that follows the E-mail address field.
- Instead of pressing [TEL] once or twice in the following operations, press [TEL1] or [TEL2] once.

Storing telephone entries

- Press [TEL] once or twice to display the Telephone mode screen (in this case, TEL1).

NAME? ¹ CAPS
- Enter the name, e.g. SMITH [SPACE] ROBERT, and press [ENTER].
- Enter the address, e.g. 18 [SPACE] EAST [SPACE] ROAD, and press [ENTER].
- Enter the E-mail address, e.g. SROB [SMBL] harpsec.com (to enter "@") SHARPSEC.COM, and press [ENTER].
 - The E-mail address is automatically entered in small letters.

For EL-6810 only:

- To enter "@", simply press [] instead of [SMBL].
- After entering the E-mail address and pressing [ENTER], enter the web address (URL), e.g. WWW.SHARP-USA.COM, and press [ENTER].

Schedule Mode

Schedule mode is used for storing schedule details (36 characters or under), date and time (year, month, day, hour, and minute). In the 1st line the same characters are allowable as in Telephone mode.

1. Storing schedule entries

- Press [SCHEDULE] to display the Schedule mode screen.

SCHEDULE? ^{CAPS}
- Enter the details and press [ENTER].
- Enter the date and time.
 - The types of date and time are the same as the types set for the clock.
 - To enter a single-digit date or time, enter "0" and the digit (e.g. "02").

Memo Mode

Notes or other pieces of information that are not appropriate for Telephone or Schedule mode can be entered for convenience. In the 1st line the same characters are allowable as in Telephone mode. In the 2nd and the 3rd lines you can enter numbers, -, and space. (36 characters or under can be entered in each line.)

Storing memo entries

- Press [MEMO] to display the Memo mode screen.

MEMO? ^{CAPS}

Notes for storing and recalling entries

- When the memory is full, "MEMORY FULL!" appears briefly, and the entry cannot be stored.
- When the symbol "▶" or "◀" is turned on, more information exists. Press [] or [] to switch the display.

Checking details of entries in Telephone mode

- To display each field on the 1st line, follow the symbol "▼" or "▲" and press [] or []. (The symbol above the 1st line shows each field.)

Recalling entries – Telephone, Schedule, Memo –

First press the desired mode key.

[NEXT] : Recalls entries in forward order

[PREV] : Recalls entries in reverse order

Sequential search

Press [NEXT] or [PREV] in each mode.

Direct search

- Enter the first characters (7 characters or under) of the person's name, schedule details, or memo item, and press [NEXT] or [PREV]. Then press [NEXT] or [PREV] to continue performing a direct search.

6. Setting alarms

The Organizer has 3 kinds of alarm:

- Daily alarm beeps every day at the alarm time (for 1 minute), when "☞" is turned on.
- Hourly alarm beeps every hour when minutes reach "00", when "☞" is turned on.
- Schedule alarm ... beeps at the time for all the schedule entries (for 1 minute), when "☞" is turned on. (Refer to "Schedule Mode".)

Press any key to stop the alarm beeping.

Setting/Changing the daily alarm time

- Press [CLOCK] once or twice to display Home clock (with "*").
- Press [ALARM] to display the daily alarm screen. (The display differs between the 12-hour and 24-hour clock.)

ALARM
A 1 2 - 0 0
- Press [SHIFT] [SET].
- Enter the time.
 - The daily alarm time is set.

Turning the alarms on and off

An alarm sounds only when the respective symbol (☞, ☞, or ☞) is turned on.

Display Home clock (press [CLOCK] once or twice) and press [ALARM] to display the daily alarm screen.

Each time you press [ALARM] while the daily alarm screen is displayed, the combination of symbols switches.

Note

- Alarms sound even when the Organizer is turned off.

Telephone Mode

- Enter the phone number, and then the fax number if needed, e.g. 012-3456-7890.

*NUMBER? ¹ CAPS
2 - 3 4 5 6 - 7 8 9 0
3 4 5 6 - 7 8 9 1
- Press [F] [SPACE] [SPACE] 3456-7891, and press [ENTER].
- "STORED!" appears briefly, then the Telephone mode screen is displayed. The telephone entry is now stored.

Field	Number of characters	Allowable characters
The 1st line: Name, address, E-mail address (and web address (URL) for EL-6810 only)	36 characters or under	Alphabetic letters, numbers, symbols, "+ - × ÷ .", space
The 2nd and the 3rd lines: Phone number		Numbers, space, -, F (Fax), P (Pager)

Notes

- The symbol "NAME", "ADDRESS", or "E-mail" (or "URL" for EL-6810 only) is turned on while entering in each field.
- To skip entry of an address, E-mail address, (web address (URL)), or number, press [ENTER] when "ADDRESS?", "E-MAIL?", ("URL?") or "NUMBER?" is displayed. However, entering a person's name cannot be skipped.

Schedule Mode

- Press [ENTER] to store in the memory.

Notes

- Schedules for the following dates can be stored: January 1901 to December 2098.
- If an attempt is made to store an entry without a date or time, or with an invalid date or time, "ERROR!" appears briefly. Enter the correct date and time and press [ENTER].

2. Alarm for Schedule mode

When the schedule alarm ("☞") is turned on, it is set for all the schedule entries. Beeping sounds for 1 minute when the time for a schedule entry is reached. Press any key to stop the alarm. The schedule alarm cannot be set for an individual entry.

Editing

- Recall the entry to be edited.
- Press [EDIT]. The cursor starts to flash.
 - In Telephone mode press [ENTER] several times to display each field (the address field and so on).
- Press [▶], [◀], [▲], or [▼] to move the cursor to the position to be edited.
- Enter, insert, or delete characters (refer to "Entering Characters").
 - To cancel editing, press [CCE].

 
- Press [ENTER] several times (until "STORED!" appears briefly) to finish editing and to store the entry.

Deleting

- Recall the entry to be deleted.
- Press [DEL].
 - "DELETE?" is displayed.
 - To cancel the deletion operation, press [CCE].
- Press [ENTER] to delete the entry.

Calculator Mode

The Organizer can calculate numbers of up to 10 digits. Press [CALC/CONV] several times to display the Calculator mode screen (Calculator → Currency conversion → Unit conversion → Calculator...).



Calculation examples

Example	Operation	Display
(-24+2)÷4=-5.5	[CCE] 24 [÷] 2 [÷] 4 [÷]	-5.5
34+57=91	34 [÷] 57 [÷]	91.
45+57=102	45 [÷]	102.
	(The addend becomes a constant.)	
68×25=1700	68 [×] 25 [×]	1700.
68×40=2720	40 [×]	2720.
	(The multiplicand becomes a constant.)	
200×10%=20	200 [×] 10 [%]	20.
9÷36=25%	9 [÷] 36 [%]	25.
200+(200×10%)=220	200 [÷] 10 [%]	220.
500-(500×20%)=400	500 [÷] 20 [%]	400.
4 ⁶ =(4 ³) ² =4096	4 [÷] [÷] [÷] [÷] [÷]	4096.
1/8=0.125	8 [÷]	0.125
25×5=125	[CM] 25 [×] 5 [M+]	125.
-)84+3=85	84 [÷] 3 [M-]	28.
+)68+17=85	68 [÷] 17 [M+]	85.
	[RM]	182.
√25=9=4	25 [÷] 9 [÷] [√]	4.
1234567890×145=179012344050	1234567890 [×]	ERR
	145 [÷]	17.90123440
	[CCE]	17.90123440
	(17.90123440×10 ¹⁰ =179012344000)	

Calculation

Be sure to press [CCE], [CCE], and [CM] to clear the display and memory before performing a calculation.

Note

- When ⊖, ⊖, ⊖, or ⊕ is pressed, the respective symbol, +, -, ×, or ÷ is displayed. (In the examples in this manual, these symbols are not described.)

If an error occurs

If the calculation result or the integer section in the numerical value in the memory exceeds 10 digits or if a number is divided by zero (0), an error occurs ("ERR" is displayed).

Currency/Unit Conversion Mode

1. Setting a currency rate

- Press [CALC/CONV] several times to display the currency conversion mode screen (refer to "Calculator mode").

Example: 1 CAD (Canada dollars) = 0.66 USD (US dollars)
- Press [NEXT] [NEXT] [NEXT] to change the display and press [SHIFT] [SET]. The initial character of "CAD" starts to flash.
 - You can change each currency name by entering characters (up to 4 in each) and using [▶], if needed.
- Press [ENTER]. "0" starts to flash.
- Enter the rate (up to 10 digits).

CAD → USD 0.66
- Press [ENTER] to store in the memory.

2. Converting currency/unit

- You need to set the conversion rate before making the currency conversion.
- Example: Convert 500 CAD into USD using the rate that you have set.
- Display the screen: "CAD → USD".
 - Enter the value to be converted.

500
 - Press [▶] to convert CAD into USD.

CAD → USD 330.

 - To convert in reverse order (e.g. 200 USD into CAD), enter 200 and press [◀].
 - You can use the unit conversion in the same manner. You cannot change the units or the rates for units.
 - The conversion result may have a slight error as a result of rounding off the number (e.g. up to 2 decimal places for currency conversions). Use the conversion result for reference.

Game Mode

Press [GAME] to play the game "ALPHA ATTACK".

For EL-6810 only: Each time you press [GAME], the display switches between "BLACKJACK" and "ALPHA ATTACK".

ALPHA ATTACK

Type in characters (A to Z, 0 to 9) displayed on the 1st line to clear them. The game is divided into 20 levels in speed.

- Press [GAME] to display the following Game mode screen.

ALPHA ATTACK 01 Level
- Enter the level number (2 digits from 01 to 20).
 - 01: slow, 20: fast
- Press [ENTER] to start a game.

EY3KW 01
- Press the same key as the first character at the left end of the 1st line. (In this case, press keys in the order: E → Y → 3 → K → W.)
 - Pressing the correct key in the correct order deletes the character.
 - When 12 characters are displayed in each level, the game continues in the faster level (up to 20).
 - When no more characters can be displayed, the game is over. The Game mode screen with the level when the game is over is displayed.

For EL-6810 only: BLACKJACK (Twenty-one)

Make your "hand" (the total of the numbers on the cards) close to 21, without going over 21.

- Press [GAME] to display the following Game mode screen.

BLACKJACK 30
- Press [ENTER] to start a game. The left 2 cards are dealt for you. (One is facing up and one is facing down.)

Your chips
- Agree the left-displayed maximum bet (up to 10) or enter the fewer bet. Pressing [▶] also can bet to the maximum.

Your hand The dealer's hand

J 2 8 4

10 20

Your bet Your chips
- Press [SPACE] to see your hand. Each time you press [SPACE], a new card is dealt.
 - "J", "Q", and "K" are counted as 10.
 - "A" can be counted as 1 or 11.
 - When first 2 cards are "A" and a face card ("J", "Q", or "K"), your hand is "BLACKJACK".
- Press [ENTER] to stop being dealt and hold your hand. The dealer's hand and the results are displayed.
 - When you win, your total flashes and your bet is doubled.
 - When you win with "BLACKJACK", your bet is tripled.

Your total The dealer's total

J 2 8 3 2 K 4

20 19

20 20

Your bet Your chips
- Press [ENTER] and display the Game mode screen.
 - When you have no more chips to bet, the game is over.
 - To quit the game, press [CCE] or any mode key. Your chips are stored for the next time.
 - To return your chips to 30, press [DEL] and [ENTER] on the Game mode screen.

Memory Storage

1. Checking memory storage

- Press [TEL] ([TEL1] or [TEL2]), [SCHEDULE], or [MEMO] to display "NAME?", "SCHEDULE?", or "MEMO?".
- Press [SHIFT] [M<C>K].

CAPACITY 6254

Notes

- The Organizer can store up to the following bytes in the memory (excluding the Calculator mode memory).
 - EL-6053: 7671 bytes/EL-6810: 66838 bytes
- 1 byte is required per character (in the 1st line) for telephone, schedule, and memo entries.
- 1 byte is required for 2 digits in the number part (in the 2nd and the 3rd lines) of telephone and memo entries. (When there is an odd number of digits in a number entry, the last digit occupies 1 byte.)

- In addition to the memory size for characters (in the 1st line) and numbers (in the 2nd and the 3rd lines), each entry requires the following memory size:
 - Telephone entry EL-6053: 5 bytes EL-6810: 6 bytes
 - Schedule entry 8 bytes (including date and time)
 - Memo entry 3 bytes

2. Deleting all the memory contents

Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time".

- To cancel the deletion operation, press [CCE] instead of [SHIFT] [ENTER] in step 3.

Secret Function

1. Registering a password and storing secret entries

Up to 6 characters can be registered as the password.

- One password is valid for Telephone, Schedule, and Memo modes.

If the password is forgotten, you cannot delete the password only. You have to delete all the memory contents. (Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time".) As a safeguard, make a written record of the password.

Registering a password

- Press [TEL] ([TEL1] or [TEL2]), [SCHEDULE], or [MEMO] to display "NAME?", "SCHEDULE?", or "MEMO?".
- Press [SECRET].

PASSWORD? CAS
- Enter the password (case sensitive), e.g. ABC.
- Press [SECRET] to register it.
 - The display returns to the screen in step 1 with the symbol "☛".
 - If "ERROR!" appears briefly, a password has already been registered. Enter the correct password or delete the password and all the memory contents.
- Press [SECRET] [SECRET] to turn Secret function on. "☛" disappears.

Storing secret entries

- Enter characters in Telephone, Schedule, or Memo mode when "☛" is not displayed (Secret function is on).
 - When "☛" is displayed, press [SECRET] [SECRET] to turn Secret function on.
- Press [SECRET] before pressing [ENTER] to store. "☛" appears.
- Press [ENTER] to store a secret entry in the memory.
 - "STORED!" appears briefly, and the display returns to the mode screen without "☛" (Secret function is on).
 - You cannot display the secret entry until you turn Secret function off.

2. Turning Secret function on and off

When Secret function is on, "☛" is not displayed.

- You can display, edit, or delete entries except secret entries.
- You can enter new entries as secret or non-secret.

When Secret function is off, "☛" is displayed.

- You can display, edit, or delete secret entries only. (You cannot display non-secret entries.)
- You cannot enter a new entry.

Turning Secret function off

- Press [TEL] ([TEL1] or [TEL2]), [SCHEDULE], or [MEMO] and check that "☛" is not displayed.
- Press [SECRET]. "PASSWORD?" is displayed.
- Enter the password and press [SECRET].
 - "☛" is displayed and you can display secret entries.
 - If you enter an incorrect password, "ERROR!" appears briefly. Follow the above steps and enter the correct password.
 - Even when Secret function is turned off, it will be automatically turned on ("☛" will disappear):
 - A) when you press [GAME], [CLOCK], or [CALC/CONV],
 - or B) after the power is turned off manually or automatically.

Turning Secret function on

- Press [TEL] ([TEL1] or [TEL2]), [SCHEDULE], or [MEMO] and check that "☛" is displayed.
- Press [SECRET].

The password is displayed. Memorize it again.
- Press [SECRET] again.

"☛" disappears and you cannot display secret entries.

3. Changing the password

- Turn Secret function off ("☛" appears).
- Press [SECRET]. The password is displayed.
- Press [EDIT].

The initial character of the password starts to flash.
- Enter, or edit characters and make a new password.
- Press [SECRET]. The new password is now registered.

Caring for Your Organizer

- Do not carry the Organizer in the back pocket of slacks or trousers.
- Do not drop the Organizer or apply excessive force to it.
- Do not subject the Organizer to extreme temperatures.
- Since this product is not waterproof, do not use it or store it where fluids can splash onto it.
- Clean only with a soft, dry cloth.
- Use only a SHARP approved service facility.

Replacing Battery

Battery used

Type	Model	Quantity
Lithium battery	EL-6053: CR2025	1
	EL-6810: CR2032	

- Improper replacement of the battery may change or lose the memory contents.
- Be sure to write down any important information stored in the memory before replacing the battery.
- Make sure the power is turned off before replacing the battery.
- Do not press [OFF] until the battery replacement procedure is completed.

1. Precautions

Since improper use of the battery may cause leakage or explosion, strictly observe the following instructions.

- Insert the battery with the positive side (+) correctly facing up.
- Never throw the battery into a fire because it might explode.
- Keep the battery out of the reach of children. Because the battery in the Organizer was installed at the factory, it may become depleted before the specified expiration time is reached.

2. Battery replacement

If the display becomes dim and difficult to read, immediately replace the battery with a new one. Continued use of the Organizer with an exhausted battery can alter or clear the memory contents.

For EL-6053 only:

- Do not use a metallic object to pry out the battery. The Organizer will be subjected to an electrical shock and all the memory contents will be cleared.
- Complete the replacement of the battery within 1 minute, otherwise all the memory contents may be cleared.

For EL-6053 only:

- Press [OFF] to turn the power off.
- Loosen the screw and remove the battery holder cover on the back of the unit. (Slide the cover off.)
- Remove the exhausted battery by prying it out from the holder with the corner of the holder cover. (Fig. 1)
- Install a new battery with the positive side (+) facing up into the holder.
- Replace the holder cover and secure it with the screw.
- Press [OFF] to turn the power on.
 - If nothing appears on the display, press the RESET switch and press [CCE].
 - Do not press [SHIFT] [ENTER]. Pressing [SHIFT] [ENTER] clears all the memory contents.
- Set the clock.

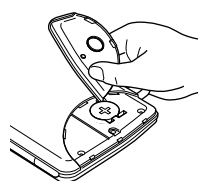 


Fig. 1

For EL-6810 only:

- Press [OFF] to turn the power off.
- Loosen the screw and remove the battery holder cover on the back of the unit. (Slide the cover off.)
- Install a new battery with the positive side (+) facing up into the upper or lower empty holder. (Fig. 1)
- Remove the exhausted battery by prying it out with a ball-point pen. (Fig. 2)
- Replace the holder cover and secure it with the screw.
- Press [OFF] to turn the power on.
 - If nothing appears on the display, press the RESET switch and press [CCE].
 - Do not press [SHIFT] [ENTER]. Pressing [SHIFT] [ENTER] clears all the memory contents.
- Set the clock.

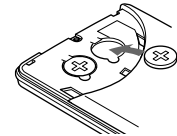 


Fig. 1

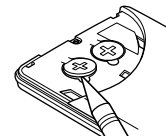 


Fig. 2

Specifications

- Model:** EL-6053 EL-6810
- Product name:** Electronic Organizer
- Display:** 3 lines of 12 digits
- Memory capacity:** EL-6053: 7671 bytes EL-6810: 66838 bytes
- Clock mode:**
 - Accuracy:** ± 60 seconds/month at 25°C/77°F
 - Display:** Year, month, day, day of the week, hour, minute, second, AM/PM
 - Clock function:** 12-hour/24-hour format (switchable), 3 kinds of date type (switchable), world clock function, daylight saving time (summer time) display, daily alarm, hourly alarm
- Telephone mode:** Entering and recalling of telephone entry (name, address, E-mail address, and phone number; and web address (URL) for EL-6810 only)
- Schedule mode:** Entering and recalling of schedule entry (details, year, month, day, hour, and minute), schedule alarm
- Memo mode:** Entering and recalling of memo entry
- Calculator mode:** 10 digits (with calculation status symbols), arithmetical calculations, percentage, square root, memory calculation, etc.
- Currency/unit conversion mode:** 5 kinds of currency conversion (editable) and 9 kinds of unit conversion
- Game mode:** EL-6053: 1 game EL-6810: 2 games
- Power consumption:** EL-6053: 0.003 W EL-6810: 0.003 W
- Operating temperature:** 0°C to 40°C (32°F to 104°F)
- Power supply:** 3V --- (DC), lithium battery EL-6053: CR2025 × 1 EL-6810: CR2032 × 1
- Auto-power off:** Approx. 7 minutes
- Battery life:** Approx. 2 years at ambient temperature of 25°C/77°F, assuming the following daily use: 30 minutes display, alarm sounding for 20 seconds and key touch tone turned on/off 100 times.
- Weight (including battery):** EL-6053: Approx. 88 g (0.194 lb.) EL-6810: Approx. 105 g (0.231 lb.)
- Dimensions:**
 - EL-6053:**
 - Open: 125.0 mm (W) × 168.5 mm (D) × 8.3 mm (H) 4-29/32" (W) × 6-5/8" (D) × 5/16" (H)
 - Closed: 125.0 mm (W) × 86.3 mm (D) × 12.0 mm (H) 4-29/32" (W) × 3-13/32" (D) × 15/32" (H)
 - EL-6810:**
 - Open: 139.0 mm (W) × 174.7 mm (D) × 9.5 mm (H) 5-15/32" (W) × 6-7/8" (D) × 3/8" (H)
 - Closed: 139.0 mm (W) × 89.5 mm (D) × 13.7 mm (H) 5-15/32" (W) × 3-17/32" (D) × 17/32" (H)
- Accessories:** 1 lithium battery (installed), operation manual

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>