

Sunbeam

SALON FINISH

HAIRSTYLING IRON WITH
CERAMIC TECHNOLOGY

Instruction Booklet
HS9500

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	2
Features of your Hairstyling Iron	4
Using your Hairstyling Iron	6
Help Line	6
Care and Cleaning	7

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM HAIRSTYLER

- This hairstyler must not come into contact with water or any other liquid.
- Always switch off your hairstyler at the power outlet and remove the plug when not in use.
- Do not store your hairstyler near tubs, basins, baths or other vessels containing water or any other liquid.
- When the hairstyler is used in the bathroom, unplug it after use as the proximity of water presents a hazard even when the unit is switched off.
- Do not touch heating plates when in use as they will become extremely hot.
- Do not use this hairstyler if hair is treated with flammable products such a hair spray.

NOTE - This styler reaches very high temperatures very quickly. Once the styler is plugged in and switched on, **DO NOT** touch the plates with your fingers. **DO NOT** allow the plates to touch the skin.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.


Ensure the above safety precautions are understood.

Sunbeam's Safety Precautions continued

- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.


Features of your Hairstyling Iron with Ceramic Technology

Finger rest

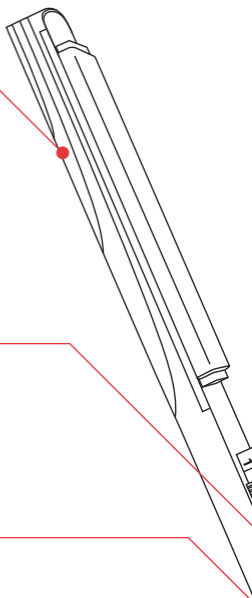

**Variable temperature
control**

Handle

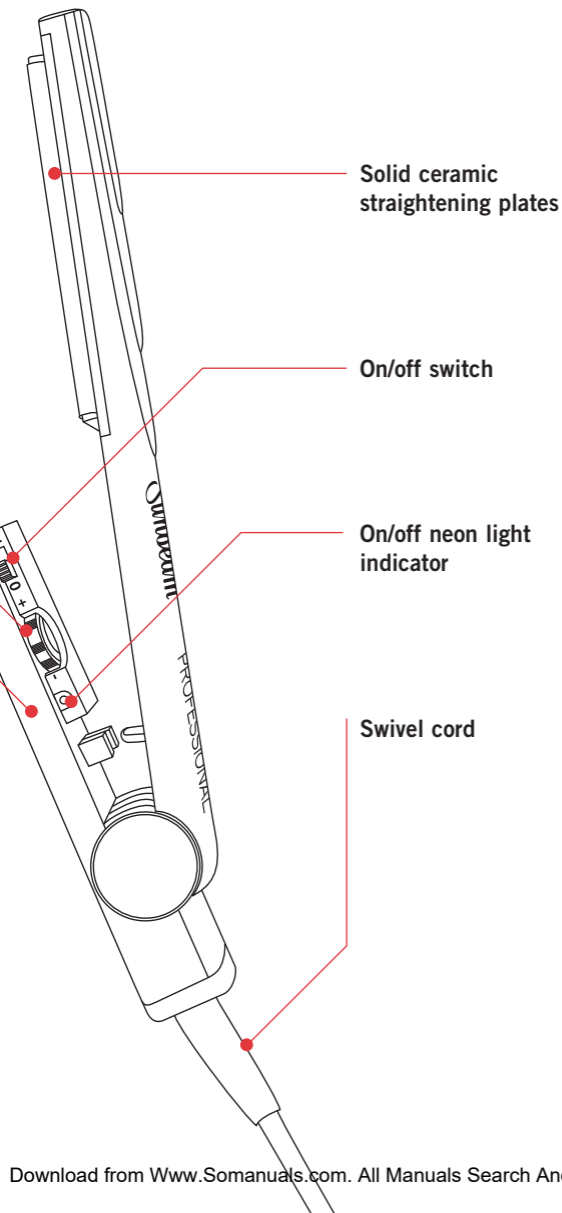

**Solid ceramic
straightening plates**

On/off switch

**On/off neon light
indicator**

Swivel cord

Using your Styler

Ceramic Heater

Your hairstyler has a ceramic heater. This can be seen working by the high intensity red indicator light. The light comes on to show it is working and remains static for a few seconds. It then flashes rapidly and when the maximum temperature is reached the light will slow to a steady flash.

If the styler is being used on a high heat setting and you switch to a lower setting, the light will go out until the plate temperature reduces. It will then work as normal.

- Before you start to style your hair, comb through so that there are no tangles.
- For best results, hair must be completely dry.
- Plug in to a suitable supply and switch the unit on. The neon light will come on.
- There is no need to pre heat the styler. The styler will get very hot very quickly so do not touch the plates with your fingers.
- Use the variable heat control to adjust the heat to suit your hair type. Turn the dial clockwise to increase the heat and anticlockwise to decrease. Use a lower heat on young or fine hair and a higher temperature on thick or curly hair.
- The maximum temperature reached is 200 degrees and the minimum is 150 degrees.
- Apply a styling lotion. We recommend PPS professional products.
- Beginning at the back, use clips to section the hair. Take a section approximately 5cms wide and comb or brush it through. Working from root to the ends, place the section between the plates and squeeze the handle shut. Be careful not to touch your skin.
- Hold the styler in place for 3 to 5 seconds depending on your hair type (3 seconds for fine hair and up to 5 seconds for thicker hair).

- Once the hair is heated, carefully slide the styler along the direction of separated hair making sure that the hair is heated and straightened all the way to the ends.
- Select another section of hair and repeat the process until all the hair has been straightened.
- Finish with a few drops of D Frizz Smootheez Serum from PPS.
- Switch off the appliance and remove the plug from the power outlet. Allow to cool completely before storing.

Creating flicks

- Once the hair is heated, as you work towards the end of the section of hair, lift the styler up and out to create flicks.
- For a more choppy look, choose pieces at random.

Auto off function

For added safety, your hairstyler will automatically switch off after approximately 40 minutes. If you want to continue styling, simply use the on/off switch. Switch to the off position and then immediately to the on position.

Please note that this is an added safety feature. Always switch off after use and unplug from the mains.

Care and Cleaning

- After use, remove the plug from the power outlet and allow the hairstyler to cool before storing.
 - The ceramic plates and the outside of the styler can be wiped with a soft cloth.
 - Do not wrap the cord around the appliance when not in use.
 - Store in a dry place.
-

Help Line

If you have any additional questions about using the Hairstyling Iron with Ceramic Technology, please call the Sunbeam help line in Australia on 1800 025 059. In New Zealand, please call 0800 786 232.

'Sunbeam', is a registered trademark of Sunbeam Corporation.
Made in China. Due to minor changes in design or otherwise,
the product may differ from the one shown in this leaflet.
Backed by Sunbeam's 2 Year Replacement Guarantee and
National Service Network.

© Copyright. **SUNBEAM CORPORATION LIMITED 2004.**

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other
Sunbeam appliance, visit www.sunbeam.com.au or
contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232.

Sunbeam

Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au

Sunbeam

is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2004.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>