



VBP3900

VIDEO IN A BAG SYSTEM WITH
5" LCD MONITOR & DVD PLAYER

Notice:

This Product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

SAFETY PRECAUTION

For safety reasons, when changing video media, it is recommended that the vehicle is not in motion, and that you do not allow children to unfasten seat-belts to change video media or make any adjustments to the system. Enjoy your entertainment system but always remember-safety of all passengers remains the number one priority.

IMPORTANT NOTICE

It is unlawful in most jurisdictions for a person to drive a motor vehicle which is equipped with a television viewer or screen that is located in the motor vehicle at any point forward of the back of the driver's seat, or that is visible, directly or indirectly, to the driver while operating the vehicle. In the interest of safety, this system should never be installed where it will be visible, directly or indirectly, by the operator of the motor vehicle.

A. Introduction

Thank you for selecting the VBP3900 "Video in a Bag" System. The system's main features include a 5" Liquid Crystal Display (LCD) monitor and a DVD player. The system utilizes the latest state of the art electronics and is designed for use in vehicles, hotels, offices or your home. The VBP3900 Video in a Bag is constructed to provide years of reliable, trouble-free service. The system is compact so that you can take it with you anywhere and is designed for quick and easy installation. One additional monitor* can be purchased and added to the system setup allowing you to utilize two monitors at once. The connection of the additional monitor is plug and play. Please read the entire instruction manual supplied with this product prior to operation. The documentation will assist you in installing the system properly to obtain the best equipment performance. All manuals should be stored for later use.

***NOTE:** The AC power supply that comes with the VBP3900 can only supply the main unit. If an additional monitor is used, you must use the power supply that is supplied with it.

B. Cautions and Warnings

1. Placement

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not place the set on an unstable cart, stand, tripod, bracket or table to prevent it from falling. Keep the unit away from strong magnets, heat sources, direct sunlight, excessive dust. If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit. When you move it from a cold to a warm location, wait for about one hour before operating the unit, or remove the disc and leave the unit turned on until the moisture evaporates.

2. Installation

Ensure that the LCD Monitor, DVD Player, Bag are installed in accordance with the instructions and illustrations provided in this manual. When the main unit is in the bag, ensure the latch of the bag are fastened to prevent the unit from falling. The “S” hooks and all straps must be fastened correctly to secure the system in the vehicle in the event of an accident. Operate the “Video in a Bag” System with the bag open to ensure proper ventilation of the monitor and the DVD player. The system is intended to be mounted for rear seat viewing only. Do not use the system in the front seat while operating your vehicle.

3. Power

This system **MUST** be powered from the type of switched (Acces-

sory) power indicated on the marking label (i.e. not directly from the car battery). Power should be applied to the unit when the ignition key is in the Run and/or Accessory positions. To prevent battery discharge, disconnect the “Video in a Bag” System jack from the cigarette lighter socket when the unit is not in use. Use only the supplied power cable matching this set to avoid electric hazards. Always disconnect the power source first and then the jack from the system.

4. Object and Liquid

Do not push objects of any kind into the system through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.

5. Disassemble

Do not attempt to disassemble the cabinet. There is a risk of electric shock and/or exposure to Laser Radiation. Contact qualified service personnel if your system is in need of repair.

6. Cleaning Unit

When cleaning, make sure the system is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

7. Disc

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper,


tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources such as hot air ducts. Do not touch the surface of disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

C. Contents

1. 1 x Monitor & DVD Player Combo
2. 1 x AC to DC Adapter
3. 1 x Cigarette Lighter Adapter
4. 1 x Remote Control
5. 1 x Mounting Bag with 4 Straps
6. 1x Storage bag
7. 1 x Instruction Manual

D. Power Source

1. *Powering the system indoors* (Refer to Figure 1)

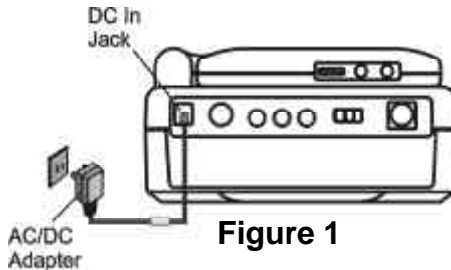

Unzip the lower compartment of the bag and take out the AC to DC adapter. Plug one end of the AC to DC adapter into the DC 12V jack on the left side of the main unit, then plug the other end into the 110V AC power receptacle.

2. Powering the system in the vehicle (Refer to Figure 2)

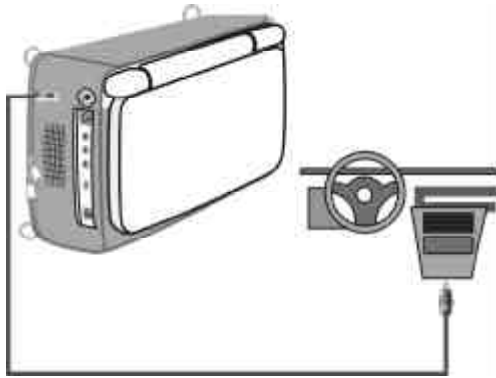


Figure 2

Unzip the lower compartment of the bag and take the cigarette lighter adapter. Plug one end into the DC 12V jack on the left side of the main unit, then plug the other end into the cigarette lighter socket.

E. Installation

1. *Installing the system onto the seat back in a car*

(Refer to Figure 3)



Figure 3

- 1) Unfasten the velcro strap on the rear of the bag. Fold the strap into the shape of a triangle and fasten it to the bag.
- 2) Take one of the supplied straps from the lower compartment. Connect the latch to one of the upper metal rings on the mounting bag. Connect the "S" hook to the other upper metal ring and place the loop over the headrest. Adjust the strap until the bag is firmly secured.
- 3) Take one of the supplied straps from the lower compartment of the bag, and connect the latch to the lower metal ring on the left side of the bag. Attach the "S" hook to the same ring after looping the strap around the seat rail. Repeat this process for the right side. In some vehicles, it may be necessary to attach the "S" connector to the rail directly, as it may not be long enough to reach back to the ring.
- 4) Adjust the straps tightly so that the bag is secured.

2. Installing the system between the driver/passenger seat
(Refer to Figure 4)

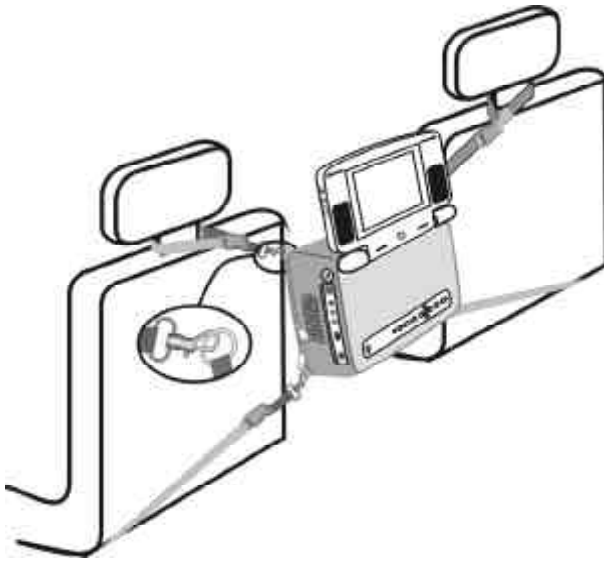


Figure 4

- 1) Take one of the supplied straps from the lower compartment of the bag, and connect the latch to the upper side metal ring on the left side of the bag. Attach the "S" hook to the same ring after looping the strap around the headrest of the driver's seat. Repeat this process for the right side (Passenger Seat).
- 2) Take another strap and connect the latch to lower metal ring on the left side of the bag. Attach the "S" hook to the same ring after looping the strap around the driver's seat rail. Repeat this process for the right side. In some vehicles, it may be necessary to attach the "S" connector to the rail directly, as it may not be long enough to reach back to the ring.
- 3) Adjust the straps tightly so that the bag is secured.

4) Unzip the bag and flip down the front flap. Ensure the retaining Velcro strap of the bag is fastened to prevent the unit from falling out. Swing the monitor upwards and adjust the screen for the desired viewing angle.

3. *Installing the system on the back seat in a car*

(Refer to Figure 5)

There is no need to remove the four straps from the bag as they are not used in this installation.

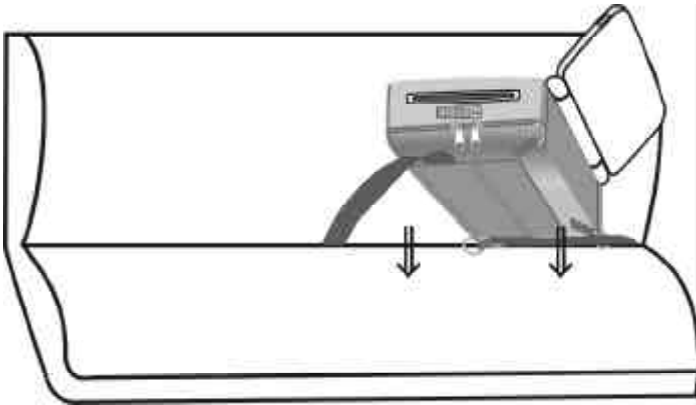


Figure 5

Ensure the rear strap of the bag is attached to the upper Velcro strip on the back of the bag. Carefully place the system (front facing up) on the back seat. Guide the vehicle's safety belt through the rear piece of the bag. Then secure and adjust the safety belt so that the system is not free to move around. Swing the monitor upward and adjust the screen for the desired viewing angle. Ensure the retaining strap of the bag is fastened to prevent the unit from falling out.

F. Controls, Indicators, and Connectors

1. Unit View (Refer to Figure 6)

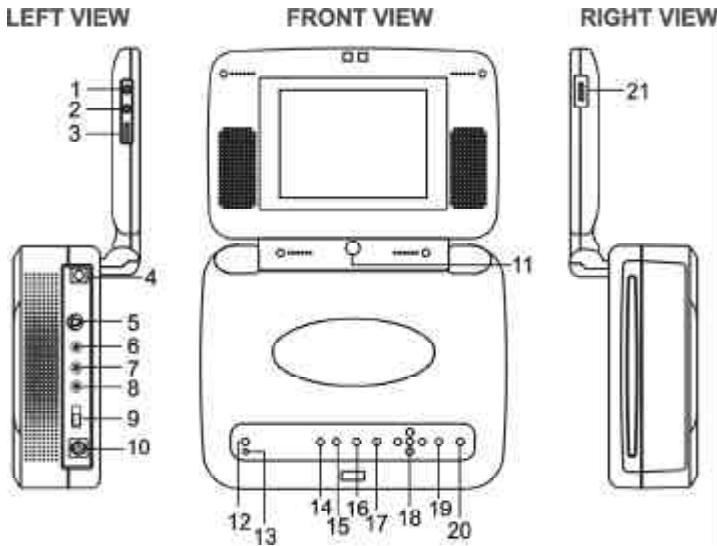


Figure 6

- | | |
|------------------------------|--------------------------------------|
| 1) Headphone Jack 1 | 12) Power Button |
| 2) Headphone Jack 2 | 13) Power Indicator |
| 3) Volume Up/Down Thumbwheel | 14) Menu Button |
| 4) DC 12V power Jack | 15) Previous Button |
| 5) S Video Output Jack | 16) Play Button |
| 6) Video Jack | 17) Next Button |
| 7) Audio L Jack | 18) Up/Down/Left/Right/Enter Buttons |
| 8) Audio R Jack | 19) Stop Button |
| 9) Input/Output Switch | 20) Eject Button |
| 10) Monitor Port | 21) Brightness Up/Down Thumbwheel |
| 11) Remote Control Sensor | |

2. Remote Control View (Refer to Figure 7)

- 1) Power Button
- 2) Display Button
- 3) Angle Button
- 4) Subtitle Button
- 5) Audio Button
- 6) Zoom Button
- 7) Up/Down/Left/Right / Enter Buttons
- 8) Menu Button
- 9) Return Button
- 10) A-B Button
- 11) Forward Button
- 12) Reverse Button
- 13) Slow Button
- 14) Stop Button
- 15) Eject Button
- 16) Number Button
- 17) Setup Button
- 18) Repeat Button
- 19) Skip- Button
- 20) Skip+ Button
- 21) Play Button
- 22) Pause Button

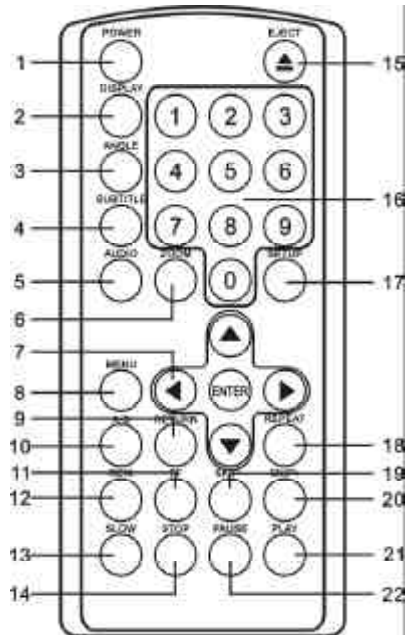


Figure 7

G. Playing A DVD

After connecting power to the unit, press the power button on the main unit momentarily. Insert the disc into the slot on the right side of the main unit, the unit will load the disc and start playing automatically; if there's a disc inside unit, press the POWER button, the unit will start playing automatically.

1. Basic Operation

POWER	Turn the unit on/off the unit
EJECT	Eject/load the disc
PLAY	Start Play
SLOW	Play at 1/2, 1/4, 1/8 or 1/16 times speed
PAUSE	Still Picture
STOP	(1 time) Stop at the present playing point / (2 times) Stop playing
NEXT	Go to the next chapter, track or scene during play back
PREVIOUS	Go back to the preceding chapter, track or scene during play back
FORWARD	Scan forward at 2, 4, 8, 16, or 32 times speed
REVERSE	Scan backward at 2, 4, 8, 16 or 32 times speed
UP/DOWN/LEFT /RIGHT	Used for Menu Navigation
ENTER	Execute item or setting
NUMBERS	Select item or setting Selecting password or other numeric functions Return to the previous selection
RETURN	Display the root menu of the disc
MENU	Repeat playing title, chapter or track
REPEAT A-B	Repeat a specific portion from point A to point B of the disc
DISPLAY	Display information (title, chapter, or track, time, etc.).
ANGLE	Change the angles on the scene *Not all DVDs contain this feature
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language
ZOOM	Enlarge an image to 2, 3, or 4 times the original
SETUP	Display the setup menu for selection of vari- ous video and audio functions and exit the setup menu.

2. MENU

A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playing to display the menu, and press ENTER or PLAY to start playing. Some DVDs only allow you to select disc playback options using the DVD menu.

3. DISPLAY *(Display contents vary from disc to disc.)*

1) PLAYING TIME AND REMAINING TIME

- a. During playback press 'DISPLAY' first time to display the current Title Number (1), the total Number of Titles (2), the current Chapter Number (3), the total Number of Chapters (4), and the Playing elapsed Time for the title (5). The heading will disappear automatically after 3 seconds if no buttons are pressed.

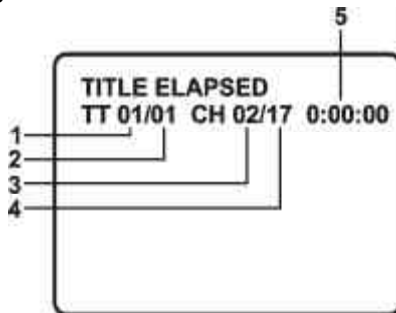


Figure 8. Title, Chapter Number, and Time Screen Display

- b. Press 'DISPLAY' again to display the Remaining Time of the title. The heading will disappear automatically in about 3 seconds.



Figure 9. Title Remaining Time Screen Display

- c. Press 'DISPLAY' the 3rd time to display the Elapsed Time for the chapter. The heading will disappear automatically in about 3 seconds.

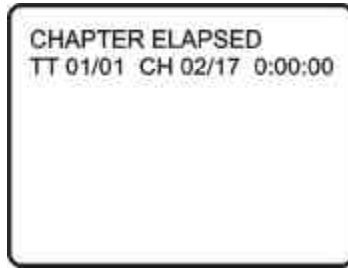


Figure 10. Chapter Elapsed Time Screen Display

- d. Press 'DISPLAY' the 4th time to display the Remaining Time for the chapter. The heading will disappear automatically after 3 seconds.

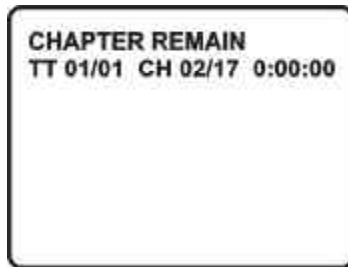


Figure 11. Chapter Remaining Time Screen Display

- e. Press 'DISPLAY' a 5th time to exit, 'DISPLAY OFF' will be displayed and will disappear automatically after 3 seconds.

2) ANGLE

During playback of a disc, press 'ANGLE' to display the available angles for discs containing multi-angles*, with the current angle number (1) and the total number of angles (2) displaying. Press 'ANGLE' to select another angle, then press again to exit and return to the normal viewing angle. The angle display will disappear automatically if the 'ANGLE' button is not pressed again within 3 seconds.

***NOTE:** Not all discs contain this feature

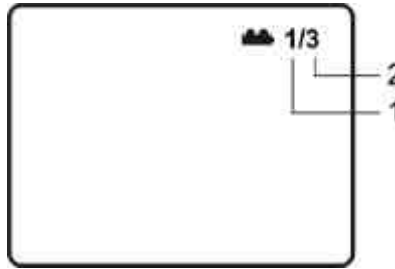


Figure 12. Angle Screen Display

3) SUBTITLE

During disc playback press 'SUBTITLE' to select the subtitle language you desire*, with the current Subtitle Language Number (1) and the total Number of Subtitle Languages (2) displayed. If there are multiple languages press 'SUBTITLE' again to select another subtitle language. To turn subtitles OFF, press the 'SUBTITLE' button until 'SUBTITLE OFF' is displayed. The Subtitle display will disappear automatically if the 'SUBTITLE' button is not pressed again within 3 seconds.

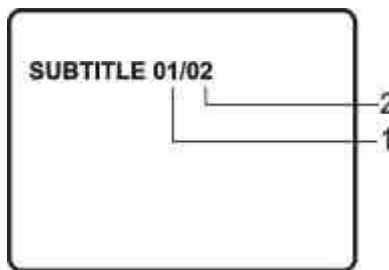


Figure 13. Subtitle Screen Display

*Some DVDs only allow access to this function through the DVD menu.

4) AUDIO

During playback press 'AUDIO' to select the audio language you desire*, with the current Audio Channel Number (1) and the total number of Audio Channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the 'AUDIO' button is not pressed within for 3 seconds.

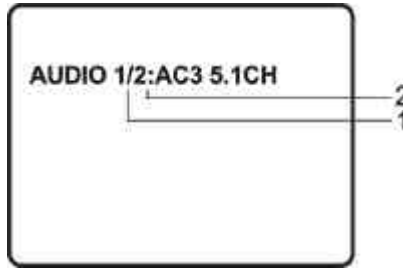


Figure 14. Audi Language Screen Display

* Some DVDs only allow access to this function through the DVD menu.

5) ZOOM

During playback press 'ZOOM' to enlarge the picture by 2x, 3x or 4X with the current zoom multiple.(1)Press "zoom"first time ,the picture will be enlarged 2X.(2)Press "zoom"second time ,the picture will be enlarged 3X.(3)Press "zoom"3rd time ,the picture will be enlarged 4X.(4)Press "zoom"4th time ,the picture will be rusum normal.

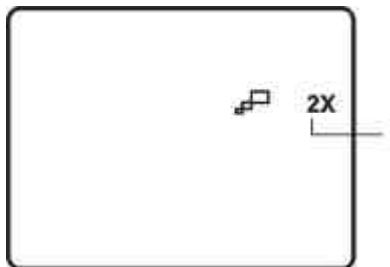


Figure 15. ZOOM Screen Display

6) A-B REPEAT

- a. During playback press first time 'A-B' to set the Starting Point A.

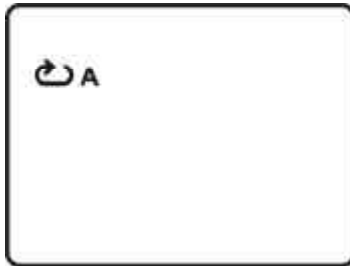


Figure 16. A-B Repeat Starting Point Screen Display

- b. Press 'A-B' second time to set the Ending Point B and the player will repeatedly play the part between Point A and Point B

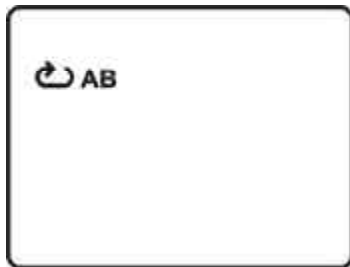


Figure 17. A-B Repeat Ending Point Screen Display

- c. Press A-B a third time to cancel A-B repeat and resume playback from point A.



Figure 18. A-B Repeat Cancelled Screen Display

7) REPEAT

- a. During playback press 'REPEAT' once to repeatedly play the current chapter.

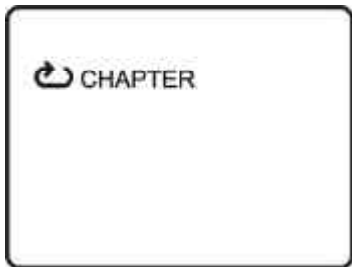


Figure 19. Chapter Repeat ON Screen Display

- b. During playback press 'REPEAT' again to repeatedly play the current title.



Figure 20. Title Repeat ON Screen Display

- c. During playback press 'REPEAT' a 3rd time to repeat all Chapters and Titles.



Figure 21. Title Repeat ON Screen Display

d. Press "REPEAT" 4th times ,then resum normal.



Figure 22. Repeat Off ON Screen Display

4. PLAYING AUDIO CDS

During playing back, When playing an audio CD. Press the DISPLAY button on the remote to display the DISPLAY Banner. The options below show you what happens when you press the DISPLAY button.

a. The current track and playing time of that track will display on the screen.



Figure 23. SINGLE ELAPSED Screen Display

b. Press 'DISPLAY' first time and *SINGLE ELAPSED* appears along with the current track playing the amount of time left.

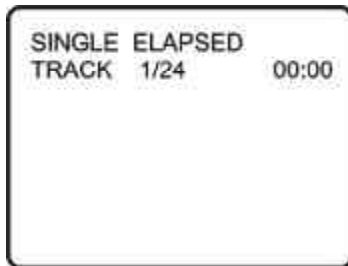


Figure 26. SINGLE Elapsed Screen Display

b. Press 'DISPLAY' second time and *SINGLE REMAIN* appears along with the current track playing the amount of time left.



Figure 24. SINGLE REMAIN Screen Display

c. Press 'DISPLAY' third times and *TOTAL ELAPSED* appears along with the current track playing and the total time that the CD has been playing.



Figure 25. TOTAL ELAPSED Screen Display

d. Press 'DISPLAY' fourth times and *TOTAL REMAIN* appears along with the current track playing and the amount of time remaining on the CD.

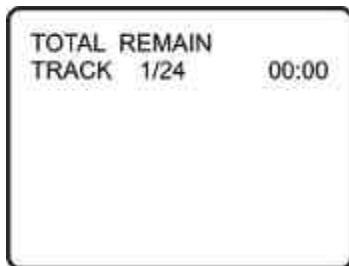


Figure 26. TOTAL REMAIN Screen Display

e. Press 'DISPLAY' fifth times and " *DISPLAY OFF*" will appear momentarily then disappear. The CD time Information will not be displayed.

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *TRACK*- repeats the track that is playing.
- *ALL*- repeats the disc that is playing.
- *Repeat OFF*

As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

5. PLAYING MP3 DISCS

MP3 is a format for storing digital audio. An audio CD-quality song is compressed into the MP3 format with very little loss of audio quality while taking up much less disc space. CD-R /RW discs that have been encoded in MP3 format are compatible with this system.

Playback modes:

FOLDER (normal playback)

SINGLE

REPEAT ONE (repeat playback of a song)

REPEAT FOLDER (repeat playback of a specific folder)

Insert an MP3 CD, the DVD video player will initialize the disc and the directory (folder) will be shown on the TV screen.

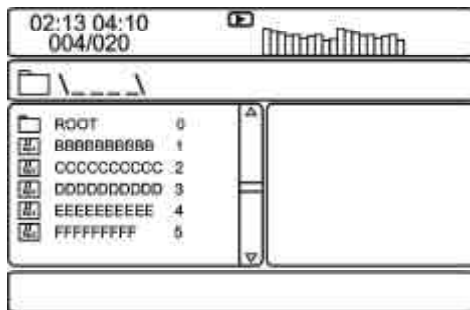


Figure 27. MENU Screen Display

When an MP3 disc is inserted into the unit, the menu screen appears automatically. You can use the menu screen to change folders and songs. The system plays the songs in the order they were burned onto the disc.

1. Press the ▲ or ▼ button to choose a folder from the folder list on the left side of the screen.
2. Press ENTER to select the highlighted folder. The songs available under the folder.
3. Use ▲ or ▼ button to choose a song from the list. Press ENTER to select and begin playback of the highlighted song.

SKIPPING SONGS

Use the ►► (NEXT) button to move to the next song. Press the ◀◀ (PREVIOUS) button to move to the beginning of the previous song.


USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- SINGLE
- REPEAT ONE
- REPEAT FOLDER
- FOLDER

Pressing REPEAT the 5TH time, resume normal playback. As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

NOTICE

- “” sign in front of a file name indicates that this is a folder, not an MP3 file.
- “MP3” sign in front of a file name indicates that this is a MP3 file.

6. Playing JPG file

- 1) Loading the JPG Disc into tray.
- 2) Select JPG file by pressing “LEFT/RIGHT” key.
- 3) You can preview the JPG file by pressing “Play” or “OK”.
- 4) The photo will be rotated 90C during the preview to left, If press “Left key” ,Vice verse, press “Right” key.
- 5) When browseing the photos, you can reverse the photo horizontally by pressing “Up” key,or you can reverse the photos vertically by pressing “Left” key.
- 6) When you browse the JPG file, press “display”, there will be different refresh mode below.
 - a. Press “display” first time, “WIPE TOP” display on the screen, the picture will refresh from top side to bottom side.
 - b. Press “display” 2nd time, “WIPE BOTTOM” will display on the screen, the picture will refresh from bottom side to top side.
 - c. Press “display” 3rd time, “WIPE LEFT” will display on the screen, the picture will refresh from left side to right side.
 - d. Press “display” 4th time, “WIPE RIGHT” will display on the screen, the picture will refresh from right side to left side.
 - e. Press “display” 5th time, “DIAGONAL WIPE LEFT TOP” will display on the screen, the picture will refresh from left top to right bottom.
 - f. Press “ display ” 6th time, “DIAGONAL WIPE RIGHT TOP” will display on the screen, the picture will refresh from right top to left bottom.
 - g. Press “display” 7th time, “DIAGONAL WIPE LIFT BOTTOM” will display on the screen, the picture will refresh from left bottom to right top.
 - h. Press “display ” 8th time, “DIAGONAL WIPE RIGHT BOTTOM” will display on the screen, the picture will refresh from right bottom to left top.
 - i. Press “display” 9th time, “EXTEND FROM CENTER H” will display on the screen, the picture will refresh from horizontal center to both sides.
 - j. Press “display” 10th time, “EXTEND FROM CENTER V” will display on the screen, the picture will refresh from vertical center to both sides.

- k. Press “display” 11th time, “COMPRESS TO CENTER H” will display on the screen, the picture will refresh from top and bottom still to center.
 - l. Press “display” 12th time, “COMPRESS TO CENTER V” will display on the screen, the picture will refresh from right and left to center.
 - m. Press “display” 13th time, “WINDOW H” will display on the screen, the picture will refresh from four window’s top side to bottom side.
 - n. Press “display” 14th time, “WINDOW V” will display on the screen, the picture will refresh from four window’s left side to right side.
 - o. Press “display” 15th time, “WIPE FROM EDGE TO CENTER” will display on the screen, the picture will refresh from 4 edges to center.
- 7) When preview the file, press “ANGLE, SUBTITLE, AUDIO, UMBER, AB, RETURN, REW/FF, SLOW” a hand icon will come out on display.
- 8) Press “Stop” when browse JPG file, “SLIDE SHOW” “MENU” will display on the screen.
- 9) When browse the picture, press “Stop”, the picture will become a small one laid out on the screen. You can select the picture you desired by UP/DOWN/LEFT/RIGHT/ENTER key.
- 10) Then, press “Play” or “OK”, will preview the left top picture.

G. SETUP

Press 'SETUP' to display the Main screen of the SETUP Menu on the screen. Press 'SETUP' again to exit the SETUP Menu and the unit will resume it's last playback or player mode.



Figure 28. Main SETUP Menu Screen

- 1) Press "Setup", the 'GENERAL SETUP' will display on screen.
 - a. Select TV DISPLAY using UP/DOWN, and then press RIGHT to enter the submenu. Select the TV display mode on the screen using UP/DOWN, and press ENTER to confirm the setting. Press LEFT to return.



Figure 29. TV DISPLAY Screen Display

- * NORMAL/PS: When the player is connected to a normal TV, and a wide picture is shown on the full screen.
- * NORMAL/LB: When the player is connected to a normal TV, and a wide picture is shown on the screen with a black strip at both the top and bottom of the screen.
- * WIDE: When the player is connected to a wide screen TV, a wide picture is shown on the full screen.

- b. Select 'TV Type' using UP/DOWN, and then press the RIGHT button to enter the submenu. Choose TV Type using UP/DOWN and then press ENTER to confirm the setting. Press the LEFT button to return.



Figure 30. TV Type Screen Display

- c. Select 'ANGLE MARK' using UP/DOWN, and then press the RIGHT button to enter the submenu. Choose Angle Mark on or off displayed on the screen using the UP/DOWN and then press ENTER to confirm the setting. Press the LEFT button to return.



Figure 31. ANGLE MARK Screen Display

* ON: The screen will show angle mark.
(*If angle option is available).

OFF: The screen will not display the Angle Mark

- d. Select 'SCREEN SAVER' using UP/DOWN key, and then press the RIGHT button to enter the submenu. Choose TV Type using UP/DOWN and then press ENTER to confirm the setting. Press the LEFT button to return.



Figure 32. SCREEN SAVER Display

*ON: have screen saver

*OFF: no screen saver

***NOTE:** The DVD player will enter the Screen Saver mode about 5 minutes if no disc or “open” Mode.

2) When no disc inside the player select “Preference Page” by using LEFT/RIGHT, press ENTER to enter the Preference page.



Figure 33. Preference Page Menu Screen

a. Select “Audio” by UP/DOWN Key, then press Enter you can change the Audio Language by pressing LEFT/RIGHT key. After choosing the propered Audio Language, press ENTER or LEFT back to the root menu.



Figure 34. Preference Audio Language

- b. Select “Subtitle” by UP/DOWN Key, then press Enter you can change the Subtitle by UP/DOWN key.



Figure 35. Preference Subtitle Language

When complete “Subtitle” Setting, press Enter or LEFT return the root Menu.

- c. Select “Disc Menu” by UP/DOWN Key, then press Enter you can change the Disc Menu by UP/DOWN key.



Figure 36. Preference Disc Menu Language

When complete “Disc Menu” Setting, press Enter or LEFT return the root Menu.

- d. Select “Parental” by UP/DOWN Key ,then press Enter you can change the Parental by UP/DOWN key.



Figure 37. Parental Preference Screen Display

When complete “Parental” Setting, press Enter or LEFT return the root Menu

- e. Select ‘DEFAULTS’ using UP/DOWN, then press RIGHT to enter the submenu. Press ENTER to make the setting return to the factory-set mode.

NOTE: The parental setting is not affected by the default function.



Figure 38. Loading Factory Setting

- 3) When no disc inside the player, select “password” using LEFT/RIGHT, then press RIGHT to enter the submenu .



Figure 39. PASSWORD CHANGE Menu

Press ‘ENTER’ to enter the Password Change Page. Input the Old Password or the Default Password, the New Password, and the Confirmed New Password. Press ‘ENTER’ to confirm the change.

NOTE: For 1st time use the default password is 3308.



Figure 40. PASSWORD VERIFY Input Screen Display

NOTE: The Default Password is **3308**. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs can not.

H. Playing a Video Game

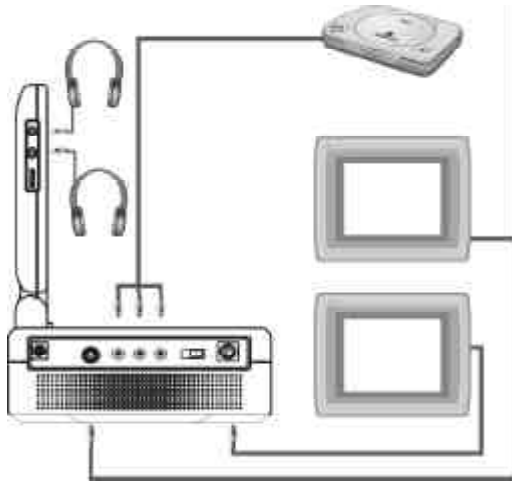


Figure 41

Plug the video output from your game system into the yellow VIDEO jack and the AUDIO L and AUDIO R into the applicable jacks on the left side of the main unit.,Place the Input/Output switch to the IN Position. Adjust the volume control and the brightness control on the monitor for individual preference.

I. Wired Headphone (Refer to Figure 41)


Optional wired headphones may be used with the "Video In a Bag"System. Simply plug in the headset to either HEADPHONE 1 jack or HEADPHONE 2 jack on the left side of the monitor.

Note: Using HEADPHONE 1 jack will disconnect the internal speakers.

J. External Monitor

1. Using the **MONITOR PORT** (Refer to Figure 418 and Figure 42)

This system can support 1 additional monitor by using the cigarette lighter adapter in the vehicle. (Please contact an Audiovox dealer for the additional monitors) . **(Note:** The AC to DC adapter can power only the main unit). Connect the DIN cable on the additional monitor to the MONITOR port on the left side of the main unit . After plugging in the main unit, DC 12V power, Audio/Video and IR signals will all be supplied through DIN cable to the additional monitor.

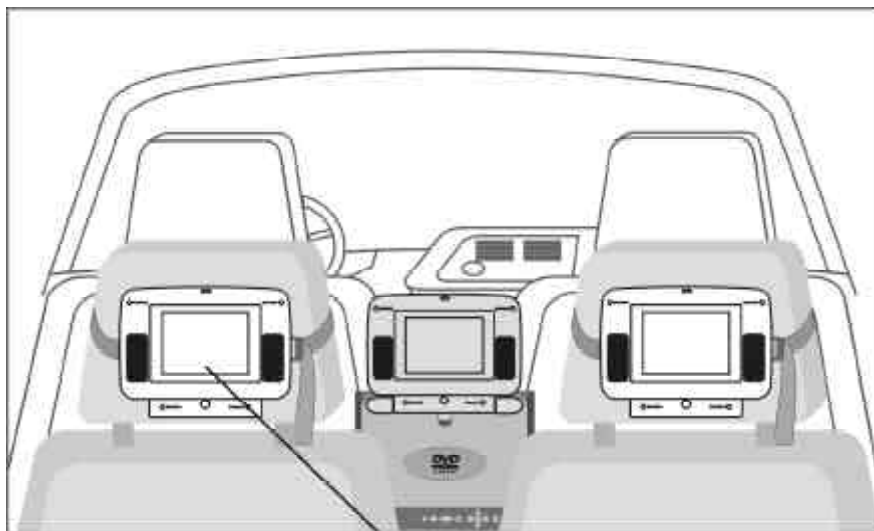

Optional Second Video Monitor

Figure 42

2. Using the AV outputs (Refer to Figure 8)

Match the color-coded plugs to the appropriate jacks on the left side of the main unit: Yellow (VIDEO) to Yellow, White (AUDIO L) to White, and Red (AUDIO R) to Red, and switch the In/out switch to the “out” position.

3. Using S VIDEO output (Refer to Figure 8)

Connect the S VIDEO jack on the left side of the main unit to the S VIDEO connector on your TV for a high quality DVD picture.

K. Specification

Disc format: DVD/CD/MP3

Color system: NTSC

Screen size: 5”

Resolution 960 X234 (pixels)

Video output: 1.0 Vp-p/75 Ohm, unbalanced

Video S/N: Better than 35 dB

Audio output: 2 x 1 W

Audio S/N: Better than 35 dB

Power source: DC 11 V to 16 V

Power consumption: 22 W

Operating temperature: 5~40°C (41~104°F)

Storage temperature: -20~60°C (4~140°F)

Operating humidity: 10~75%

Dimensions (W x D x H): 8.34 inches x 6.61 inches x 3.26 inches

212 mm x 168mm x 83mm



90 DAY LIMITED WARRANTY

Applies to Audiovox Mobile Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to tapes, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AEC 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 • 1-800-645-4994

CANADA : CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

128-5495C



For Customer Service
Visit Our Website At

www.audiovox.com

Product Information, Photos,
FAQ's Owner's Manuals

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>