 
 








F4F315-T User Manual



F4F315-T

    P73240





To Test Straight Twisted Pair (Shielded or Unshielded) Cables

1. Plug one end of the cable into the modular jack on the master unit and the other end into the modular jack of the remote terminator.
2. As soon as the Power is turned on, the LEDs on the remote terminator will start to scan each pair one by one. If the cable wiring is intact, the LEDs corresponding to each pair will illuminate green. If the LEDs illuminate green first and red afterwards or do not illuminate, the cable wiring is bad.
3. Straight-through vs. Crossover: If the LED lights up from top to bottom (1&2, 3&6, 4&5, 7&8), the cable is wired in a straight-through configuration. If the pairs are crossed, the LED will not light up from top to bottom; it will light up in a different order depending on how the pairs are crossed.
4. For RJ45 cables that have only 2 pairs (4 conductors) wired please refer to the LED guide printed on the remote terminator. In those applications only 2 of the LEDs will need to illuminate green to indicate a good cable.
5. For shielded cable, you may test the shielding by pushing the GND (Ground) button on. The pair LEDs and GND LED should all illuminate green except for pair 3 & 6. If any LEDs illuminate green first and red afterwards or do not illuminate, the shielding is bad.

 
Caution:

1. Do not connect the cable tester to a live circuit.
2. Make sure the 9-Volt alkaline battery is installed properly in the battery compartment.


To Test Coax Cable (BNC)

1. Plug one end of cable to the BNC socket of master unit and the other end to the BNC terminator included with the F4F315-T.
2. Push the Power button to the ON position on the master unit. If the BNC LED illuminates, the cable is bad.
3. If the cable passes step 2, then push the BNC test button on the side of the master unit. The BNC LED will illuminate green if the cable is good. If it illuminates red, the cable is bad.

Pair Configurations For Cables with Modular Connectors

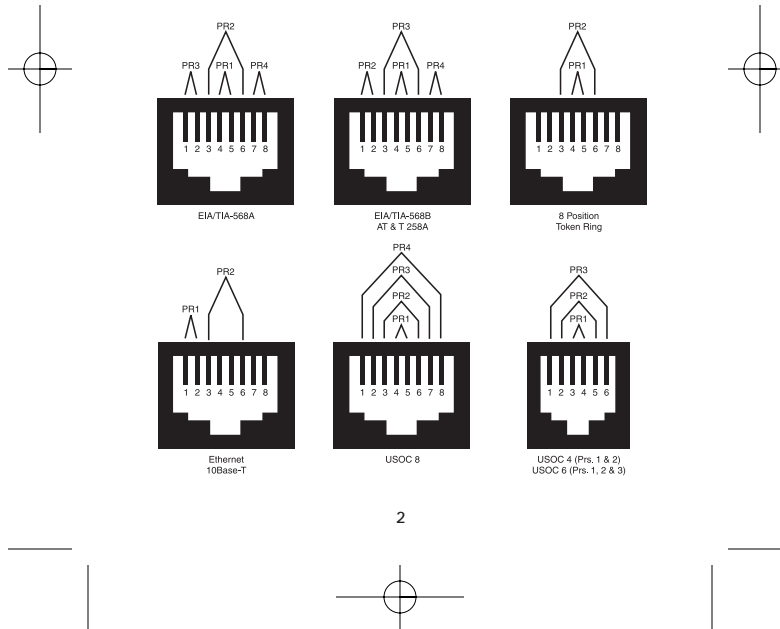

Product Detail

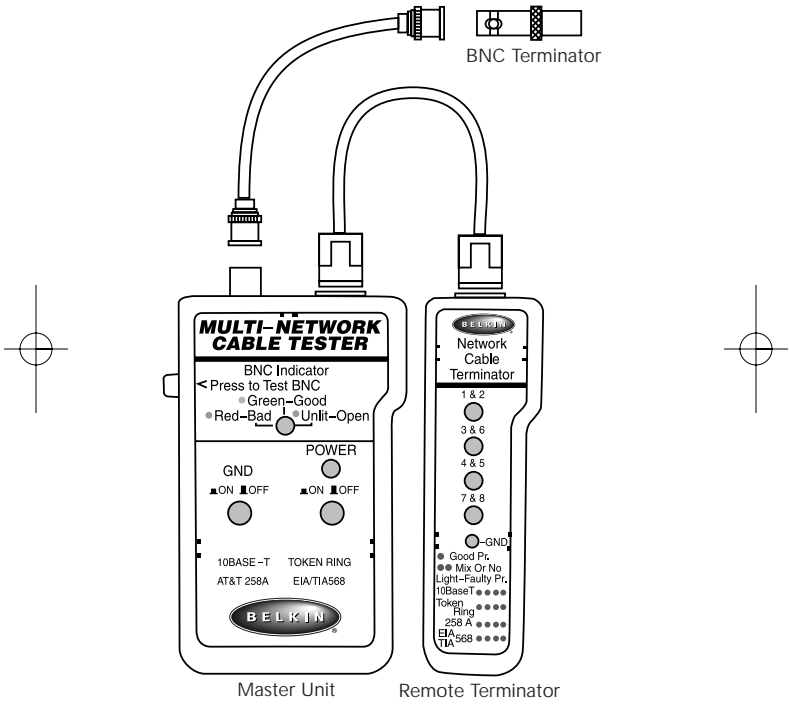 



belkin.com

Belkin Components

501 West Walnut Street
Compton • CA • 90220 • USA
Tel: 310.898.1100
Fax: 310.898.1111

 
 
 
Belkin Components, Ltd.

 
 
 
Unit 13 • Gatelodge Close • Round Spinney
Northampton • Northants • NN3 8RX • UK
Tel: +44 (0) 1604678300
Fax: +44 (0) 1604678330

Belkin Components B.V.

Diamantlaan 8 • 2132 WV
Hoofddorp • The Netherlands
Tel: +31 (0) 235698765
Fax: +31 (0) 235612694

©1999 Belkin Components. All Rights Reserved. All Trade Names are
Registered Trademarks of Respective Manufacturers Listed.





Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>