


ADDONICS TECHNOLOGIES

Model: AEIDDSAU, AEIDDSAUWP (read only mode)

The internal SATA / USB DigiDrive supports Type I, II CF Cards, CF Micro drive, SD, SDHC, miniSD (with adapter), Trans flash, SD HS (Secure Digital High Speed), MMC Cards (4-bit and 8-bit modes), RS-MMC, MMC-Micro, MMC Plus, Smart Media, xD picture card- both H and M types, Memory stick, Memory stick PRO, MS Extreme III Type media, MS PRO, HS (4-bit mode).

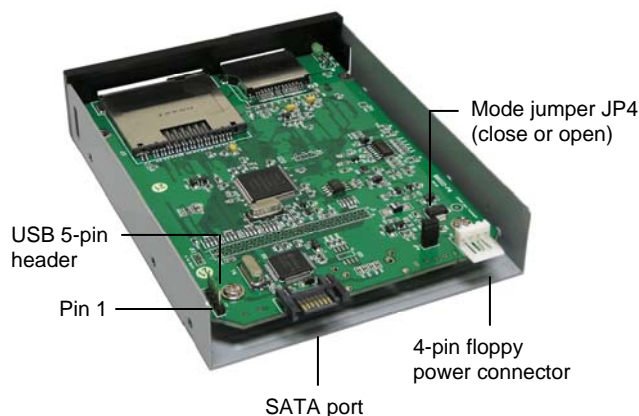

Mode Jumper (JP4):

Note: Only applies on SATA connection

I. Setting up the device in SATA mode

- a. Connect a 4-pin floppy power cable from PC to the internal SATA / USB DigiDrive.
- b. Attach SATA cable from internal SATA / USB DigiDrive to the PC SATA port.

The tables show drive icon and media detection behavior basing on the mode switch setting and the type of SATA port the internal SATA / USB DigiDrive is connected to.

Open mode – force flash media to become Fixed disk type

	Drive icon	Media Detection
Hot Swap SATA port	Icon appears only when flash media is inside	Flash media is automatically refresh and detected when added or removed
Non hot swap SATA port	Icon appears only when flash media is inside	Flash media detection requires manual refresh in Device Manager

Close mode – force flash media to become Removable disk type

	Drive icon	Media Detection
Hot Swap SATA port	NOT RECOMMENDED	
Non hot swap SATA port	Icon always there with or without flash media inside the DigiDrive	Flash media automatically detected when added or remove

II. Setting up the device in USB Mode

- a. Connect a 4-pin floppy power cable to the internal SATA / USB DigiDrive.
- b. Attach USB 5-pin header from internal SATA / USB DigiDrive to USB header on PC.
- c. The drive icon appears only when flash media is inside the internal SATA / USB DigiDrive. The drive icon will disappear and reappear during media change.

Note for **AEIDDSAUWP**: If an unformatted flash media is use, no drive icon will show up in My Computer.

Media Priority

When more than one media is inside the internal SATA / USB DigiDrive during bootup, the media that gets detected first is according to the priority shown below

1. Compact Flash
2. Smart Media / xD Picture card
3. MMC / SD
4. Memory Stick

TECHNICAL SUPPORT

Email: <http://www.addonics.com/sales/query/>
 Internet: <http://www.addonics.com>

Technical Support (8:30 am to 6:00 pm PST)
 Phone: 408 453-6212
 Email: <http://www.addonics.com/support/query/>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>