

12" Digital Photo Frame Instructional Manual



Table of Contents

Frame Close-up	04
Remote Control Close-up	05
Package Contents	06
Getting Started	06
Operations	
Main Menu	07
Transferring Files from your PC/Mac to the Frame's Internal Memory	08
Managing Files in the Digital Frame's Internal Memory	09
Photo Function	
Setup a Photo Slideshow	10
Photo Set-up	10
Video Function	
Playing Videos	11
Video Set-up	12
Music Function	
Playing Music	13
Music Set-up	14

Table of Contents

Calendar Function

Calendar Set-up	15
-----------------------	----

Auto On / Off Function	16
-------------------------------------	----

Alarm Function	17
-----------------------------	----

Format Internal Memory / Memory Cards	18
--	----


Technical Support	20
-------------------------	----

Radio and TV Interference Statement	21
---	----

Warranty	22
----------------	----


Frame Close-Up

1. 12" viewing area
2. Quality black frame
3. Built-in speakers
4. Menu selection buttons
5. Power On / Off switch
6. USB port (mini-B)
7. USB port
8. Power adapter port
9. Memory card slots
10. Frame stand
11. Wall mount holes

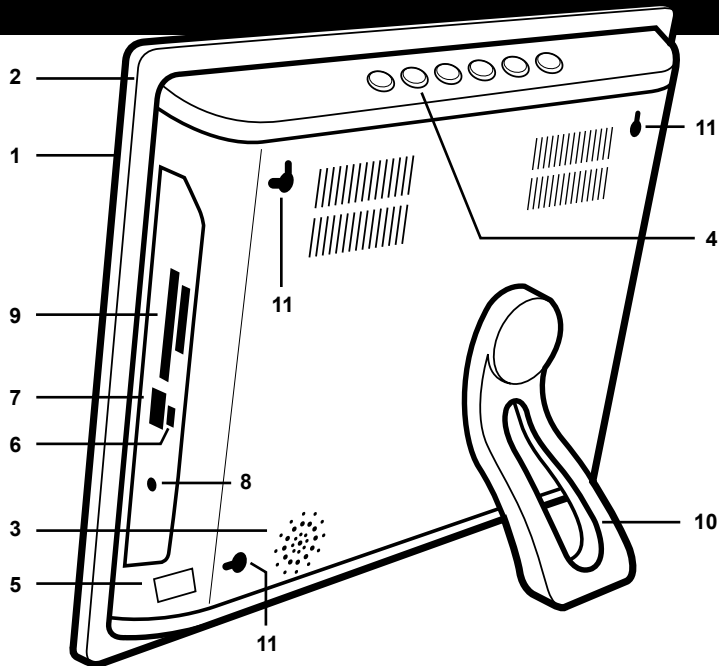

Remote Control Close-Up

1. **Power On/Off**
2. **Volume + / Volume -**
3. **Mode** - Select between photo, music and video modes
4. **Exit** - Returns to the previous menu
5. **Menu** - Takes you to the main menu
6. **Play / Pause**
7. **Up, Down, Left, Right Arrows** - Use arrow keys to navigate your way through various menus
8. **Enter**
9. **Mute**
10. **Previous / Rewind**
11. **Next / Fastforward**
12. **Setting**
13. **Time / Date**

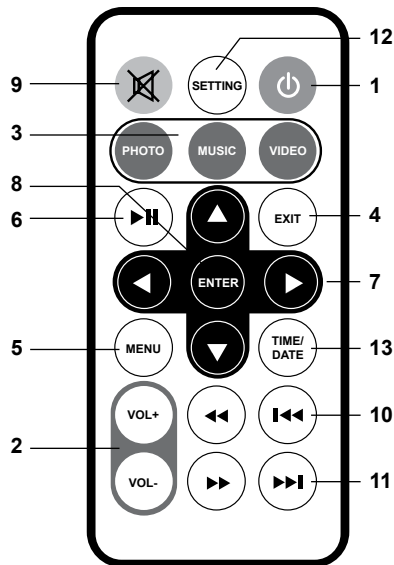

Package Contents

Your order has been carefully packaged and inspected. The following should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.

- Digital Photo Frame
- Remote Control
- USB 2.0 Cable (Type A to mini-B)
- Power Adapter
- Instructional Manual
- Warranty / Registration Card

Getting Started

- Remove the protective film covering the LCD.
- Remove the plastic insulator from the battery on the remote control.

Main Menu

- Turn on the digital frame using the power switch in the back of the frame or press and hold the power button until the Aluratek startup screen is displayed if the switch is already in the ON position.
- The On-screen Display (OSD) will show the Main Menu. Each icon represents the various functions available on the device: **Picture**, **Music**, **Video**, **Calendar**, and **Setup**.
- Browse the different functions using the ◀ or ▶ arrow buttons and select a function by pressing the **Enter** button.
- Press the ▼ arrow to browse the various storage options, use the ◀ or ▶ arrow buttons and select the option by pressing the **Enter** button.

Transferring Files from your PC/Mac to the Frame's Internal Memory

- A USB cable is included with your digital frame to connect it to your PC/ MAC. Connect the small connector to your digital frame and the larger connector to your PC / MAC.
- Once connected, the frame will display **Connecting with PC**. On a PC, the frame's internal memory will appear as a removable drive when viewed in **My Computer**. On a Mac, the frame will appear as a drive icon on the desktop.
- Copy your photo, video and music files from your PC / MAC into the icon representing the frame's internal memory. When finished disconnect the USB cable from the PC or MAC. (Note: For a Mac, eject the drive icon before disconnecting the USB cable.)
- The frame will return to normal operation once it is disconnected from your PC / MAC.

Managing Files in the Digital Frame's Internal Memory

1. Select **Setup** from the main menu.
2. Determine the source of the photo, video and music files you wish to copy to the digital frame's internal memory by selecting **Device > File > File selection**.
3. A list of the files or folders contained on the storage source will be displayed. Browse the files using the arrow buttons. To select a file, press the **Setting** button to select / unselect the file. A green check mark will be shown on the selected pictures.
4. Press the **Setup** button to go back to the Setup menu.
5. Select **Device > File > Operation > Copy** and select where you want to copy the file to.

To delete a file, repeat steps 2-4 and select **Device > File > Operation > Delete** to remove the selected files.

Photo Function

Setup a Photo Slideshow

- Select the source of the photos you wish to present in the slideshow by selecting **Memory** (Internal Memory), **SD** and **USB** storage options and pressing the **Enter** button.
- Navigate to the **Photo** function using the ◀ or ▶ arrow buttons and press the **Enter** button to start the slideshow.
- During slideshow, press **Setup** button. This will provide you with the various options to customize your slideshow. Browse the options using the ▲ or ▼ arrow buttons and **Enter** button to confirm.

Photo Setup

- In Slideshow mode, you can enter the **Photo** menu by pressing the **Setup** button to set the slide, duration, background music, display mode, slide order and slide effect.
- To exit, press the **Menu** button.

Playing Videos

- Select the source of the videos you wish to play by selecting **Memory** (Internal Memory), **SD** and **USB** storage options and pressing the **Enter** button.
- Navigate to the **Video** function using the ◀ or ▶ arrow buttons and press the **Enter** button.
- Select the video that you wish to view and press the ▶ || button.
- To skip to the next video, press the ▼ arrow button. To skip to the previous video, press the ▲ arrow button.
- Adjust the volume of the video playing using the **VOL+** or **VOL-** buttons.
- To exit, press the **Menu** button.

Video Setup

- To customize how videos are played back, press the **Setup** button while a video is playing. You may also access the **General > Video** menu by selecting Setup in the Main Menu. Browse the options **Display Mode** and **Repeat Mode** using the ▲ or ▼ arrow buttons and **Enter** button to confirm.
- To exit, press the **Menu** button.

Playing Music

- Select the source of the music files you wish to play by selecting **Memory** (Internal Memory), **SD** and **USB** storage options and pressing the ► || button.
- Navigate to the **Music** function using the ◀ or ▶ arrow buttons and press the **Enter** button.
- Select the song that you wish to play and press the **Enter** button.
- To skip to the next song, press the ▼ arrow button. To skip to the previous song, press the ▲ arrow button.
- Adjust the volume of the song playing using the **Vol+** or **Vol-** buttons.
- To exit, press the **Menu** button.

Music Setup

- To customize how music played back, press the **Settings** button while the music is playing. You may change the Repeat Mode or EQ by using the ▲ or ▼ arrow buttons.
- To exit, press the **Menu** button.

Calendar Function

Calendar Setup

- To configure custom settings for the Calendar, select the **Setup** function in the Main Menu and press the **Enter** button. Then navigate to **Time** using the ▲ or ▼ arrow buttons and press the **Enter** button.
- Use the ▲ and ▼ to set the correct date, time and 12 / 24 mode.
- To exit, press the **Menu** button.

Auto On / Off Function

Auto On / Off Setup

- To configure Auto On / Off feature, select the **Setup** function in the Main Menu and press the **Enter** button. Then navigate to **Time** using the **▲** or **▼** arrow buttons and press the **Enter** button.
- Select **Auto power** and press **Enter**.
- Use the **▲** and **▼** to set the mode and the On / Off time.
- To exit, press the **Menu** button.

Alarm Setup

- To set the Alarm, select the **Setup** function in the Main Menu and press the **Enter** button. Then navigate to **Time** using the ▲ or ▼ arrow buttons and press the **Enter** button.
- Select **Alarm** and press **Enter**.
- Use the ▲ and ▼ to set the mode, time of the alarm and the sound.
- To exit, press the **Menu** button.

Format Internal Memory / Memory Cards

Formatting a memory will delete everything that is in the memory. Please make sure that there is nothing you want to keep before formatting the memory.

Format Internal Memory / Memory Cards Setup

- To format the memory, select the **Setup** function in the Main Menu and press the **Enter** button. Then navigate to Device using the ▲ or ▼ arrow buttons and press the **Enter** button.
- Select **Format** and press **Enter**.
- Use the ▲ and ▼ to select the memory that you want to format and press **Enter**.
- Select **OK** to confirm

Technical Support

If you need further assistance, please contact Aluratek support department prior to returning this device.

E-mail: **support@aluratek.com**

Web: **www.aluratek.com/support**

Local (Tustin, CA): **714-586-8730**

Toll free: **1-866-580-1978**

Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Warranty

Aluratek warrants this product against defect in material or workmanship for **120 Days** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or “warranty void” sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.



aluratek.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>