



slideHD what's on yours?

Get Started

Welcome to Flip SlideHD™

- 1 Press power button to turn on. Camcorder settings appear automatically in widescreen when you first power on.

Note: Camcorder is shipped with a partially charged battery. If the battery is not charged, simply follow the steps on the Connect to Computer and Recharge Battery page.

Set Date

- 1 Press **+ -** to adjust month/date/year.
- 2 Press NEXT to save settings.

Set Time

- 1 Press **+ -** to adjust hour/minute and press AM/PM.
- 2 Press SAVE to save settings.
- 3 Press EXIT to exit and save settings.

To Return to Camcorder Settings Later

- 1 In widescreen view, press **⏏** on the right side of the slide strip.
- 2 Press SETTINGS to change settings.



Record and Play Videos *Records up to 4 hours of HD video*

Record Videos

- 1 Press **●** to start/stop recording.
- 2 Press and hold **+ -** to zoom in/out during recording.

Play Videos

- 1 Press **▶** to play/pause.
- 2 Press and hold **+ -** to increase/decrease volume.
- 3 Press **< >** to view previous/next video.

Tip: Press and hold < > during playback to rewind/fast-forward.

Delete Videos

- 1 Press **🗑** for delete options.
 - Press YES to delete one video, or NO to cancel.
 - Press ALL to delete all content stored on your SlideHD.

*Tip: The delete button is locked when you first power on. Press and hold **🗑** to unlock.*



Widescreen Playback *Holds up to 12 hours of video*

Play Videos

- 1 Slide screen forward to open the widescreen.
- 2 In thumbnail view, slide finger along slide strip to scroll through videos, or press top corners of screen to scroll through folders.
- 3 Press desired video or slide strip to play.
- 4 Press and hold screen during playback to display viewing controls. **< || ▶ ★**
- 5 Press video or slide strip to return to thumbnail view.

Delete Videos

- 1 In thumbnail view, press and hold video to display **🗑 ★** controls.
- 2 Press **🗑** to delete.

Make Favorites

- 1 Press **★** to make a video a favorite.

Quick Navigation

- 1 Press **⏏** on slide strip to quickly browse videos. Then press:

- 📁 to quickly browse all videos on your camcorder
- 📺 to find Flip Channel videos
- 📌 to find favorites, movies, or photos



Connect to Computer and Recharge Battery

- 1 Slide USB latch down.
 - 2 Plug USB arm into USB port on computer.
 - 3 Press screen to display charging status.
 - 🔌 displays to indicate charging in progress.
 - 🔋 displays to indicate a fully-charged battery.
- Recharging a discharged battery takes about 3 hours.
 - Computer must be powered on for camcorder to charge.



Organize, Create, and Share with

Flipshare

Pre-loaded FlipShare™ software makes editing and sharing your videos easy. Just plug in your camcorder, open FLIPVIDEO and launch SetUp FlipShare™ (PC) or Start FlipShare™ (Mac).

Features

- Save up to 12 hours of video to your SlideHD.*
- Save photos to your SlideHD.
- Save videos to your computer.
- Organize your videos.
- Create custom movies or capture snapshots.
- Share videos via email, Flip Channels, or upload directly to:

facebook

myspace™

YouTube™



*Note: Save videos in Space Saver format to store up to 12 hours of video on your SlideHD.

View on HD Television

- 1 Power off your camcorder and TV.
- 2 Connect camcorder to your HD TV with HDMI™ Cable (not included).
- 3 Power on your camcorder and TV. Switch your TV to VIDEO input.
- 4 Slide open widescreen and use slide strip to scroll to desired video.
- 5 Press desired video to play on your HD TV.
 - During playback, videos will appear on your TV screen and viewing controls will appear on your SlideHD screen.
 - Press viewing controls on SlideHD screen to adjust volume, play/pause, or make a video a favorite.
 - Press slide strip to return to scrolling videos.
- 6 To end video playback, power off your camcorder and TV before disconnecting your HDMI™ Cable.



HDMI

Note: You can use any HDMI™ Cable with an HDMI™ Connector (Type A) on one end and an HDMI™ Mini Connector (Type C) on the other end.

Camcorder Features



1 Power Button	Press to turn on/off.
2 Wrist Strap Hook	Attach wrist strap (included in box).
3 Recording Light	Red light turns on during recording. Built-in wide-range microphone is also located here.
4 USB Latch	Slide down to release USB arm.
5 USB Arm	Connect to a PC or Mac USB port.
6 Preview Screen	Recording preview screen.
7 Recording Controls	Press buttons to record and preview videos.
● Record Button	Press to start/stop recording.
▶ Play Button	Press to play/pause. Press and hold to play all videos.
⌵ Delete Button	Press for delete options. Press and hold to lock/unlock delete button.
+/- Up/Down Buttons	While recording: press and hold to zoom in/out. During playback: press and hold to increase/decrease volume.
<> Left/Right Buttons	While paused: press and hold to skip to previous/next video. During playback: press and hold to rewind/fast-forward.
8 Widescreen	Slide open for widescreen viewing.
9 Slide Strip	Slide finger across to scroll through videos.
10 Menu Button	Press button for menu and settings.

Flip Video offers a variety of accessories for your SlideHD camcorder. Learn more at www.theflip.com/accessories.

Included In This Box: Flip SlideHD™ Camcorder, Wrist Strap, Soft Case, User Guide, Warranty Information, and Safety Instructions

Flip Video™ Support: Go to www.theflip.com/support

Declaration of Conformity

Responsible Party: Cisco Systems, Inc., 185 Berry Street, Suite 6500, San Francisco, CA 94107 USA

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and TV Interference

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION: Changes or modifications to this device not authorized by Cisco Systems, Inc. may void the user's authority to operate this device.

CANADIAN ICES-003 STATEMENT: This Class B digital apparatus complies with Canadian ICES-003.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>