

You'll never
have to guess
at medium
rare again.

Brookstone®

Always Perfect® Chef's Fork
GRILL TO PERFECTION...EVERY TIME



TABLE OF CONTENTS


Battery Precautions	2
Location of Parts and Controls	3
Chef's Fork Operation	4
Care and Maintenance	7
Warranty	9

BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

LOCATION OF PARTS AND CONTROLS

1. Select
2. Battery Compartment Cover (On Back)
3. °C/°F (Inside Battery Compartment)
4. Reset (Inside Battery Compartment)
5. Temperature Probes

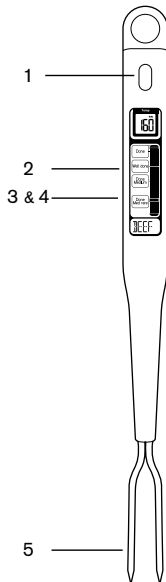

CHEF'S FORK OPERATION

INSERTING THE BATTERIES

1. Loosen the screw and remove the BATTERY COMPARTMENT COVER.
2. Insert four AAA batteries (not included) according to polarity indicators inside the compartment.
3. Replace the BATTERY COMPARTMENT COVER and tighten the screw.

USING THE CHEF'S FORK

1. Remove protective covers from TEMPERATURE PROBES.
2. Press SELECT to turn the unit on.
3. Press SELECT repeatedly until your desired entrée illuminates: Beef, Chicken, Hamburger, Pork, Fish, Turkey, Veal, Lamb or Baked Potato.
4. Insert the TEMPERATURE PROBES into the center of the thickest portion of your entrée.
5. Hold the unit in position for 6-10 seconds for an accurate measurement.

Notes:

- Ensure the TEMPERATURE PROBES are inserted at least 1/2" deep into the meat to give a more accurate temperature readout. Avoid touching bone or heavy fat areas. Do not leave TEMPERATURE PROBES inserted when the entrée is cooking.
- The unit turns off automatically after two minutes of inactivity.
- When powered on, the unit defaults to the entrée selected the last time the unit was used.
- The color-changing LED alerts you to your food's progress.
Green: Just Started; Blue: Medium Rare; Purple: Medium; Red: Well Done/
Done; and Flashing Red: Over Cooked.

VIEWING THE TEMPERATURE IN FAHRENHEIT OR CELSIUS

Press °C/°F (inside the battery compartment) to view the temperature in Celsius.

Press °C/°F again to view the temperature in Fahrenheit.

Note: The color-changing backlight alert is based on temperatures in Fahrenheit. The alert may vary slightly when using Celsius.

RESETTING THE UNIT

Reset the unit if it is not working properly by inserting a small, pointed object into RESET (inside the battery compartment).

CARE AND MAINTENANCE

Wipe with a soft, damp cloth. Do not use abrasive cleaning agents.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or

suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more
great ideas online

Brookstone[®]

798333

Merrimack, New Hampshire USA 03054 • 800-846-3000 • Brookstone.com

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>