Brother Quick Setup Guide

FAX-717, FAX-727, FAX-737MC

THANK YOU!

... FOR PURCHASING YOUR BROTHER MACHINE. WE ARE SURE YOU WILL BE IMPRESSED WITH THE CONVENIENT WAY THAT YOUR NEW MACHINE PERFORMS SO MANY TASKS WITH GREAT RESULTS!

Follow these simple instructions in numerical order.


For greater detail, consult your User's Guide.

Alternatively, if you cannot solve a problem: Refer to Frequently Asked Questions (FAQ's) on Brother World Wide Web Site:

URL: http://www.brother.com

Packing List


Make sure you have the items shown below.

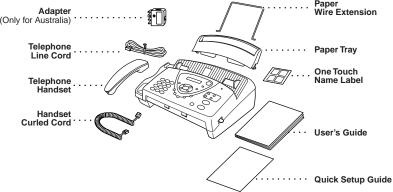

■ Keep the packing materials for possible future transport. Failure to pack the machine properly may damage the machine and such damages will not be covered under your warranty.


Attach the paper wire extension and paper trav

 A. Attach the paper wire extension.



B. Attach the paper tray.

Make sure the wide pins on the paper tray are inserted firmly into the pockets on the top edge of the machine.

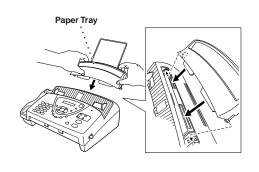


Load the Paper

Place up to 30 sheets of paper in the paper tray.


Acceptable Paper

Size:

 
64 to 90 gsm Weight: **Thickness:** 0.08 – 0.10 mm




Tap the stack of paper so the edges are even

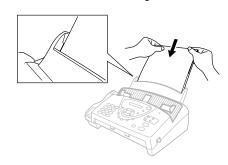

Connect the handset, power cord and telephone line cord

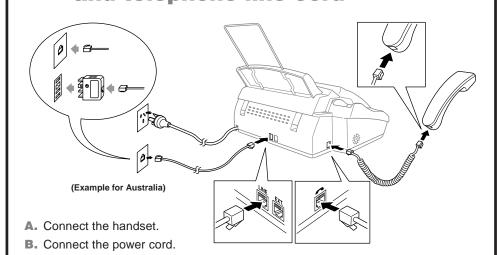

If you are sharing one phone line with an external telephone answering device, connect it now

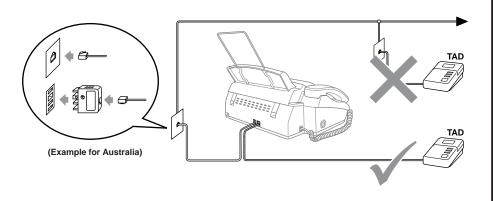

For more details, see Preparation and Simple Use Guide "Connecting an External Telephone Answering Device (TAD)" in User's Guide.

Set Date and Time

- A. Press Menu/Set, 1, 2
- B. Enter the last two digits of the year, and then press Menu/Set.
- C. Enter two digits for the month, and then press Menu/Set.
- **D.** Enter two digits for the day, and then press Menu/Set.
- E. Enter the time in 24-hour format, and then press Menu/Set.
- F. Press Stop/Exit.

- 2.DATE/TIME
- ENTER YEAR: 20--
- ENTER MONTH:--
- ENTER DAY: --
- ENTER TIME:--:-

Set Station ID

C. Connect the telephone line cord.

- A. Press Menu/Set, 1, 3.
- B. Enter your fax number (up to 20 digits), and then
- C. Enter your telephone number (up to 20 digits), and then press Menu/Set.
- **D.** Enter your name (up to 20 characters) using the dial pad and the chart, and then press Menu/Set. To enter a space press () twice.
- E. Press Stop/Exit.

press Menu/Set.

Press Key once twice three times four times five times D G G M M

FAX:

TEL:

NAME:

3.STATION ID

Select Receive Mode

Choose the mode that best suits your needs by pressing Receive Mode repeatedly until the screen displays the setting you want to use.

FAX ONLY For use with a dedicated fax line. Every call is answered as a

FAX/TEL TAD: ANSWER MACH.

For receiving many fax and few voice calls on one line.

(FAX-717/727 only) For use with an external answering device. The TAD answers every call and stores voice messages. Fax messages are printed.

MANUAL For receiving fax and voice calls on one line. You control the phone line and must answer every call yourself.

Once an Outgoing message has been recorded, you can choose the mode below by pressing (i) until it lights. (FAX-737MC only)

MC: MSG CTR A built-in answering machine answers every call and stores voice and fax messages. For details, see chapter 12 "Message Centre" in User's Guide.

For more details, see chapter 3 "Receiving a Fax" in User's Guide.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com