



# Toy Caboose Stroller Instruction Manual

These instructions are for the  
following Joovy Style Numbers:  
042, 043



**Please read these instructions in their entirety to ensure  
the proper assembly and use of your toy. Keep these  
instructions for future reference.**

Joovy • 2919 Canton Street • Dallas, TX 75226 • (877) 456-5049 • Fax: (214) 761-1774  
E-mail: [customerservice@joovy.com](mailto:customerservice@joovy.com) • Website: [www.joovy.com](http://www.joovy.com)



# WARNINGS

- This product is a TOY stroller for dolls or stuffed toys ONLY.
- NEVER use this toy to carry a baby or child for any purpose whatsoever. Death or Serious Injury may occur.
- Maximum weight allowed = 5 pounds in EACH seat.
- DO NOT stand on platform. Riding is for dolls or stuffed toys ONLY.
- This product contains small parts. Adult assembly is required.
- The maximum weight that can be carried in the storage basket is 5 pounds
- Discard all packaging materials properly. Do not allow children to play with them.
- Discontinue use of the stroller should it malfunction or become damaged.
- Please contact our customer service department to arrange for repair or obtain replacement parts.
- Do not use this toy on stairways or escalators.
- Hanging bags or other toys from the handlebars or any other parts of this toy may change its balance and cause a hazardous unstable condition.
- When installing a toy infant carrier onto the stroller, ALWAYS use the restraining strap to secure the carrier in place.

**Although this is a TOY and must NEVER be used for a baby or child, other warnings are provided throughout this manual to promote your child's safe use of this product for their doll or stuffed toy. For your child's understanding of the safe use of this product, please read and adhere to these warnings and insure that your child also understands and follows them.**

**Please do not return this product to the store**

If you experience any difficulty with the assembly or use of this product, or if you have a question regarding these instructions, please contact our Customer Service Department at (877) 456-5049 between the hours of 8:30 am and 5:00 pm Central Time.

**Please note: Styles and colors may vary.**

# Assembling and Using your Stroller

To ensure safe operation of your stroller, please follow these instructions carefully.

## Unpacking the Product

- Carefully remove stroller and all parts from the box and plastic bag.
- Remove the cardboard packing materials from the ends of the frame.
- Identify the parts (stroller, canopy, tray, front wheels (2), rear wheels (2), rear axle, washers (2), axle locks (2), axle caps (2), hubcaps (2), car seat carrier support and documents with the pictures in Figures 1 and 1A.
- Discard all packaging materials properly. Do not allow children to play with them.



Figure 1



Figure 1A

## WARNING

**Adult assembly required. No tools required. Package contains small parts. Keep small parts out of children's reach during assembly.**

## Unfolding the stroller

- Orient the stroller with the handle bar away from you.
- Release the locking latch located on the lower right side by lifting up the lever. See Figure 2.
- Lift up on the stroller handle with both hands until the stroller is in the open position and both side frame bars snap into place in their holders.



Figure 2

## Installing the Rear Wheels

- Turn your stroller upside down so that it is resting on the seatback.
- Locate the rear axle and slide it through the holes into the frame near the platform.
- Locate a metal washer and slide the washer onto one end of the axle. See Figure 3.
- Locate a rear wheel and slide the wheel onto the axle.

**IMPORTANT NOTE:** The left and right side wheels are slightly different. The correct wheel will have the arrow shapes on the tire tread pointed towards the **REAR** of the stroller. Be **CERTAIN** that the wheels are placed on the correct side of the axle, because this is intended to be a one-time assembly.

- Locate an axle lock. While holding the axle from the opposite side, orient the axle lock with the larger side closest to the wheel and snap it onto the axle. See Figure 4.
- Fit a rear axle cap over the attachment. You will hear this piece snap into place. See Figure 5.
- While holding the wheel, line up the four prongs on the hubcap with the holes in the spoke of the wheel and snap into place. See Figure 6. Be **CERTAIN** that all four prongs snap into place. Pull on the hubcap to be sure it is installed securely.
- Repeat these steps on the other side.
- Ensure that each wheel assembly is secure before using this toy. Pull on the wheels to be sure they are installed correctly.



Figure 3



Figure 4



Figure 5



Figure 6

## Installing and Operating the Canopy

- To attach the canopy, orient the canopy on the stroller with the wide front edge toward the front of the stroller.
- Line up the fittings on the canopy with the fittings near the center of the stroller and slide the canopy on until it snaps into place. See Figure 7.
- The canopy will open, close and ratchet forward or backward
- To remove the canopy, slide the canopy off the fittings.



**Figure 7**

## Attaching/Detaching the Front Tray

- To attach the front tray, line up the tray with the tubing on the front of the stroller and push inward until the tray snaps into place. See Figure 8. Pull outward on the tray sides to be sure both are snapped securely in place.
- To remove the front tray, press the button on the bottom of each of the tray fittings while pulling outward on the tray. See Figure 9.



**Figure 8**



**Figure 9**

## **Adjusting the Footrest**

The footrest can be adjusted to two positions – horizontal or all the way down.

- To place the footrest into the horizontal position, pull up on the footrest and the metal bar until the footrest catches into position. See Figure 10.
- To place the footrest all the way to its down position, pull up on the footrest to release the bar from the slot, and then slowly lower the footrest.



**Figure 10**

## **Securing the Front (Seated) Doll**

- Unlatch the harness buckle by pressing down on button in the center of the buckle and removing the male sides.
- Place the doll in the stroller seat with the shoulder straps over their shoulders and chest and the crotch strap between the doll's legs.
- Bring the seat belt around the doll's waist and snap the buckle together. See Figure 11. Tighten the seat belt to be snug around the doll's waist.
- Both the shoulder straps and the waist/crotch straps may be adjusted using the sliding buckles on these straps.



**Figure 11**

## **WARNING**

- **This product is a TOY stroller for dolls or stuffed toys ONLY.**
- **NEVER use this toy to carry a baby or child for any purpose whatsoever. Death or Serious Injury may occur.**
- **Maximum weight allowed = 5 pounds in EACH seat.**



## Seatback Positioning

The front seat has two positions.

- To place the seat in the upright position, push the bar on the rear of the seat toward the front of the stroller and rotate the seatback towards the front of the stroller until this bar is locked in its lowest position. See Figure 12.
- To recline the seat, pull the bar on the rear of the seat toward the rear of the stroller and rotate the seatback down until this bar is again in its lowest position.



**Figure 12**

## Securing a Rear Standing Doll

- Push the bench seat to its most forward position.
- Position the doll on the platform on the back of the stroller facing forward with both of their hands on the handles. See Figure 13.
- Position the safety belt around the doll's waist and under the armpit and secure it tightly.



**Figure 13**

## **WARNING**

**Children should NEVER stand on the platform. Riding is for dolls ONLY.**

## Using the Bench Seat

- Push the bench seat to its most rearward position.
- Position the doll on the bench seat facing backward with their feet on the platform.
- Unlatch the seat belt buckle by pressing down the button in the center of the buckle and removing the male sides of the buckle.
- Place the seat belt completely around the doll's waist, place the crotch strap between the doll's legs and snap the buckle together. See Figure 14.
- Adjust the seat belt to be snug around the doll's waist by using the adjustment strap near the buckle.



Figure 14

### WARNING

- **This product is a TOY stroller for dolls or stuffed toys ONLY.**
- **NEVER use this toy to carry a baby or child for any purpose whatsoever. Death or Serious Injury may occur.**
- **Maximum weight allowed = 5 pounds in EACH seat.**

## Storage Basket

The maximum weight that can be carried in the storage basket is 5 pounds.

Note: There are hook and loop attachments on the underside of the basket to stow the car seat carrier support when it is not in use. To stow the car seat carrier support, simply secure it to the basket as shown in Figure 15.



Figure 15



## **Using the stroller as a Doll Car Seat Carrier**

- To use the stroller to carry a doll car seat carrier, you must replace the Front Tray with the Car Seat Carrier Support.
- Remove the Front Tray by pressing in on the buttons under the female fitting and pulling the tray off the brackets.
- Line up the Car Seat Carrier Support to the metal tubing on the front of the stroller and push inward until the support snaps into place. See Figure 16. Pull outward on the support sides to be sure both are snapped securely in place.
- Adjust the backrest to its reclined position.
- If necessary, remove the infant carrier from the car seat base.
- Place the infant carrier onto the top of the stroller in a REAR FACING POSITION, locating the head end of the carrier so that it rests on the car seat support and the feet end of the carrier so that it rests against the seatback. See Figure 17.
- Insure that the infant carrier is pushed down into this position firmly and that it is centered side to side.
- Remove the carrier restraining strap from the pouches on the sides of the front seat. Buckle it in place over the LOWEST part of the carrier sides. Adjust the strap so that it is tight around the carrier. Pull up on the carrier to be sure it is held on securely. See Figure 18.



**Figure 16**



**Figure 17**



**Figure 18**

### **WARNING**

**ALWAYS** install the doll carrier in a REAR FACING POSITION.  
**ALWAYS** secure the carrier with the restraint strap.

## **Folding the Stroller**

- Orient the stroller with the handle bar closest to you.
- Place the canopy into its closed position and push it as far forward toward the front of the stroller as it will go.
- Pull upwards on the trigger mechanisms on both sides of the stroller. See Figure 19.
- While these mechanisms are in the upward position, push forward and down on the stroller using the handle bar.
- Secure the stroller in the folded position by engaging the locking latch located on the right side of the stroller over the extended rivet on the right side of the stroller. See Figure 20.



**Figure 19**



**Figure 20**

## **Maintenance**

All of the fittings, snaps, locks, rivets, and other hardware and plastic parts on the stroller should be inspected periodically to insure that they are secured properly and not damaged or malfunctioning. The seat belts and safety harnesses, as well as all other straps and fabric items and their stitching should also be inspected periodically to insure that they are secured properly and not loose, torn or otherwise damaged. All moving parts, such as wheels, brakes, and hinges should also be checked periodically to insure they are operating properly.

Any missing, broken, or worn components should be replaced immediately, and the stroller should not be used until they are replaced. Only original manufacturer's components should be used. If needed, please contact Joovy at the toll-free phone number listed below.

Fabric fading may occur if the stroller is left in direct sunlight for long periods of time. When not in use, store the stroller out of direct sun.

## **Cleaning**

The fabric material on this stroller can be cleaned using a cloth dampened with warm water. Always allow the fabric to completely air dry before using the stroller.

The frame and wheels should always be kept clean and free of dirt and foreign matter, especially after operating the stroller in rain, snow, or other harsh environments. Use a cloth dampened with warm water and a mild detergent cleaner to clean the wheels after such use.

## **SATISFACTION GUARANTEED**

**We want you to be completely satisfied with your purchase of this product. Should you experience any difficulty in assembling or using this product, please contact our Customer Service Department at (877) 456-5049 between 8:30 am and 5:00 pm CST for assistance.**



2919 Canton Street • Dallas, TX 75226 • (877) 456-5049 • Fax: (214) 761-1774  
E-mail: [customerservice@joovy.com](mailto:customerservice@joovy.com) • Website: [www.joovy.com](http://www.joovy.com)  
©Joovy 2006 • Document Version 1.0

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>