

**Meat-taste temperature Quick Reference**

	WELL-DONE	MEDIUM	MED.-RARE	RARE
BEEF	170°	160°	145°	140°
GROUND BEEF	160°	N/A	N/A	N/A
VEAL	170°	160°	145°	N/A
LAMB	170°	160°	145°	N/A
PORK	170°	160°	N/A	N/A
CHICKEN	180°	N/A	N/A	N/A
TURKEY	180°	N/A	N/A	N/A

**Do not return product to retail store.**

**For Technical Assistance and product return information,  
please call Chaney Instrument Co. direct at:  
877-221-1252**

**LIMITED WARRANTY – INTERNATIONAL**

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

www.chaneyinstrument.com  
Tel: 877-221-1252  
Made in China

Chaney Instrument Company  
965 Wells Street  
Lake Geneva, Wisconsin 53147

4

**Battery Installation**

Install 2 alkaline "AAA" (1.5v) batteries (not included) into both the base unit and into the wireless pager. Slide the power switches on both units to the "ON" position to activate each unit.

**BASE UNIT****Setting the clock and thermometer**

To set the clock to the correct time, first press the "MODE" button to enter into clock display mode. Next, hold the "MODE" button down until the time display begins to flash; then you may adjust the time using the "+HR" and "-MIN" buttons. Press the "MODE" button to confirm your time setting.

At this point you may select between 12 and 24 hour time formats by pressing the "HR" button. Then you may also choose °C or °F temperature display mode by pressing the "-MIN" button. To exit set-up mode and confirm your settings, press the "MODE" button.

**Setting the target temperature**

To set the target temperature, first press the "MODE" button until the time/clock is displayed. Press the "+HR" and "-MIN" buttons to set the target temperature. Slide the "alarm on/off" switch to "on" and the alarm will sound when the actual temperature reaches the target temperature.

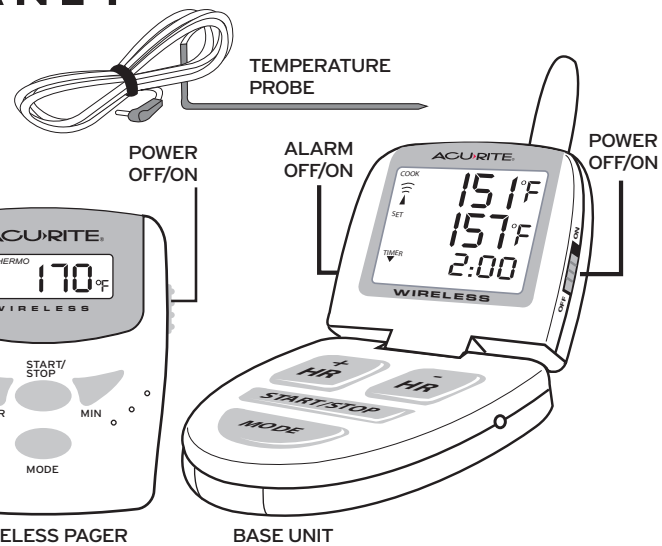
**Setting the timer**

To set the timer, first press the "MODE" button to select TIMER. Press the "+HR" and "-MIN" to adjust the timer to the desired countdown time. Then press "START/STOP" to start and stop the timer. To reset the count, stop the timer first and press "+HR" and "-MIN" together at the same time. Slide the "alarm on/off" switch to "on" and the alarm will sound when the timer countdown reaches "0:00".

**Wireless Pager Alerts**

The base station will alert the pager when the target temperature is reached or when the timer on the base station reaches "0:00." To receive wireless data and alerts, be sure the pager is powered on and that the alarm is activated.

2

**INCLUDED IN THIS PACKAGE:**

- (1) Digital cooking thermometer base unit
- (1) Digital cooking thermometer wireless pager
- (1) 3 foot wire and thermometer probe

Thank you for purchasing this Acu-Rite Wireless Digital Cooking Thermometer. Please read all instructions prior to using this instrument.

**Features**

- 3-line LCD shows cook temperature, set temperature and timer for BBQ or Oven cooking.
- Programmable temperature alert
- High-temp stainless steel temperature probe with 3 foot cable
- Wireless pager alerts you of temperature

1

**Low Battery**

Both the base unit and the wireless pager have low battery icons that will display on the LCD if the battery is getting low.

**WIRELESS PAGER****Wireless Pager Alerts**

The base station will alert the pager when the target temperature is reached or when the timer on the base station reaches "0:00." To receive wireless data and alerts, be sure the pager is powered on and that the alarm switch is activated.

The wireless pager receives data from the base station unit and alerts you when the base stations' temperature probe reaches a certain pre-determined number. The pager also alerts you when the base stations' timer reaches "0:00." The wireless pager also has a built-in timer that can be used independently from the wireless base-station.

The wireless thermometer system has a range of 100 feet, which can be affected by electronic interference and certain building and housing materials. When the pager cannot receive the signal from the base station for whatever reason, the pager will read "OUT OF RANGE" on the display and will beep.

**Wireless Pager Backlight**

The wireless pager has a built-in backlight for easy viewing. To activate the backlight for 4 seconds, press any button on the front of the pager.

**Setting the pager timer**

To set the timer, first press the "MODE" button to select TIMER. Press the "+HR" and "-MIN" to adjust the timer to the desired countdown time. Then press "START/STOP" to start and stop the timer. To reset the count, stop the timer first and press "+HR" and "-MIN" together at the same time. Slide the "alarm on/off" switch to "on" and the alarm will sound when the timer countdown reaches "0:00". **NOTE: both the base unit and the wireless pager must be powered on and in range for the independent pager timer to work properly.**

3

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>