


"WARNING:

The power cord on this product contains lead, a chemical known to the State of California to cause [cancer, and] birth defects or other reproductive harm. **Wash** hands after handling."

E-5


COBY

OPERATING INSTRUCTIONS

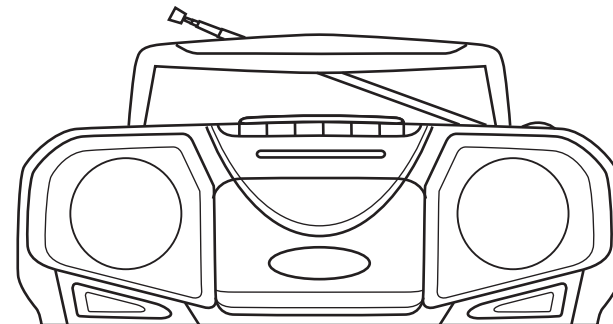

**CX-244 AM/FM STEREO CASSETTE
PLAYER/RECORDER**

E-1

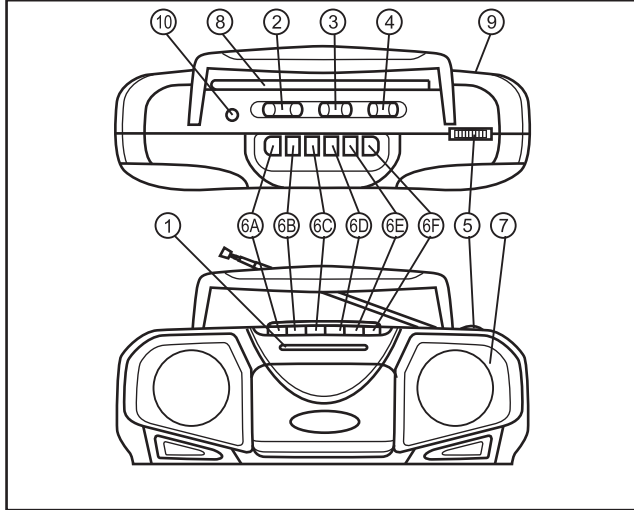

LOCATION OF CONTROLS

1. RADIO DIAL SCALE
2. VOLUME CONTROL KNOB
3. FUNCTION (RADIO/TAPE) SWITCH
4. RADIO BAND SELECTOR SWITCH
5. RADIO TUNING CONTROL KNOB
- 6A. PAUSE BUTTON
- 6B. STOP & EJECT BUTTON
- 6C. FAST FORWARD BUTTON
- 6D. REWIND BUTTON
- 6E. PLAY BUTTON
- 6F. RECORDING BUTTON
7. SPEAKER
8. TELESCOPIC ANTENNA
9. BATTERY DOOR (BEHIND SET)
10. HEADPHONE (EARPHONE) SOCKET

E-2

POWER SUPPLY

BATTERY OPERATION

- OPEN THE BATTERY DOOR AND INSERT 5 PCS "D-CELL" (UM-1/R20 TYPE) BATTERIES. PLEASE OBSERVE THE CORRECT BATTERY POLARITIES OR THE SET WILL NOT WORK.
- IMPORTANT: WHEN THE SET IS ONLY BEING USED WITH AC POWER OR NOT BEING USED FOR AN EXTENDED PERIOD OF TIME, REMOVE THE BATTERIES TO PREVENT LEAKAGE OR DAMAGE.

AC OPERATION

- MAKE SURE THE SET VOLTAGE OF THE UNIT MATCHES YOUR LOCAL HOUSEHOLD VOLTAGE.
- INSERT THE TAIL-END OF THE AC-CORD INTO THE AC-COSKET AT THE REAR OF THE SET.
- INSERT THE PLUG OF THE AC-CORD INTO THE WALL OUTLET WITH AC-POWER.

OPERATION OF RADIO

- SET THE FUNCTION SWITCH TO "RADIO" AND THE BAND SELECT OR SWITCH TO THE DESIRED BAND.
- ROTATE TUNING KNOB TO TUNE-IN THE DESIRED STATION.
- ADJUST THE TELESCOPIC ANTENNA AND POSITION OF THE SET TO OBTAIN THE BEST RECEPTION.
- ADJUST THE VOLUME KNOB TO THE DESIRED LEVEL.
- TO TURN OFF THE RADIO, SLIDE THE FUNCTION SWITCH TO "TAPE" (OFF) POSITION, WITHOUT ANY TAPE BUTTON PRESSED.

CASSETTE TAPE PLAYBACK

- SLIDE THE FUNCTION SWITCH TO THE "TAPE" POSITION.
- OPEN THE CASSETTE DOOR BY PRESSING THE "STOP/EJECT" CASSETTE BUTTON.
- INSERT A PRERECORDED CASSETTE WITH THE TAPE SIDE UP, INTO THE PROPER GUIDE RAILS ON THE INSIDE OF THE CASSETTE DOOR.
- GENTLY PUSH THE CASSETTE DOOR FORWARD(INWARDS) TO CLOSE IT. MAKE SURE THE TAPE IS FULLY AND PROPERLY INSERTED BEFORE DOING SO.
- PRESS THE CASSETTE PLAY BUTTON TO START PLAYBACK. NOTE THAT THE TAPE MOVES FROM RIGHT TO LEFT.
- ADJUST THE VOLUME TO THE DESIRED LEVEL.
- THE TAPE PLAYBACK CAN BE STOPPED AT ANY TIME BY PRESSING THE "STOP" BUTTON. WHEN THE TAPES HAS ENDED, THE SET SWITCHES ITSELF OFF AUTOMATICALLY AND RELEASE THE PLAY BUTTON.
- PRESS THE "STOP" BUTTON FOLLOWED BY THE "REWIND" OR "FAST-FORWARD" BUTTON TO REWIND OR FORWARD THE TAPE AT HIGH SPEED.

E-3

CASSETTE TAPE RECORDING

- OPEN THE CASSETTE DOOR BY PRESSING THE "STOP/EJECT" CASSETTE BUTTON.
- INSERT A BLANK CASSETTE TAPE WITH THE TAPE-SIDE UP, INTO THE PROPER GUIDE-RAILS ON THE INSIDE OF THE CASSETTE DOOR.
- GENTLY PUSH THE CASSETTE DOOR FORWARD(INWARDS) TO CLOSE IT. MAKE SURE THE TAPE IS FULLY AND PROPERLY INSERTED BEFORE DOING SO.
- THE SET IS NOW READY TO START RECORDING WHICH CAN BE DONE FROM EITHER LIVE SOURCE OR THE RADIO.

RECORDING FROM RADIO

- SLIDE THE FUNCTION TO THE "RADIO" POSITION.
- TUNE IN THE DESIRED STATION BY TURNING THE TUNING KNOB IF NECESSARY, EXTEND THE TELESCOPIC ANTENNA, AND ADJUST POSITION OF THE SET TO IMPROVE RECEPTION.
- PRESS THE PLAY AND RECORD BUTTONS TOGETHER.
- DUE TO THE "ALO" FUNCTION (AUTOMATIC LEVEL CONTROL) NO FURTHER ADJUSTMENTS ARE REQUIRED. THE VOLUME CONTROL WILL NOT AFFECT THE RECORDING.

PRESERVATION OF RECORDING

- TO PREVENT ACCIDENTAL ERASURE OF CASSETTES, SIMPLY BREAK OFF THE TWO PLASTICS TABS LOCATED ON THE REAR EDGE OF THE CASSETTE. WHEN A CASSETTE WITH REMOVED PLASTIC TABS IS INSERTED, THE RECORDING BUTTON CANNOT BE DEPRESSED.
- IF A CASSETTE IS TO BE ERASED AND RE-RECORDED AT A LATER STAGE, SIMPLY COVER THE HOLES ON THE CASSETTE WHERE THE TABS WERE REMOVED, WITH A PIECE OF STRONG ADHESIVE TAPE.

SPECIFICATIONS

POWER SUPPLY: AC110V OR 220V 50/60Hz
DC7.5V = 5X "D" (UM-1/R-20) SIZE
BATTERIES (NOT INCLUDED)

E-4

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>