 


COBY®

MP-C546

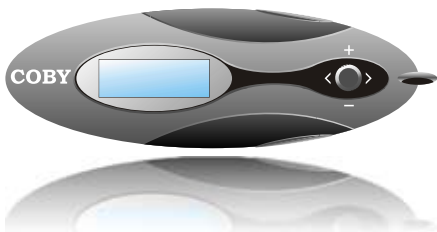

Sports MP3 Player with FM Radio



INSTRUCTION MANUAL

Please read this manual carefully before operation.

PRECAUTIONS

	CAUTION WARNING: SHOCK HAZARD, DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

For Customer Use:

Enter below the serial number that is located on the unit. Retain this information for future reference.

Model No. _____ MP-C546 _____

Serial No. _____

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

WARNING:

Handling the cords on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. **Wash hands after handling.**



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

PRECAUTIONS

PROTECT YOUR HEARING:

Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

NOTICE:

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.


IMPORTANT SAFETY INSTRUCTIONS

- 1. Read Instructions:** All the safety and operating instructions should be read before the product is operated.
- 2. Retain Instructions:** The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow Instructions:** All operating and usage instructions should be followed.
- 5. Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6. Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
- 7. Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
- 8. Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
- 9.** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 10. Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
- 11. Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
- 12. Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.



IMPORTANT SAFETY INSTRUCTIONS

13. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
14. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
15. **Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

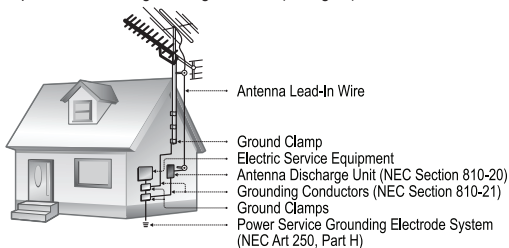

16. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
17. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
18. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

IMPORTANT SAFETY INSTRUCTIONS

19. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
22. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
24. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

TABLE OF CONTENTS


 
 
 
PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	4
TABLE OF CONTENTS	7
PACKAGE CONTENTS	9
FEATURES	10
GETTING STARTED	11
MP-C546 at a Glance	11
Top View	11
Left Side View	11
Play Mode Display	12
Record Mode Display	12
Connecting Headphones	13
Connecting Power.....	13
Loading a Battery	13
USB Power.....	14
Using the MP-C546 Controls	14
Power On/Off	14
Hold Switch	14
Reset Function	15
Navigating the Menu Interface	15
Main Menu	16
PLAY MUSIC	17
Play Music Controls.....	17
PLAY MUSIC	18
Repeat A-B Mode	18
VOICE	19
Voice Controls	19
RECORD	20
Record Controls.....	20

TABLE OF CONTENTS

FM TUNER	21
FM Tuner Controls.....	21
Automatically Saving Preset Stations.....	22
Manually Saving Preset Stations.....	22
Deleting Preset Stations.....	23
FM Tuner Menu.....	23
FM Recording Controls.....	24
SETTING	25
FOLDER	27
Folder Controls.....	27
USB CONNECTIONS	28
Minimum PC Requirements.....	28
USB Driver Installation (Windows 98SE Only).....	29
USB Mode (MSC/MTP).....	29
Connecting to a Computer.....	32
USB-MTP Mode.....	32
USB-MSC Mode.....	32
Transferring Files.....	33
USB-MTP Mode.....	33
USB-MSC Mode.....	35
Disconnecting from a Computer.....	35
USB-MTP Mode.....	35
USB-MSC Mode.....	35
FIRMWARE UPGRADES	37
Upgrading the Firmware.....	37
ABOUT MP3/WMA MUSIC FILES	38
TROUBLESHOOTING	39
SPECIFICATIONS	42

PACKAGE CONTENTS

 Please make sure that the items listed below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

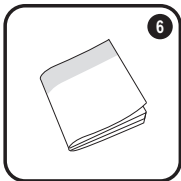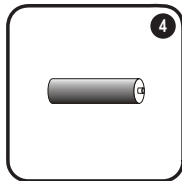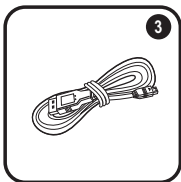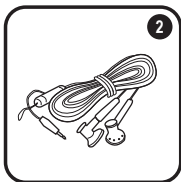

1. MP-C546
2. Stereo Earphones
3. USB Cable
4. 1 x "AAA" Battery
5. Arm Band
6. Instruction Booklet

FEATURES







- ✦ 256MB Integrated Flash Memory
- ✦ High-Contrast LCD Display with Backlight
- ✦ Plays MP3 and WMA Digital Music Files
- ✦ Plays Digital Music from most online stores and subscription services*
- ✦ ID3 and LRC support for song and synchronized lyric information display
- ✦ Integrated FM Radio and Recorder
- ✦ Integrated Microphone for Digital Voice Recording
- ✦ Mobile Data Storage Function
- ✦ USB 2.0 for Ultra-Fast File Transfers

* Music Service must support Windows Media DRM (WMDRM). WMDRM10 requires Windows XP and Windows Media Player 10 or newer.


GETTING STARTED

 
 
MP-C546 at a Glance

Top View

1. LCD Display
2. Power / Menu 
3. Joystick Left:
Previous/Reverse 
4. Joystick Down:
Volume - 
5. Joystick Right:
Next/Forward 
6. Joystick Up:
Volume + 
7. Joystick (Press):
OK 


Left Side View

8. Battery Compartment Cover
9. USB Port
10. Headphone Jack
11. Hold / Escape 
12. Neckstrap Hook

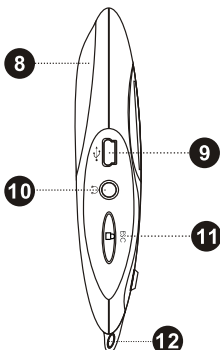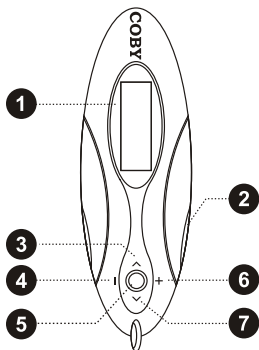


GETTING STARTED

 Play Mode Display

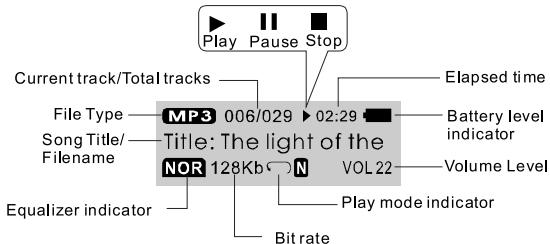

Record Mode Display

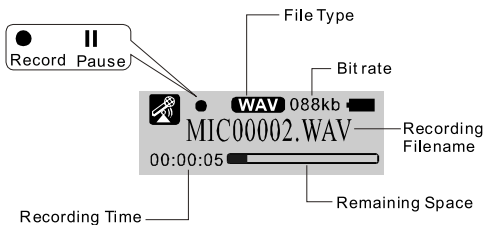 


GETTING STARTED

Connecting Headphones

Connect headphones/earphones to the Headphone Out jack for private listening.

 - ✦ Lower the volume level before connecting headphones, then gradually increase the volume for comfortable listening.
- ✦ Hearing experts advise against the constant use of personal stereos played at high volume.
- ✦ Constant high-volume use can lead to hearing loss. If you experience ringing in your ears or hearing loss, discontinue use immediately and seek medical advice.

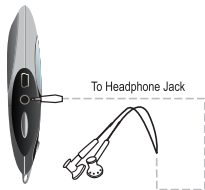


Connecting Power

The MP-C546 operates on 1 x “AAA” battery for music playback.

Loading a Battery

 1. Remove the Battery Compartment Cover.
2. Insert 1 x “AAA” battery, taking care to match the “+” and “-” polarities of the battery with the markings inside the battery compartment.
3. Replace the Battery Cover.

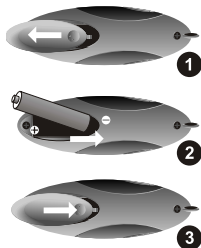



GETTING STARTED

USB Power

When the MP-C546 is connected to a computer's powered USB port, it will draw power over the USB connection.

Using the MP-C546 Controls

Power On/Off

- ✦ To turn your player on, press and hold .
- ✦ To turn your player off, hold  for at least 3 seconds. The LED indicator will darken.

Hold Switch

The Hold feature locks (disables) your player's controls to prevent accidental key presses when it is in your pocket or bag.

- ✦ To lock the player's controls, press and hold the HOLD button for 2 seconds. A Lock icon will be displayed on the screen.



- ✦ To unlock the player's controls, press and hold the HOLD button for 2 seconds again.

GETTING STARTED

Reset Function

You may reset your player if it should freeze or otherwise behave abnormally.

1. Disconnect your player if it is connected to a computer.
2. Remove the battery from the player. Wait 10 seconds, and then replace the battery.
3. Power on your player. Your player has now been reset.

Navigating the Menu Interface

It is easy to use the MP-C546 Navigation Joystick to select menu options, items, and files on your player.

- ✦ To move the selection cursor (highlight), slide the joystick key. To move quickly in any direction, press and hold the joystick in that direction.
 - ✧ To highlight the previous item to the left (or up), press **<**.
 - ✧ To highlight the next item to the right (or down), press **>**.
- ✦ To confirm and enter the current selection, press **OK** (press the Joystick).
- ✦ To return to the previous screen, press **ESC**.

GETTING STARTED

Main Menu

 
The Main Menu gives you access to the different function modes of your player.

- ✦ To enter the Main Menu, press **⏻/MENU**. To exit the Main Menu, press **ESC**.
- ✦ To select a function mode in the Main Menu, press **<** or **>** to highlight the mode, and then press **OK** to confirm.




Play Music

Play your digital MP3 or WMA music files.



Voice

 Play your digital voice recordings.



Record

Record from the integrated microphone.



FM Tuner

Listen to FM radio broadcasts.
Record FM radio broadcasts.



Setting

Set your player's internal options.



Folder

Play, view, or delete files from your player.

PLAY MUSIC

Enter PLAY MUSIC mode from the Main Menu to play digital MP3 or WMA music files.



PLAY MUSIC mode will play all compatible audio files on your player, regardless of directory.

Play Music Controls

Use the following controls during music playback.

Key	Function
Press OK	Start/Resume track playback. During playback, press OK to pause playback.
Hold OK	Stop track playback completely.
Press >	Play the next track.
Hold >	Fast-forward through the current track.
Press <	Play the previous track.
Hold <	Reverse through the current track.
Press -	Decrease the volume level.
Press +	Increase the volume level.
Press ⏻ / MENU	Return to Main Menu.



For more information about how to get music onto your player, please refer to the section "USB Connections > Transferring Files".

For more information about digital MP3 and WMA music files, please refer to the section "About MP3/WMA Music Files".

PLAY MUSIC

 
Repeat A-B Mode

Set a segment of a music track to repeat in a continuous loop. During playback:

- ✦ To set the starting point “A” of the loop, press **⏮/MENU**.
- ✦ To set the end point “B” of the loop, press **⏮/MENU** again. The loop will now play from point “A” to point “B”.
- ✦ To resume normal playback, press **⏮/MENU** again.

VOICE

Enter VOICE mode from the Main Menu to play your recorded files (Voice or FM Tuner). If no recordings have been made yet, the display will read “No Files”.



- ✦ The first 3 letters of voice recording files are “MIC”.
- ✦ The first 2 letters of FM Tuner recording files are “FM”.



VOICE mode will play all compatible audio recording files on your player, regardless of directory.

Voice Controls

Use the following controls in VOICE mode.

Key	Function
Press OK	Start/Resume track playback. During playback, press OK to pause playback.
Hold OK	Stop track playback completely.
Press >	Play the next track.
Hold >	Fast-forward through the current track.
Press <	Play the previous track.
Hold <	Reverse through the current track.
Press -	Decrease the volume level.
Press +	Increase the volume level.
Press ⏻ / MENU	Return to Main Menu.

RECORD

Enter RECORD mode from the Main Menu to record from the integrated microphone (voice).



The MP-C546 can also record from the FM Tuner. Refer to the FM Tuner section for details.

Record Controls

Use the following controls in RECORD mode. Recording will start immediately when RECORD is selected from the Main Menu.

Key	Function
Press OK	Start/Resume recording. During recording, press OK to pause recording.
Press ⏻/MENU	Stop and save the recording. The player will enter VOICE mode automatically to play the recorded file.

- ✦ Recordings are saved to the folder "MICIN.DIR".
- ✦ Recorded voice files are named "MICXXXXX.WAV" where XXXXX corresponds to the numerical sequence in which the recording was made (numbering starts from 00001).

FM TUNER

Enter FM TUNER mode from the Main Menu to listen to or record FM radio broadcasts.



Earphones or headphones must be connected to the headphone jack for radio operation (the earphone cord is used as an FM antenna).

FM Tuner Controls

Use the following controls in FM TUNER mode.

Key	Function
Press	Switch between Preset and Manual tuning.
Press	Preset Tuning: Tune to a higher preset station. Manual Tuning: Tune to a higher frequency.
Hold	Manual Tuning: Auto-seek the next highest frequency.
Press	Preset Tuning: Tune to a lower preset station. Manual Tuning: Tune to a lower frequency.
Hold	Manual Tuning: Auto-seek the next lowest frequency.
Press	Decrease the volume level.
Press	Increase the volume level.
Press	Enter the FM Tuner Menu.

FM TUNER

Automatically Saving Preset Stations

To automatically scan and save all available broadcast frequencies to Preset Station memory:

- ✦ Enter the FM Tuner menu (press **⏻/MENU**).
- ✦ Select and enter “Auto Scan”.



There are 30 available Preset Stations. Auto Scan will overwrite any previously stored Preset Stations.

Manually Saving Preset Stations

- ✦ Manually tune to the station you would like to save as a Preset Station (e.g., “92.7”).
- ✦ Enter the FM Tuner menu (press **⏻/MENU**).
- ✦ Select and enter “Save Station”. The display will flash “Save?”
- ✦ While the display is flashing “Save?”, press **<** or **>** to select a Preset Station number (e.g., “03”).
- ✦ Press **OK** to confirm and save. (The station “92.7” has now been saved as Preset Station “03”.)



*Press **⏻/MENU** to cancel the save process.*

FM TUNER

Deleting Preset Stations

- ✦ Enter the FM Tuner menu (press **⏻/MENU**).
- ✦ Select and enter "Delete Station". The display will flash "Delete?"
- ✦ While the display is flashing "Delete?", press **◀** or **▶** to select a Preset Station number to delete (e.g., "03").
- ✦ Press **OK** to confirm and delete. (Preset Station "03" will be deleted.)



Press **⏻/MENU** to cancel the save process.

FM Tuner Menu

To enter the FM Tuner menu, press **⏻/MENU** while the player is in FM Tuner mode.

Item	Description
Play Music	Enter PLAY MUSIC Mode. (Select this to exit FM Tuner menu and return to Main Menu).
Voice	Enter VOICE Mode.
Save Station	Save a Preset Station.
Delete Station	Delete a Preset Station
Auto Scan	Automatically scan and save all available broadcast frequencies to Preset Stations.
Record	Start recording the current FM station.

FM TUNER

FM Recording Controls

Make digital recordings of FM radio broadcasts.

Use the following controls in RECORD mode. Recording will start immediately when RECORD is selected from the FM Tuner Menu.

Key	Function
Press OK	Start/Resume recording. During recording, press OK to pause recording.
Press ⏻/MENU	Stop and save the recording. The player will enter VOICE mode automatically to play the recorded file.

- ✦ Recordings are saved to the folder "FMIN.DIR".
- ✦ Recorded voice files are named "FMXXXXX.WAV" where XXXXX corresponds to the numerical sequence in which the recording was made (numbering starts from 00001).

SETTING


Enter SETTING mode from the Main Menu to change your player's internal option settings.



- ✦ To select an option, press **<** or **>**. To confirm and enter, press **OK**.
- ✦ To exit the Setting Menu, press **ESC**.

Item	Description
Equalizer	Set a digital equalizer preset. The options are Normal, Pop, Rock, Classic, Jazz, and Bass.
Repeat Mode	Set a Repeat Mode option. The options are Normal, Repeat One, Repeat All, Shuffle Repeat, Dir Normal, Dir All Normal, Dir Shuffle Repeat.
Contrast	Set the contrast level of the display.
Backlight	Set the backlight option to change the duration of time (in seconds) that the backlight will remain on after a key press. A setting of "Off" will disable the backlight completely. A setting of "On" will keep the backlight on continuously.
Backlight Color	Set the color of the backlight. A setting of "Color All" will change the backlight color with each key press.
Power Set	Set the Power Set option to change the duration of time (in minutes) that the player will remain on when it is idle. A setting of "Disable" will turn this power saving feature off.

SETTING

Item	Description
Record Set	Set the Recording Quality level for Voice or FM recordings. The options are 32Kbps (lowest quality), 44Kbps, 64Kbps, and 88Kbps (highest quality). Higher quality recordings will take up more memory than lower quality recordings.
Language	Set the Language that the menus appear in.
Version	View your player's firmware information.
Info	View your player's memory information.
USB Mode	Set the USB mode to MSC or MTP. For more information on USB modes, see the "USB Connections" section of this manual. While the player is connected to a computer, you can change the USB mode by pressing and holding  /MENU.

FOLDER

Enter FOLDER mode to view, play, or delete files on your player.



You can also connect your player to a computer to easily manage your file library.








The mode that the player is in upon entering FOLDER mode will determine which types of files or folders will be displayed (i.e., Play Music or Voice Mode).

Folder Controls

A directory tree will be displayed on-screen upon entering FOLDER mode from the Main Menu.

Use the following controls in FOLDER mode.

Key	Function
Press 	Select the next file or folder (down).
Press 	Select the previous file or folder (up).
Press 	If a folder is selected, the folder's contents will be displayed. If a file is selected, an option box will be displayed: <ul style="list-style-type: none">• Select "Play Now" to play the selected file.• Select "Delete?" to delete the selected file, and then select "Yes" to confirm the deletion. If the  icon is selected, the previous folder's contents will be displayed.
Press  /MENU	Return to Main Menu.

USB CONNECTIONS

Minimum PC Requirements

You can connect the MP-C546 to a computer with a USB port to transfer files to your player or to manage the files on your player. The minimum requirements listed below will allow you to perform basic file management functions; advanced features will require a faster PC and Windows configuration.

- ✦ MS Windows 98SE (Service Pack 1) or ME [USB-MSC];
MS Windows 2000 (Service Pack 3 or above) with Windows Media Player 9 [USB-MSC];
MS Windows XP (Service Pack 1 or above) with Windows Media Player 10 or newer [USB-MTP]
- ✦ Pentium 166 MMX processor (or equivalent)
- ✦ 96MB RAM
- ✦ 50MB of available hard drive space
- ✦ Internet connection
- ✦ Video Display card
- ✦ Sound card
- ✦ USB 1.0 port (a USB 2.0 Hi-Speed port will enable file transfers up to 40 times faster).

New versions of Windows Media Player may be downloaded from the Microsoft website at www.microsoft.com.

USB CONNECTIONS

USB Driver Installation (Windows 98SE Only)

It is not necessary to install the USB driver if your computer is running Microsoft Windows ME/2000/XP or newer, or Macintosh OS X. Computers running these operating systems will recognize your player automatically when connected.

If your computer is running Windows 98 SE, please download and install the driver from the COBY website: www.cobyusa.com.

USB Mode (MSC/MTP)

The MP-C546 can use either **USB-Mass Storage Class (USB-MSC)** mode or **USB-Media Transfer Protocol (USB-MTP)** mode to connect to your computer. Both USB modes allow for simple, high-speed transfers of files between your player and a computer, and allow you to use your computer's operating system to view, manage, and transfer files to your player from your computer

There are, however, a few differences to take note of.

USB CONNECTIONS

USB-MSC	USB-MTP
Simple plug-and-play support for all major operating systems (Microsoft Windows 98SE/ME/2000, Macintosh OS X, Linux)	Simple plug-and-play support for Microsoft Windows XP with Service Pack 1 and Windows Media Player 10 (or newer)
Supports Windows Media DRM 9	Supports Windows Media DRM 9 (WMDRM9)
	Supports Windows Media DRM 10 (WMDRM10) — requires Windows XP and Windows Media Player 10 or newer
--	Windows Media Playlist support
USB 2.0 Hi-Speed file transfers	USB 2.0 Hi-Speed file transfers
Database rebuild required after each USB connection.	Database rebuild not required.

In general, USB-MSC mode enjoys wider compatibility with different computers and operating systems, while USB-MTP mode enables advanced features (e.g., playlist synchronization), but requires Windows XP SP1 and Windows Media Player 10 or newer.



To transfer and synchronize encrypted WMDRM10 files, USB-MTP mode (in conjunction with Windows XP and Windows Media Player 10) is required. Most online music stores and subscription services use WMDRM10 files. Please refer to the documentation of either Microsoft or the store from which you purchased your music for more information and support.*

USB CONNECTIONS

WMDRM9 may be used for music purchases, only. WMDRM10 is necessary for subscription-based services.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

*** A few examples of online music stores that support WMDRM are:** AOL Music Now, Napster To Go, URGE, Virgin Digital, and Y! Music (Yahoo! Music).



Music purchased and downloaded from the iTunes music store are AAC files encrypted with Apple Fairplay DRM. The MP-C546 does not support AAC file playback. Please use only MP3, WMA, or WAV music files with your player.

USB CONNECTIONS

Connecting to a Computer

1. Make sure the player is turned off.
2. Use the supplied USB cable to connect the MP-C546 to your computer's USB port.
3. You can switch between USB modes quickly after your player has been connected to the computer. Press and hold **⏻/MENU** during connection to toggle between the USB modes.

USB-MTP Mode

When the MP-C546 is connected under USB-MTP mode:

- ✦ Your computer will automatically recognize the player as an MTP Device. An icon representing your player will appear under "Audio Devices" when you open "My Computer".
- ✦ It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

USB-MSC Mode

When the MP-C546 is connected under USB-MSC mode:

- ✦ Your computer will automatically recognize the player as an MTP Device. An icon representing your player will appear as a "Removable Disk" when you open "My Computer".
- ✦ It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

USB CONNECTIONS

Transferring Files

The USB 2.0 High-Speed connection makes it easy to transfer music files (or any other data files) quickly between the player and your computer. Simply use the player as you would a floppy disk using basic operating system commands.

If you need further assistance with transferring files, please refer to your operating system's instruction manual or on-screen help. If you are using media management software such as iTunes, Winamp, or Windows Media Player, please refer to their documentation for support.



Do not disconnect or otherwise interrupt the player during transmission - this could damage or corrupt the player's firmware or your files. If the player is accidentally disconnected and is not working properly, reset your player (see the Getting Started section for details).

USB-MTP Mode

 
Files transferred under USB-MTP mode will not be available when using a USB-MSC connection (and vice versa).

When the MP-C546 is connected under USB-MTP mode:


1. Double-click the "My Computer" icon on your desktop and then double-click the MP-C546 icon (MTP HD Multimedia Player).

USB CONNECTIONS

2. Your player contains two folders: Data and Media.

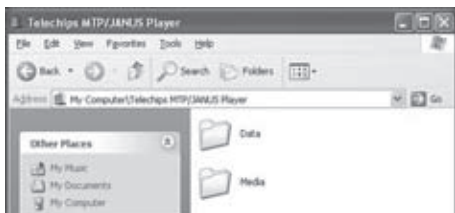

 - ✧ Drag your media files to the Media folder (e.g., MP3, AVI, JPG, WAV, WMA files).
- ✧ Drag all other types of files to the Data folder for storage (e.g., TXT, DOC, XLS, etc). Data files are only visible from a computer; these files will not be available from within the player itself.

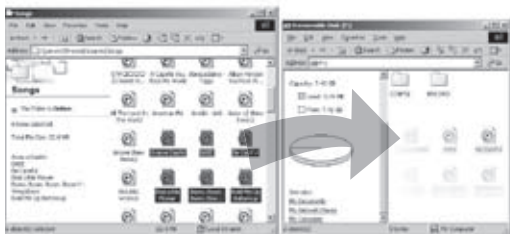

USB CONNECTIONS

USB-MSC Mode

Files transferred under USB-MSC mode will not be available when using a USB-MTP connection (and vice versa).

When the MP-C546 is connected under USB-MSC mode:

1. Double-click the “My Computer” icon on your desktop and then double-click the MP-C546 icon (Removable Disk).
2. Drag your media files (or other files) to the Removable Disk.
 - ✧ You may choose to use folders/subfolders to organize your media and data.

Disconnecting from a Computer

Disconnect your player as instructed below to prevent data loss or file/firmware corruption.

USB-MTP Mode

If you are using a USB-MTP connection, you can simply disconnect the cable from your player.

USB-MSC Mode

 
1. Double-click the green arrow in the taskbar located on the lower-right side of the computer screen (Safely Remove Hardware).



USB CONNECTIONS

- 2. Safely Remove Hardware:** Select “USB Mass Storage Device” from the list that appears and then click on “Stop”.

Stop a Hardware Device: Select “USB Mass Storage Device” from the list that appears and then click on “OK”.

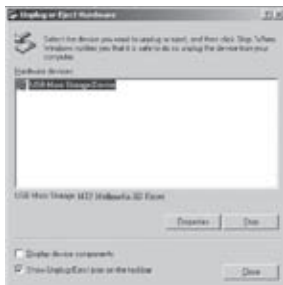

Select “USB Mass Storage Device” from the list that appears and then click on “OK”.

- 3.** When the “Safe to Remove Hardware” window appears, click the OK button and disconnect the USB cable from the player and your computer.

FIRMWARE UPGRADES

Upgrading the Firmware

From time to time, COBY may release firmware upgrades to improve the performance of the MP-C546 or to add additional features. Please check the COBY website periodically at www.cobyusa.com to see if new firmware has been released for your player. If you are experiencing abnormal behavior with your player, you may choose to restore (format) your player before updating its firmware.



Do not interrupt the firmware upgrade process — doing so could damage your player and render it inoperable.

See the documentation that is included with the firmware upgrade file for detailed instructions.

1. Connect your player to the computer.
2. Download the latest firmware for your player from www.cobyusa.com. Save this file to the computer.
3. Double-click the downloaded file (you may need a file compression utility installed on your computer). In the window that appears, double-click the file “factory4.exe” to start the upgrade utility.
4. Follow the on-screen instructions to start the upgrade process.
5. When the upgrade is complete, disconnect your player from the computer.
6. Turn on your player to complete the firmware upgrade process.

ABOUT MP3/WMA MUSIC FILES

For more information about digital MP3 and WMA files, please visit our website at www.cobyusa.com.

TROUBLESHOOTING

If you have a problem with this device, please read the troubleshooting guide below and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

COBY Electronics Technical Support

Address: 56-65 Rust St.
Maspeth, NY 11378

Hours: Monday to Friday, 8:00 AM–11:00 PM EST
Saturday to Sunday, 8:00 AM–11:00 PM EST

Phone: 718-416-3197 or 800-681-2629

Email: techsupport@cobyusa.com

Web: www.cobyusa.com

The player does not turn on.

- ✦ Ensure that the battery retains a charge. Try replacing the battery with a new one.
- ✦ Try resetting your player (remove and replace the battery).
- ✦ Ensure that the Hold switch is disengaged.

The buttons do not work.

- ✦ Ensure that the battery retains a charge. Try replacing the battery with a new one.
- ✦ Ensure that the Hold switch is disengaged.

TROUBLESHOOTING

I cannot transfer files to the player.

- ✦ Ensure that your computer is running a supported operating system.
- ✦ If you are running Microsoft Windows 98 SE, ensure that the USB driver has been properly installed.
- ✦ If using the supplied USB extension cable, ensure that it is securely attached to the player and the PC, or try using another USB cable.
- ✦ If you have connected the player through a USB hub, try connecting the player directly to your computer.
- ✦ Ensure that the player's memory capacity is not full.
- ✦ Ensure that the Hold switch is disengaged.

There is no sound during playback.

- ✦ Check the volume level.
- ✦ Ensure that the headphones are attached securely to the player.

The sound quality of the music is poor.

- ✦ Try playing the file on your computer. If the sound quality is still poor, try downloading the file again or re-encoding the file yourself.
- ✦ Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. The minimum recommended bitrate is 128kbps for MP3s and 96kbps for WMAs.

TROUBLESHOOTING

- ✦ Try lowering the volume of the player.
- ✦ Ensure that the headphones are attached securely to the player.

The player will not play my music file.

- ✦ Ensure that the file is in a compatible format.
- ✦ The file may be copy-protected and you no longer have authorization to play this file. If you feel this is in error, please contact the service from which you downloaded the file.

The LCD characters are corrupted or something is wrong with the display.

- ✦ Ensure that the correct menu language has been set.
- ✦ Try resetting your player (remove and replace the battery).

The player has malfunctioned.

- ✦ Try resetting your player (remove and replace the battery).
- ✦ Try updating the player's firmware. Please refer to the [Firmware Upgrades](#) section of this manual for detailed instructions.

SPECIFICATIONS

Display Type	128 x 32 Dot-Matrix LCD with Backlight
Memory	256MB Integrated Flash Memory
Audio Format Support	MP3, WMA
DRM Support	WMDRM10
Song Info Support	ID3, LRC
Recording Format	IMA-ADPCM Encoding
FM Frequency Range	87.5 - 108.0MHz
PC Interface	USB 2.0 Hi-Speed (MSC or MTP)
Plug and Play Support	Windows 98SE/2000/ME/XP or newer Mac OS X
Audio Output	3.5mm Stereo (Headphone)
Audio Input	Integrated Microphone
Menu Language Support	English, French, German, Hebrew, Italian, Portuguese, Spanish, Chinese (Trad), Chinese (Simp)
Power Supply	1 x "AAA" Battery
Unit Dimensions	3.65" x 1.22" x 0.85" (WHD)

NOTES

COBY Electronics Corp.

56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com

www.ecoby.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>