

COBY®

Pendant MP3 Player with SD Card Slot,
FM Radio, and Color LCD Display



MP-C654
MP-C684
MP-C694



INSTRUCTION MANUAL

Please read this manual carefully before operation

PRECAUTIONS

	CAUTION WARNING: SHOCK HAZARD, DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

For Customer Use:

Enter below the serial number that is located on the unit. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

WARNING:

Handling the cords on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. **Wash hands after handling.**



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

PRECAUTIONS

PROTECT YOUR HEARING:

Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced audio/TV technician for help.

NOTICE:

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

NOTICE:

Please refer to the packaging for this product for the technologies supported by the product.

Windows Media® is a registered trademark of Microsoft Corporation.

USB® is a registered trademark of USB Implementers Forum, Inc.

The eMusic name and logo are trademarks of eMusic.com, Inc. in the United States and abroad.

All trademarks, registered trademarks and logos are of their respective holders.

 
IMPORTANT SAFETY INSTRUCTIONS

- 1. Read Instructions:** All the safety and operating instructions should be read before the product is operated.
- 2. Retain Instructions:** The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow Instructions:** All operating and usage instructions should be followed.
- 5. Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6. Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
- 7. Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
- 8. Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
- 9.** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 10. Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
- 11. Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
- 12. Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.



IMPORTANT SAFETY INSTRUCTIONS

- 13. Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
- 14. Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
- 15. Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

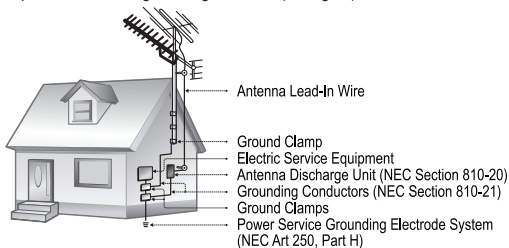

- 16. Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
- 17. Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
- 18. Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

IMPORTANT SAFETY INSTRUCTIONS

19. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
22. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
24. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

TABLE OF CONTENTS

PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	4
TABLE OF CONTENTS.....	7
PACKAGE CONTENTS	10
FEATURES	11
CONTROLS AT A GLANCE	12
Front View.....	12
Rear View	12
Left View	13
Right View.....	13
Bottom View.....	13
Music Mode Screen	14
Record Mode Screen	14
GETTING STARTED	15
Powering Your Player	15
Turning Your Player On/Off	16
Hold Switch.....	16
Installing an SD/MMC Memory Card (optional)	16
Main Menu Overview.....	17
MUSIC MODE	18
Music Mode Controls.....	18
Music Options	19
Repeat	19
Equalizer	19
Play Rate	20
File	20
Repeat A-B Mode	20
VIDEO MODE.....	21
Video Mode Controls	21
Repeat	22

TABLE OF CONTENTS


PHOTO MODE	23
Browsing Your Photo Library	23
Photo Display Controls	23
VOICE MODE	24
Voice Controls	24
Voice Options	25
Repeat	25
Equalizer	26
Play Rate	26
Voice	26
Voice Recording	26
FM MODE	28
FM Mode Controls.....	28
FM Options Menu	29
Managing FM Preset Stations.....	29
Saving Preset Stations Automatically	29
Saving Preset Stations Manually	29
Deleting Preset Stations	30
FM Recording Controls.....	31
EBOOK MODE	32
Browsing Your EBook Library.....	32
EBook Display Controls.....	32
DELETE MODE	33
Delete Controls.....	33
Delete a File (or folder)	33
SETUP MODE	34
USB CONNECTIONS	37
Minimum PC Requirements	37
USB Driver Installation (Windows 98SE Only).....	38
USB Mode (MSC/MTP).....	38
Connecting to a Computer	40
USB-MTP Mode	40
USB-MSC Mode	41

TABLE OF CONTENTS

Transferring Files	41
Disconnecting from a Computer	43
USB-MTP Mode	43
USB-MSC Mode	43
WINDOWS MEDIA PLAYER.....	44
VIDEO CONVERSION	45
System Requirements	46
Installation	46
Video Converter at a Glance.....	47
Converting Video	48
FIRMWARE UPGRADES.....	49
TROUBLESHOOTING	50
SPECIFICATIONS	53

PACKAGE CONTENTS

 Please make sure that the items listed below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

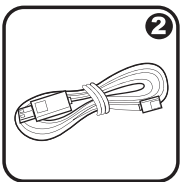

1. Coby MP3 Player
2. USB Cable
3. Instruction Manual
4. Stereo Earphones



FEATURES

- ✦ Integrated Flash Memory
- ✦ SD/MMC Card Slot for Easy Memory Capacity Upgrades (SD/MMC Card not included)
- ✦ Full-Color Display
- ✦ Plays MP3 and WMA Digital Music Files
- ✦ Plays Digital Music from most online stores and subscription services*
- ✦ Displays JPEG Digital Photo Files
- ✦ ID3 and LRC support for song and synchronized lyric information display
- ✦ Integrated FM Radio and Recorder
- ✦ Integrated Microphone for Digital Voice Recording
- ✦ Mobile Data Storage Function
- ✦ USB 2.0 for Fast File Transfers

* Music Service must support Windows Media DRM (WMDRM). WMDRM10 requires Windows XP and Windows Media Player 10 or newer.

 
CONTROLS AT A GLANCE

Front View

1. LCD Display
2. Navigation: Up
Volume + 
3. Navigation: Left
Previous/Reverse 
4. Navigation: Down
Volume - 
5. Navigation: Enter
Play/Pause 
6. Navigation: Right
Next/Forward 
7. Menu 

Rear View

8. Reset button
9. Neckstrap Hook

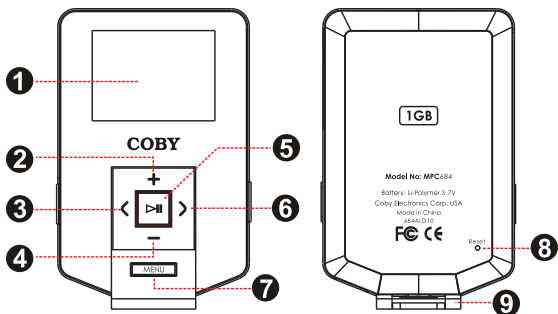

CONTROLS AT A GLANCE


Left View

 
- 10. Integrated Microphone
- 11. Hold Switch

Bottom View

- 14. Headphone Out Jack
- 15. USB Port


Right View

- 12. SD/MMC Card Slot
- 13. Record Repeat A-B 

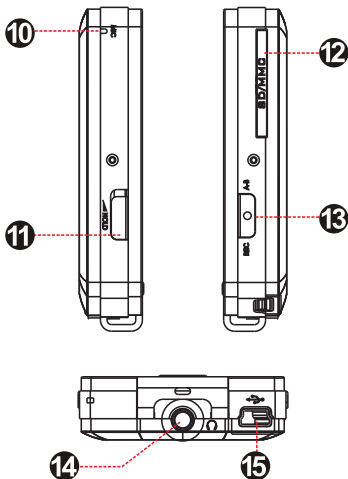


CONTROLS AT A GLANCE

 Music Mode Screen

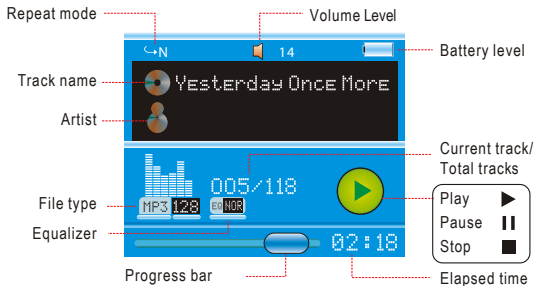

Record Mode Screen

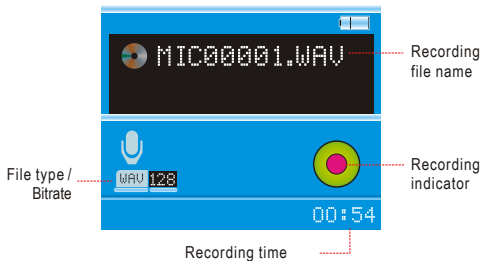 

GETTING STARTED

Powering Your Player

Your player has an integrated rechargeable battery that will provide up to 5 hours of music play time.



The battery should be charged fully (minimum 4 hours) before its initial use to ensure optimum lifetime performance.

- ✦ **Charge through your computer's USB Port:**
Your player can be charged through a PC USB connection. Plug one end of the USB cable into the player's USB port and plug the other end into the USB port of a powered-on computer.
 - ✧ When connected to a USB hub, the hub must be self-powered to charge the player's battery.
 - ✧ File transfers will extend the charging time.



The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery.


Do not connect the player to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

Use only AC adapters that have an output voltage of 5V and a minimum output current of 200mA. Failure to do so may cause a fire or damage the player.


GETTING STARTED

Turning Your Player On/Off

- ✦ To turn the player on or off, hold  for a few seconds.

Hold Switch

 
The Hold feature locks (disables) your player's controls to prevent accidental key presses when it is in your pocket or bag.

- ✦ To lock the player's controls, slide the HOLD switch to the up in the direction of the arrow. A Lock icon will be displayed on the screen. 
- ✦ To unlock the player's controls, slide the HOLD switch down.

Installing an SD/MMC Memory Card (optional)

You can upgrade the memory capacity of your player by adding an Secure Digital (SD) or Multimedia Card (MMC) memory card.

- ✦ Insert an SD or MMC card into the slot as shown in the diagram.
- ✦ This player supports memory cards up to 2GB in size.

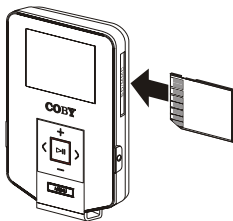


MAIN MENU

Main Menu Overview

The Main Menu gives you access to the different function modes of your player.

- ✦ The player will enter MUSIC mode when you turn it on. To access the Main Menu, hold **MENU**.
- ✦ To select a mode in the Main Menu, press **<** or **>** to highlight the mode, and then press **▶||** to confirm.

 For a detailed description of each item, see their respective sections in this manual.

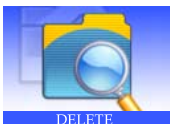












MUSIC MODE

Enter MUSIC mode from the Main Menu to play your MP3, WMA, or WAV audio files.

Music Mode Controls

Use the following controls during music playback.

Key	Function
Press 	Start/Resume track playback. During playback, press  to pause playback.
Press 	Play the next track.
Press 	Play the previous track.
Hold 	Fast-forward through the current track.
Hold 	Reverse through the current track.
Press 	Increase the volume level.
Press 	Decrease the volume level.
Press 	Start Repeat A-B Mode.
Press 	Access the Music Options menu.
Hold 	Return to Main Menu.



For more information about how to get music onto your player, please refer to the section “USB Connections” of this manual.

MUSIC MODE

Music Options

During music playback, press **MENU** to access the Music Options menu. The Music Options are: Repeat, Equalizer, Play Rate, and File.

- ✦ To select a option, press **<** or **>** to scroll the option and then press **▶||**.
- ✦ To exit the Music Options menu, press **MENU**.

Repeat

Change the order in which tracks are played. The Repeat Mode options are:

Item	Description
No Repeat	Play tracks once in sequential order.
Repeat One	Play the current track repeatedly.
Repeat All	Play all tracks repeatedly.
Random All	Play all tracks in random order.
Dir Normal	Play tracks once in sequential order in the current folder.
Dir Repeat	Play all tracks repeatedly in the current folder.
Dir Random	Play tracks in random order in the current folder.

Equalizer

Change the way music sounds on your player. The Equalizer options are: Normal, Pop, Rock, Classic, Jazz, and Bass.








MUSIC MODE

Play Rate

Adjust playback tempo. The options range from 0.67X to 1.33X where 1X equals normal tempo, 0.67X equals slowest tempo, and 1.33X equals fastest tempo.




File

Browse all audio tracks loaded on your player. Use the following keys to search for files or folders.

Key	Function
Press 	Move the selection up.
Press 	Move the selection down.
Press 	Confirm (Enter) a selection: <ul style="list-style-type: none"> Enter a folder to view its contents. Confirm a file to play it. Return to the previous folder (folder up).
Press 	Cancel or return to the previous folder (folder up).

Repeat A-B Mode

Set a segment of a music track to repeat in a continuous loop. During music playback:











- ✦ To set the starting point "A" of the loop, press .
- ✦ To set the end point "B" of the loop, press  again. The loop will now play from point "A" to point "B".
- ✦ To resume normal playback, press  again.

VIDEO MODE

Enter VIDEO mode from the Main Menu to play video files in the MTV format loaded on your player.

Video Mode Controls

Use the following controls during video playback.

Key	Function
Press 	Start/Resume track playback. During playback, press  to pause playback.
Press 	Play the next track.
Press 	Play the previous track.
Hold 	Fast-forward through the current track.
Hold 	Reverse through the current track.
Press 	Increase the volume level.
Press 	Decrease the volume level.
Press 	Access the Video Options menu.
Hold 	Return to Main Menu.

VIDEO MODE

Repeat

Adjust the Repeat Mode settings to change the order in which tracks are played. The Repeat Mode options are: No Repeat, Repeat One, Repeat All, Random All, Dir Normal, Dir Repeat, and Dir Random.

- ✦ Press **MENU** to access the Video Options menu while the player is in video playback/pause mode.
- ✦ Press **▶|**, and then press **<** or **>** to select a Repeat option. Press **▶|** to confirm.
- ✦ Press **MENU** to return to the Video List mode.

Item	Description
No Repeat	Play tracks once in sequential order.
Repeat One	Play the current track repeatedly.
Repeat All	Play all tracks repeatedly.
Random All	Play all tracks in random order.
Dir Normal	Play tracks once in sequential order in the current folder.
Dir Repeat	Play all tracks repeatedly in the current folder.
Dir Random	Play tracks in random order in the current folder.

PHOTO MODE

Enter PHOTO mode from the Main Menu to display your JPEG photo files.

Browsing Your Photo Library

Upon entering PHOTO mode, the file browser will appear. Use the following controls to search for photo files or folders.













Key	Function
Press 	Move the selection up.
Press 	Move the selection down.
Press 	Confirm (Enter) a selection: <ul style="list-style-type: none"> Enter a folder to view its contents. Confirm a file to play it. Return to the previous folder (folder up).
Press 	Cancel or return to the previous screen (folder up).

Photo Display Controls

While a photo is being displayed, use the following controls.

Key	Function
Press 	Display a photo.
Press 	Display the next photo.
Press 	Display the previous photo.
Press 	Return to the File Browser list.
Hold 	Return to Main Menu.

VOICE MODE

Enter VOICE mode from the Main Menu to play your recorded files (Voice or FM Tuner). If no recordings have been made yet, the display will read “No File”.

- ✦ The first 3 letters of voice recording files are “MIC”.
- ✦ The first 2 letters of FM Tuner recording files are “FM”.



VOICE mode will play all compatible audio recording files on your player, regardless of directory.

Voice Controls

Use the following controls in VOICE mode.

Key	Function
Press	Start/Resume track playback. During playback, press to pause playback.
Press	Play the next track.
Press	Play the previous track.
Hold	Fast-forward through the current track.
Hold	Reverse through the current track.
Press	Increase the volume level.
Press	Decrease the volume level.
Press	<ul style="list-style-type: none">• During playback: Start Repeat A-B Mode.• Paused playback: Start Microphone recording.
Press	Access the Music Options menu.
Hold	Return to Main Menu.

VOICE MODE

Voice Options

During voice playback, press **MENU** to access the Voice Options menu. The Voice options are: Repeat, Equalizer, Play Rate, and Voice.

- ✦ To select a option, press **<** or **>** to scroll the option and then press **▶||**.
- ✦ To exit the Voice Options menu, press **MENU**.

Repeat

Adjust the Repeat Mode settings to change the order in which tracks are played. The Repeat Mode options are: No Repeat, Repeat One, Repeat All, Random All, Dir Normal, Dir Repeat, and Dir Random.

Item	Description
No Repeat	Play tracks once in sequential order.
Repeat One	Play the current track repeatedly.
Repeat All	Play all tracks repeatedly.
Random All	Play all tracks in random order.
Dir Normal	Play tracks once in sequential order in the current folder.
Dir Repeat	Play all tracks repeatedly in the current folder.
Dir Random	Play tracks in random order in the current folder.

VOICE MODE

Equalizer

The digital equalizer presets allow you to change the way music sounds on your player. The Equalizer options are: Normal, Pop, Rock, Classic, Jazz, and Bass.


Play Rate

Use the Play Rate function to adjust playback tempo. The options range from 0.67X to 1.33X. Set the play rate to 1X for normal playback, 0.67X for slowest playback, 1.33X for fastest playback.





Voice

Select and confirm Voice to browse recording files saved on the player.

Voice Recording

With playback paused in Voice Mode, press  to start recording through the integrated microphone.

During recording:

- ✦ Press  or  to pause recording; press  or  again to resume recording.
- ✦ Press **MENU** to stop and save the recording. The player will return to VOICE mode automatically to play the recorded file.
 - ✧ Recordings are saved to the folder "MICIN.DIR". Select "Voice" in the Voice Options menu to view saved files.

VOICE MODE

- ✧ Voice recording files are named “MICXXXXX.WAV” where XXXXX corresponds to the numerical sequence in which the recording was made (numbering starts from 00001).



You can also start voice recording from the Voice Options menu.

FM MODE

Enter FM mode from the Main Menu to listen to or record FM radio broadcasts.



Earphones or headphones must be connected to the headphone jack for radio operation (the earphone cord is used as an FM antenna).

FM Mode Controls

Use the following controls in FM mode.

Key	Function
Press	Switch between Preset and Manual tuning.
Press	Preset Tuning: Tune to a higher preset station. Manual Tuning: Tune to a higher frequency.
Press	Preset Tuning: Tune to a lower preset station. Manual Tuning: Tune to a lower frequency.
Hold	Manual Tuning: Auto-seek the next highest frequency within reception range.
Hold	Manual Tuning: Auto-seek the next lowest frequency within reception range.
Press	Decrease the volume level.
Press	Increase the volume level.
Press	Enter the FM Mode Menu.

FM MODE

FM Options Menu

To enter the FM Options Menu, press **MENU** while the player is in FM mode.

Item	Description
Save Sta.	Save a Preset Station.
AUTO SCAN	Automatically scan and save all available station frequencies to Preset Station memory.
Delete	Delete a Preset Station.

Managing FM Preset Stations

Saving Preset Stations Automatically

To automatically scan and save all available broadcast frequencies to Preset Station memory:

- ✦ Enter the FM Options Menu (press **MENU**).
- ✦ Select and enter “Auto Scan”.






There are 30 available Preset Stations. Auto Scan will overwrite any previously stored Preset Stations.

Saving Preset Stations Manually


While in Manual Tuning:

- ✦ Manually tune to the station you would like to save as a Preset Station (e.g., “92.7”).
- ✦ Enter the FM Mode Menu (press **MENU**).

FM MODE





- ✦ Select and enter “Save Sta”. The display will read “SavePreset”
- ✦ Press  or  to select a Preset Station number to save to (e.g., “03”).
- ✦ Press  to confirm and save. (The station “92.7” has now been saved as Preset Station “03”.)




Press  to cancel the save process.

Deleting Preset Stations

While in Preset Tuning:

- ✦ Tune to the Preset Station you wish to delete.
- ✦ Enter the FM Options Menu (press ).
- ✦ Select and enter “Delete”. The display will read “Delete”.
- ✦ Press  or  to select a Preset Station number to delete (e.g., “03”).
- ✦ Press  to confirm and delete. (Preset Station “03” will be deleted.)




Press  to cancel the delete process.






FM MODE

FM Recording Controls

Make digital recordings of FM radio broadcasts.

- ✦ Press  while the player is in FM Mode. Recording will start immediately.

Use the following controls during FM Recording.








Key	Function
Press  or 	Pause/Resume recording. During recording, press  or  to pause recording.
Press 	Stop and save the recording. <ul style="list-style-type: none">• Recordings are saved to the folder "FMIN.DIR". Select "Voice" in the Voice Options menu to view saved files.• Recorded voice files are named "FMXXXXX.WAV" where XXXXX corresponds to the numerical sequence in which the recording was made (numbering starts from 00001).• The player will return to FM Mode after saving the recording.

EBOOK MODE

Enter EBOOK mode from the Main Menu to find and play text files (TXT) loaded on your player.




Browsing Your EBook Library

Upon entering EBOOK mode, the file browser will appear. Use the following controls to search for text files or folders.

Key	Function
Press 	Move the selection up.
Press 	Move the selection down.
Press 	Confirm (Enter) a selection: <ul style="list-style-type: none">•  Enter a folder to view its contents.•  Confirm a file to play it.•  Return to the previous folder (folder up).
Press 	Cancel or return to the previous screen (folder up).

EBook Display Controls

While a text file is being displayed, use the following controls:

- ✦ Press  to skip to the next page.
- ✦ Press  to skip to the previous page.
- ✦ Press  to return to the browser list.

DELETE MODE

Enter DELETE mode to delete files (or folders) on your player.

You can also connect your player to a computer to easily manage your file library.

Delete Controls

A directory tree will be displayed on-screen upon entering DELETE mode from the Main Menu.

Use the following controls in FILE mode.

Key	Function
Press >	Move the selection down.
Press <	Move the selection up.
Press ▶	Display the selected folder's contents.
Press MENU	Access the Delete Options menu.
Hold MENU	Return to Main Menu.

Delete a File (or folder)

1. Press **<** or **>** to highlight and select the file (or folder) that you wish to delete.
2. Press **MENU**. The player will ask you to confirm deletion.
3. Select "Yes" and then press **▶** to delete the file or folder (or select "No" to cancel).
4. Hold **MENU** to return to the Main Menu.

SETUP MODE


Enter SETUP mode from the Main Menu to change your player's internal option settings.

The Setup Options menu contains 6 options: Power, Language, Display, Record, Sys Tools, and Storage.

- ✦ To select an option, press **<** or **>**. To confirm and enter, press **▶**.
- ✦ To exit the Setup Menu, hold **MENU**.

Setup Option	Description
Power	<p>Set the duration of time that your player will remain on for when it is idle.</p> <ul style="list-style-type: none">• Auto Off: 1, 3, 5, or 10 minutes.• Always On: Disable this power saving feature off.
Language	<p>Set the menu and display language:</p> <ul style="list-style-type: none">• English, Spanish, Portuguese, French, German, Chinese (Traditional), Chinese (Simplified)
Display	<p>Set the Display options:</p> <ul style="list-style-type: none">• Brightness: Adjust the brightness of the display.• Backlight: Set the duration of time (in seconds) that the backlight will remain on after a key press. A setting of "On" will keep the backlight on continuously.

SETUP MODE

Setup Option	Description
Record	<p>Set the Recording Quality Level for Voice and FM recordings. The options are: High Qty., Middle Qty., and Low Qty.</p> <p>Lower quality recordings will take up less memory than higher quality recordings.</p>
Sys Tools	<p>Use the System Tools:</p> <ul style="list-style-type: none">• Format: Use the Format function to format your player. It may become necessary to format your player if data or files become corrupt. Always use the Format function of your player and not your computer's format utility. <div data-bbox="391 774 940 1110" style="background-color: #e0e0e0; padding: 10px;"><p> Formatting will destroy all data on your player so make sure to backup your data first.</p><p>If you have installed an SD/MMC card and have selected "SD/MMC Card" from the STORAGE menu, the SD/MMC card will be formatted instead.</p></div> <ul style="list-style-type: none">• Reset: Return all of your player's internal options to their factory-default settings.• Sys Info: View firmware and system information.

SETUP MODE

Setup Option	Description
Storage	<p>To set which storage option that the player will use.</p> <ul style="list-style-type: none">• Select "Internal" to use the player's integrated flash memory.• Select "SD/MMC Card" to use an SD or MMC card that has been installed (optional).

USB CONNECTIONS

Minimum PC Requirements

You can connect your Coby MP3 player to a computer with a USB port to transfer files to your player or to manage the files on your player. The minimum requirements listed below will allow you to perform basic file management functions; advanced features will require a faster PC and Windows configuration.

- ✦ MS Windows 98SE (Service Pack 1) or ME [USB-MSC];
MS Windows 2000 (Service Pack 3 or above) with Windows Media Player 9 [USB-MSC];
MS Windows XP (Service Pack 1 or above) with Windows Media Player 10 or newer [USB-MTP]
- ✦ Pentium 166 MMX processor (or equivalent)
- ✦ 96MB RAM
- ✦ 50MB of available hard drive space
- ✦ Internet connection
- ✦ Video Display card
- ✦ Sound card
- ✦ USB 1.0 port (a USB 2.0 Hi-Speed port will enable faster file transfers).

New versions of Windows Media Player may be downloaded from the Microsoft website at www.microsoft.com.

USB CONNECTIONS

USB Driver Installation (Windows 98SE Only)

It is not necessary to install the USB driver if your computer is running Microsoft Windows ME/2000/XP or newer, or Macintosh OS X. Computers running these operating systems will recognize your player automatically when connected.

If your computer is running Windows 98 SE, download the driver from COBY website: www.cobyusa.com.

USB Mode (MSC/MTP)

The player can use either **USB-Mass Storage Class (USB-MSC)** mode or **USB-Media Transfer Protocol (USB-MTP)** mode to connect to your computer. Both USB modes allow for simple, high-speed transfers of files between your player and a computer, and allow you to use your computer's operating system to view, manage, and transfer files to your player from your computer

There are, however, a few differences to take note of:

USB-MSC	USB-MTP
Simple plug-and-play support for all major operating systems (Microsoft Windows 98SE/ME/2000, Macintosh OS X, Linux)	Simple plug-and-play support for Microsoft Windows XP with Service Pack 1 and Windows Media Player 10 (or newer)

USB CONNECTIONS

USB-MSC	USB-MTP
Supports Windows Media DRM 9	Supports Windows Media DRM 9 (WMDRM9)
	Supports Windows Media DRM 10 (WMDRM10) -- requires Windows XP and Windows Media Player 10 or newer
--	Windows Media Playlist support
USB 2.0 Hi-Speed file transfers	USB 2.0 Hi-Speed file transfers

In general, USB-MSC mode enjoys wider compatibility with different computers and operating systems, while USB-MTP mode enables advanced features (e.g., playlist synchronization), but requires Windows XP SP1 and Windows Media Player 10 or newer.



To transfer and synchronize encrypted WMDRM10 files, USB-MTP mode (in conjunction with Windows XP and Windows Media Player 10) is required. Most online music stores and subscription services use WMDRM10 files*. Please refer to the documentation of either Microsoft or the store from which you purchased your music for more information and support.

WMDRM9 may be used for music purchases, only. WMDRM10 is necessary for subscription-based services.

*** A few examples of online music stores that support WMDRM are:** AOL Music Now, Napster To Go, URGE, Virgin Digital, and Y! Music (Yahoo! Music).

USB CONNECTIONS



Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Music purchased and downloaded from the iTunes music store are AAC files encrypted with Apple Fair-play DRM. The player does not support AAC file playback. Please use only MP3, WMA, or WAV music files with your player.

Connecting to a Computer

Connect the player to your computer with the supplied USB cable.

- ✦ You can switch between USB modes quickly after your player has been connected to the computer. Hold **MENU** during connection to toggle between the USB modes.

USB-MTP Mode

When the player is connected under USB-MTP mode:

USB CONNECTIONS

- ✦ Your computer will automatically recognize the player as an MTP Device. An icon representing your player will appear under “Audio Devices” when you open “My Computer”.
- ✦ It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

USB-MSC Mode

When the Player is connected under USB-MSC mode:

- ✦ Your computer will automatically recognize the player as an MSC Device. An icon representing your player will appear as a “Removable Disk” when you open “My Computer”.
- ✦ It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

Transferring Files

The USB 2.0 Hi-Speed connection makes it easy to transfer music files (or any other data files) quickly between the player and your computer. Simply use the player as you would a floppy disk using basic operating system commands.

If you need further assistance with transferring files, please refer to your operating system's instruction manual or on-screen help. If you are using media management software such as iTunes, Winamp, or Windows Media Player, please refer to their documentation for support.

USB CONNECTIONS



Do not disconnect or otherwise interrupt the player during transmission - this could damage or corrupt the player's firmware or your files. If the player is accidentally disconnected and is not working properly, reset your player (see the Getting Started section for details).

Files transferred in USB-MTP mode will appear in a folder called "MTPMEDIA" when the player is in USB-MSC mode.

USB CONNECTIONS

Disconnecting from a Computer

Disconnect your player as instructed below to prevent data loss or file/firmware corruption.

USB-MTP Mode

If you are using a USB-MTP connection, you can simply disconnect the cable from your player.

USB-MSC Mode

1. Double-click the green arrow in the taskbar located on the lower-right side of the computer screen (Safely Remove Hardware).



2. **Safely Remove Hardware:** Select “USB Mass Storage Device” from the list that appears and then click on “Stop”.



Stop a Hardware Device: Select “USB Mass Storage Device” from the list that appears and then click on “OK”.

Select “USB Mass Storage Device” from the list that appears and then click on “OK”.

3. When the “Safe to Remove Hardware” window appears, click the OK button and disconnect the USB cable from the player and your computer.

WINDOWS MEDIA PLAYER

You can use Windows Media Player and a USB-MTP connection to manage your music media library with Microsoft Windows XP or newer.

New versions of Windows Media Player may be downloaded from the Microsoft website at www.microsoft.com.

For more information, please refer to the Coby MP3 Quick Start Guide.



For more information and support regarding music transfer and synchronization with Windows Media Player (WMP), please see the help section included with WMP (click Help > Synchronizing Content to Devices).

VIDEO CONVERSION

Use the video conversion software utility included on the Installation CD to create video files that are suitable for playback on your Coby MP3 player.



Your player supports MTV files with the following specifications:

96 x 64 resolution at 15 frames per second (fps)



For detailed instructions and information about the video conversion software, please refer to the manual included on the installation CD.

Note:

The video conversion software is included for your convenience and is compatible with Microsoft Windows operating systems only. There are many other video conversion utilities available for download or purchase on the internet.

Because the program is licensed free of charge, there is no warranty for the program, to the extent permitted by applicable law. Except when otherwise stated in writing the copyright holders and/or other parties provide the program "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The entire risk as to the quality and performance of the program is with you. Should the program prove defective, you assume the cost of all necessary servicing, repair or correction.

In no event unless required by applicable law or agreed to in writing will any copyright holder, or any other party who may modify and/or redistribute the program as permitted above, be liable to you for damages, including any general, special, incidental or consequential damages arising out of the use

VIDEO CONVERSION

or inability to use the program (including but not limited to loss of data or data being rendered inaccurate or losses sustained by you or third parties or a failure of the program to operate with any other programs), even if such holder or other party has been advised of the possibility of such damages.

System Requirements


OS Support:	Microsoft Vista, XP, 2K, Me, 98
Memory (RAM):	50MB
Free HD Space:	100MB
CPU:	Pentium class equivalent or better
Video:	Adapter capable of 24-bit color for QuickTime support
Sound:	DirectX 7-compatible sound card supporting 2 audio channels (stereo) sampled at 16-bit/44.1Khz or better
DirectX:	DirectX 9.0
QuickTime:	QuickTime 7.0
WMP:	WMP9 or better

Installation

1. Copy the folder "MTV Video Converter" to your computer.
2. To start the software, double-click the file "Video-Convert.exe".

VIDEO CONVERSION

 Video Converter at a Glance

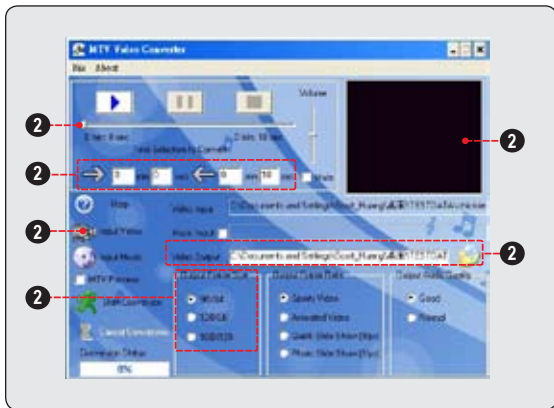

1. Seek Bar for preview and time selection.
2. Starting and Ending time-point selection.
3. Select the video file to convert
4. Select the size of the converted video (ensure that this is set to 96X64).
5. Select the destination folder of the converted video file.

VIDEO CONVERSION

Converting Video

1. Start the Video Conversion program.
2. Select the source video file to convert. The source file must be one of the following video types: AVI (*.avi), WMV (*.wmv, *.asf), MPEG-1 (*.mpg), QuickTime (*.mov, *.qt), MPEG-2 (*.vob), RealMedia (*.rm, *.rmvb), MPEG-4, or 3GP (*.3gp).



DirectX 9.0, Windows Media Player 9.0, and other codecs must be installed to support all media types.

2. Select the destination folder that the converted file will be saved to.
3. Ensure that the Output Frame Size is set to "96X64".
4. Click "Start Conversion" to start the conversion process.



5. When the conversion is complete, copy the converted files to your player for playback.

FIRMWARE UPGRADES

From time to time, COBY may release firmware upgrades to improve the performance of the player or to add additional features. Please check the COBY website periodically at www.cobyusa.com to see if new firmware has been released for your player. If you are experiencing abnormal behavior with your player, you may choose to restore (format) your player before updating its firmware.



Do not interrupt the firmware upgrade process — doing so could damage your player and render it inoperable.

See the documentation that is included with the firmware upgrade file for detailed instructions.

1. Connect your player to the computer.
2. Download the latest firmware for your player from www.cobyusa.com. Save this file to the computer.
3. Double-click the downloaded file (you may need a file compression utility installed on your computer). In the window that appears, double-click the file “factory4.exe” to start the upgrade utility.
4. Follow the on-screen instructions to start the upgrade process.
5. When the upgrade is complete, disconnect your player from the computer.
4. Turn on your player to complete the firmware upgrade process.

TROUBLESHOOTING

If you have a problem with this device, please read the troubleshooting guide below and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

Address	COBY Electronics Technical Support 56-65 Rust Street Maspeth, NY 11378
Email	techsupport@cobyusa.com
Web	www.cobyusa.com
Phone	800-727-3592: Weekdays 8:00AM–11:00PM EST Weekends 9:00AM–5:30PM EST 718-416-3197: Weekdays 8:00AM–5:30PM EST

The player does not turn on.

- ✦ Ensure that the player has been charged.
- ✦ Ensure that the Hold switch is disengaged.
- ✦ Try resetting your player (use a pin to press the Reset button located on the rear of the player).

The buttons do not work.

- ✦ Ensure that the player has been charged.
- ✦ Ensure that the Hold switch is disengaged.

I cannot transfer files to the player.

TROUBLESHOOTING

- ✦ Ensure that your computer is running a supported operating system.
- ✦ If you are running Microsoft Windows 98 SE, ensure that the USB driver has been properly installed.
- ✦ If using the supplied USB extension cable, ensure that it is securely attached to the player and the PC, or try using another USB cable.
- ✦ If you have connected the player through a USB hub, try connecting the player directly to your computer.
- ✦ Ensure that the player's memory capacity is not full.
- ✦ Ensure that the Hold switch is disengaged.

There is no sound during playback.

- ✦ Check the volume level.
- ✦ Ensure that the headphones are attached securely to the player.

The sound quality of the music is poor.

- ✦ Try playing the file on your computer. If the sound quality is still poor, try downloading the file again or re-encoding the file yourself.
- ✦ Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. The minimum recommended bitrate is 128kbps for MP3s and 96kbps for WMAs.
- ✦ Try lowering the volume of the player.

TROUBLESHOOTING

- ✦ Ensure that the headphones are attached securely to the player.

The player will not play my music file.

- ✦ Ensure that the file is in a compatible format.
- ✦ The file may be copy-protected and you no longer have authorization to play this file. If you feel this is in error, please contact the service from which you downloaded the file.

The LCD characters are corrupted or something is wrong with the display.

- ✦ Ensure that the correct menu language has been set.
- ✦ Try resetting your player (use a pin to press the Reset button located on the rear of the player).

The player has malfunctioned.

- ✦ Try resetting your player (use a pin to press the Reset button located on the rear of the player).
- ✦ Try updating the player's firmware. Please refer to the Firmware Upgrades section of this manual for detailed instructions.

SPECIFICATIONS

Display Type	1.33" Full-Color CSTN LCD
Memory	Integrated Flash Memory MP-C654: 512MB MP-C684: 1GB MP-C694: 2GB SD/MMC Card Slot for Expanded Memory Capacity (up to 2GB cards)
Audio Format Support	MP3, WMA, WMA-DRM, WAV
Video Format Support	MTV: 96x64, 15fps
Photo Format Support	JPEG
DRM Support	WMDRM10
Song Info Support	ID3, Windows Media
Recording Format	IMA-ADPCM Encoding
FM Frequency Range	87.5 - 108.0MHz
PC Interface	USB 2.0 Hi-Speed (MSC or MTP)
Plug and Play Support	Windows 98SE/2000/ME/XP or newer Mac OS X
Audio Output	3.5mm Stereo (Headphone)
Audio Input	Integrated Microphone
Menu Language Support	English, Spanish, Portuguese, French, German, Chinese (Trad), Chinese (Simp)
Power Supply	Rechargeable Lithium-ion Battery USB Charge
Unit Dimensions	1.84" x 2.76" x 0.55" (WHD)

Design, specifications, and manual are subject to change without prior notice.

654ALD10 / 684ALD10 / 694ALD10

NOTES

NOTES

COBY Electronics Corp.

56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com
www.ecoby.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>