

Fahrenheit

DVD Player Operating Instructions



Before attempting to
connect, or operating
this product.

Please read the
instructions completely

DVD-3T



DVD



FCC

Download from www.Somanuals.com. All Manuals Search And Download.

Important Precautions

The design and manufacture of this player takes personnel safety in to consideration. However, any improper operation may result in electric shock, fire and other hazard. So Please adhere to following precautions.

Safety precautions

- There is dangerous voltage inside this product, do not open the cabinet by yourself to prevent electric shock. Any service please contact professional technician to perform. Replacement shall apply the components recommended by the manufacturer;
- To prevent electricity leakage or damage, do not spill liquid, alcohol in the product;
- Do not drop anything into the product from ventilation hole of the cabinet or any other opening, to prevent electricity or damage;
- To power the player must be in line with the mark in the rear panel;
- When the plug of the unit is connected to the mains outlet, the unit will be still connected to AC even of the power is turned off.
- To prevent damage caused by lightening, when you are not going to use this product, please shut off the power;
- You should clean the cabinet with dry, soft cloth only after the power is turned off.

Operating precautions

- Place the product levelly where there is little dust and good ventilation condition;
- Prevent the product and its supplied remote control from moisture, heating, vibration or direct sunlight;
- Condensation caused by moisture may happen to the lens inside the product, it will affect the play effect. In such case please turn on the power (unload the disc) to operate it for 1~2 hours, vaporize the condensation with the home-grown heat;
- Do not turn on/off the product frequently. After you turning off the product, please wait for about 10 seconds prior reopening it. Do not play the broken, scratched or twisted discs;
- Please do not put anything other than discs into the tray;
- When the disc is improperly loaded, please do not force.

1、	DVD features	1
2、	Names of parts	2
2.1	Frontal panel	2
2.2	Rear panel	2
2.3	Remote control	3
3、	Preparation before operation	4
3.1	unpacking and check	4
3.2	assembling batteries of remote control	4
3.3	connections	5
4、	Basic operations	8
	• Play	8
	• Pause	9
	• Mute	9
	• Stop playing	9
	• The use of REMOTE SENSOR	9
5、	Frequent operations	10
	• Select content to be played with menu	10
	• Play fast forward	10
	• Play fast backward	11
	• Slow play	11
	• Skip to next chapter/track	11
	• Skip to previous chapter/track	11
	• Select track	11
	• Display track List	11
	• Repeat play	12
	• Select Subtitle language	12
	• Program play	12
	• Display playing time and state	13
	• Digest DVD video and audio content	13
	• Digest VCD(SVCD) video and audio content	13
	• MP3 operations	14
6、	System setting	15
	Example 1:Set TV screen ratio mode	15
	Example 2:Set sound mix output mode	16

Table of content

Example 3:Coaxial output	17
Example 4:Set age control grade	18
Example 5:Dolby digital seting	18
Example 6:Set operation indication or menu display language	19
7、 Functions of buttons in remote control	20
8、 Technical terms	24
9、 Troubleshooting	24
10、 Specification	25

1. DVD features

It provides this multi-media disc player high-resolution image with, high-quality sound and surround sound effect. The DVD player can play not only DVD discs of various versions, but also VCD, SUPER-VCD, DVCD, CD, MP3, etc. The DVD player can receive TV program.

Features

1. It is compatible to DVD, VCD, SUPER-VCD, DVCD, CD, MP3, etc.
2. Multi language on screen menu.
3. High quality image with over 500 lines horizontal resolution.
4. WITH TUNER.

Other features

1. Dts digital output, provides high-fidelity stereo interface.
2. Multi-language support. DVD supports up to 32-language caption and 8-language dub.
3. Multi-angle. The user can select different angle at their option to watch, e.g. closer angle, full view, etc.
4. Multi-image ratio. multi-image ratio mode enables the product to match different types of TV screen.


Names of parts

2. Names of parts

2.1 Front panel


- 1.POWER ON/OFF
- 2.DISK TRAY
- 3.OPEN/CLOSE
- 4.REVERSE
- 5.FORWARD
- 6.MENU
- 7.AUDIO L IN

- 8.AUDIO R IN
- 9.VIDEO IN
- 10.REMOTE RECEIVER
11. LCD DISPLAY
- 12.PAUSE
- 13.STOP
- 14.PLAY

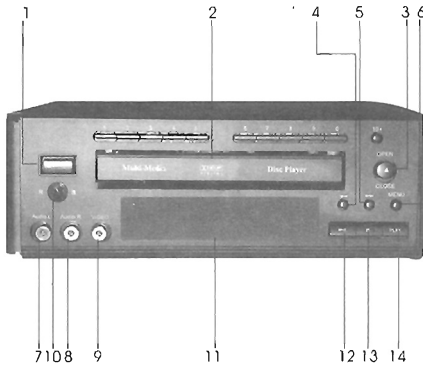


2.2 Rear panel

- 1.COAXIAL
- 2.S-VIDEO
- 3.VIDEO
- 4.AUDIO L
- 5.AUDIL R
- 6.PUSE
- 7.REMOTE SENSOR INPUT
- 8.DC 12V IN
- 9.12V REMOTE OUT
- 10.ANT IN

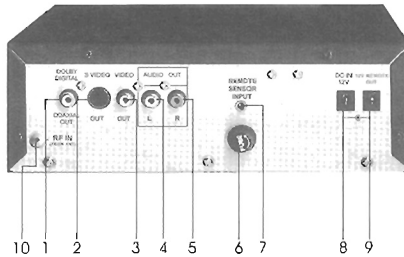

2.3 Remote control

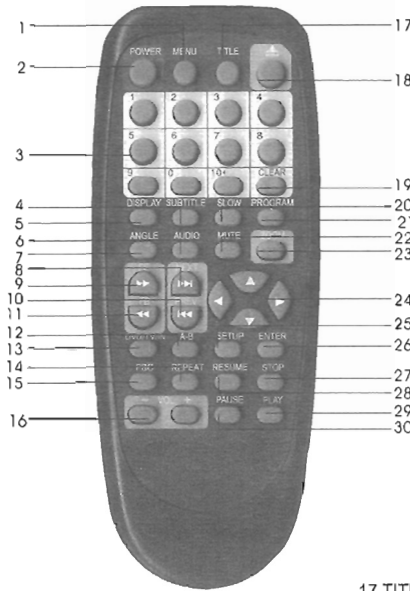

- 1.MENU
- 2.POWER
- 3.NUMBER
- 4.SUBTITLE
- 5.DISPLAY
- 6.AUDIO
- 7.VIEW ANGLE
- 8.NEXT
- 9.FORWARD
- 10.PREVIOUS
- 11.BACKWARD
- 12.A-B
- 13.DVD/TV/IN
- 14.REPEAT
- 15.PBC
- 16.VOLUME

- 17.TITLE
- 18.EJECT
- 19.CLEAR
- 20.SLOW
- 21.PROGRAM
- 22. MUTE
- 23.ZOOM
- 24.DIRECTION KEYS
- 25.SETUP
- 26.ENTER/SELECT
- 27.STOP
- 28.RESUME
- 29.PLAY
- 30.PAUSE

3. Preparation before operation

3.1 Unpacking and check:

Check for the following Accessories:



Remote control 1



choke 1



Hanger 2



Screw



Battery 2



Audio/Video cord



Owner's manual 1



Remote sensor

3.2 Assembling batteries of remote control


Open battery compartment, Insert two 7#A batteries, make sure to match "+" and "-" of the batteries to the marks in the battery compartment. While operating remote control, please point it to the frontal panel of the DVD player.



3.3 Connections

The video signal is output through s-video or video output terminal, while audio signal is output by mixing channel terminal, coaxial terminal, dts signal is only output through or coaxial terminal. There are many solutions to connect TV and this product, user can select one according to the condition of the apparatus to be connected. However, be aware to shut off all power prior connection.


DVD+TV

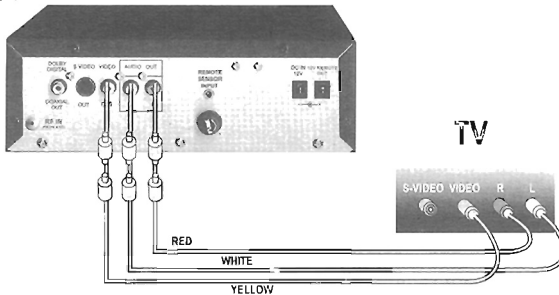

S-video terminal

Plug one end of S-video cable into S-VIDEO socket in back panel of the product, the other end into TV S-VIDEO socket, then connect audio cable to TV (notes: do not connect video cable). See diagram blow.


DVD player+TV

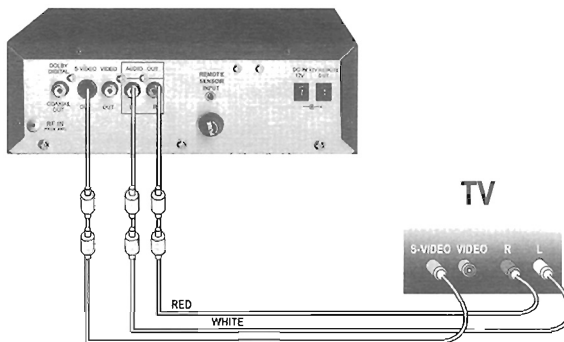

Preparation before operation


DVD+AC

Power connection drawing while operating in room
Connect AC adaptor to +12V input

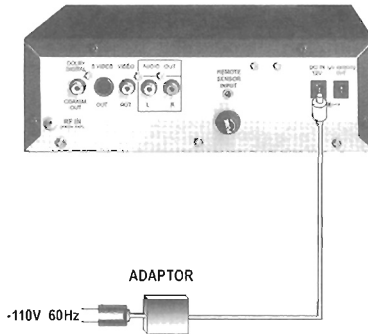

DVD+CHOKE


Power connection for automotive application

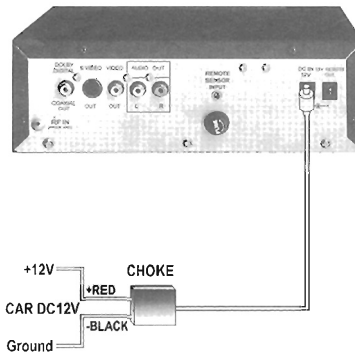


Note:

It is recommended to connect to +12V ignition source.

DVD+AMP

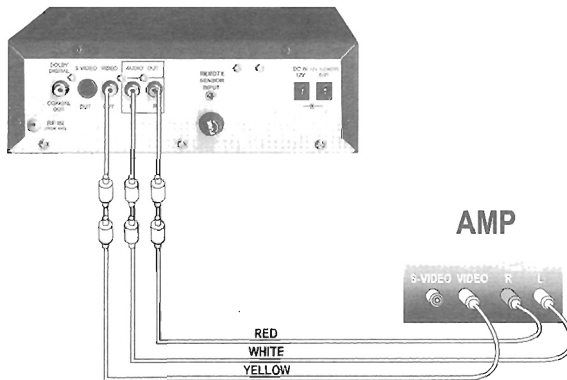

DVD+RECORDER

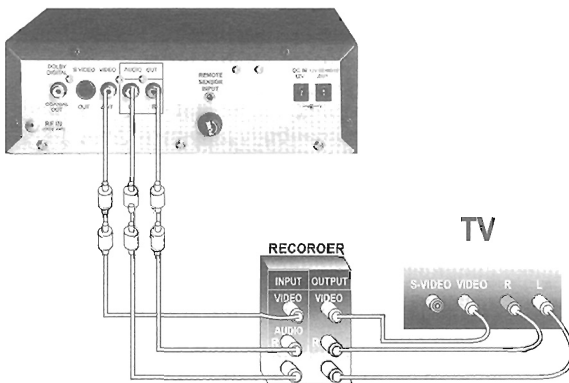

4. Basic operation

If you have connected the product to TV, all power lines have been plugged into receptacles, and loaded the batteries into remote control, so you can play the player.

- Turn on TV power
- If you have connected amplifier, you should also turn it on, and select proper amplifier mode according to the type of discs to be played.

Play

1. Push [POWER] in the player.


- Control TV remote control to shift TV to proper video input mode (VIDEO IN).

2. Push open/close eject player or [EJECT] buttons on the remote control to the tray.

- Load a disc in the tray, with label side upward (see following figure), place single disc in the tray,

3. Push [▶] PLAY

- The player will close the tray automatically and begin to read it, It can identify different disc format then display it on the screen of DVD frontal panel, afterwards it automatically plays disc, If directory or menu picture display in the screen, you can push the direction buttons [UP], [DOWN], [LEFT] and [RIGHT] buttons in the remote control to move lighting band to desired track, You can directly push number buttons to select track.

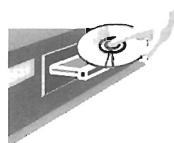


Pause

While playing push [||] to pause the playback, push [▶] to resume play



Mute (available to analog audio output Signal only)

 Push [MUTE] to silence the sound of the player, press it again to return to normal state.



Stop playing EJECT

1. Push [EJECT]

- unload the disc until the tray is ejected. After stopping playing, unload the disc until the tray is ejected.

2. Push [EJECT] to close the tray


3. Press [POWER] to turn off the player.

- Then turn off power of all connected equipment.



The use of REMOTE SENSOR

If you want to put the DVD player in where you can not see, please insert REMOTE SENSOR in the REMOTE SENSOR INPUT, and put REMOTE SENSOR on where you can see in automobile, you can control the DVD player so long as let REMOTE CONTROL toward REMOTE SENSOR.

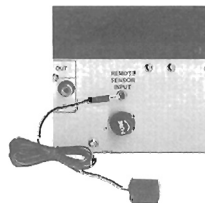

Attention:

① While playing if you find the picture is not shown in full screen or some part hidden or black and white image occur, you need to the system, please select right TV system (PAL or NTSC). Please refer to instructions of [SYSTEM] IN CHAPTER 6 or examples in chapter 6.

② When the symbol shows in TV screen, it signifies invalid operation or your operation is not accepted by the player.

5. Frequent operation

We will introduce some regular operations of different types of function, the user can perform one or more operations as you like, In addition chapter 7 details purposes and operations of all buttons



Select part to be played with menu

If DVD disc to be played has menu, when PBC state is on you can display the menu by pushing [MENU] or [TITLE], whereon you select a popular part to play. you can operate following procedures

1. Push [MENU]

The screen display menu picture, the content to be selected varies with different disc.

2. Push [UP], [DOWN], [LEFT], [RIGHT]

Move the lighting band to the desired item or Made by pushing these buttons

3. Push [ENTER] to confirm selecting the item

This moment the screen may display a submenu. You can also push [UP], [DOWN], [LEFT], [RIGHT] to confirm selecting the push [ENTER] to confirm the selection



Play fast forward

While playing you can push [FF] button to play fast forward. Four speed are available to play forward, press it once the speed grows by one shift, when the speed reaches maximum speed, press [FF] again to return to normal state.

Play fast backward

While playing you can push [FB] button to play fast backward. Four speed are available to play forward, press it once the speed grows by one shift, when the speed reaches maximum speed, press [FB] again to return to normal state.

**Slow play**

While playing push [SLOW] to play slowly at different speed. You can play slow forward or backward, three shift speed are available for either of them. Push [SLOW] once, press it once the speed decreases by one shift, finally it returns to normal state.

**Skip to next chapter/track**

While playing push [NEXT] button.


**Skip to previous chapter/track**

While playing push [PREV] button.

**Select track**

There are more than one operation procedure available

A. Push [NEXT] or [PREV] to skip to the next or the previous track and play.

B. For those discs with track numbered directly push number buttons to enter the No. of desired track to play. If the moment the screen displays , so there may be three possible reasons: (1) the track in the disc is not numbered; (2) the number entered beyond the scope; (3) PBC is on (push [PBC] to shift PBC state);

C. Select among the song track list (refer to the next chapter).

 
**Display the track list**

For DVD discs, when PBC is on, push [MENU] to display the track list, the moment firstly push [UP], [DOWN] to select a track then push [ENTER] to play,

For non-DVD discs, when PBC is on, while playing push [RESUME] to display the track list, the moment you can directly enter No. to select.



Frequent operation



You can push [PBC] to change PBC state.

Attention: whether the above procedures work will be subject to the type of disc.



Repeat play

While playing you can push [REPEAT] to select different repeat content.

1. For DVD discs, push [REPEAT] to repeat chapter, push [REPEAT] again to repeat title, push [REPEAT] again to exit.
2. For non-DVD discs, when PBC is off, push [REPEAT] to repeat the track content, push [REPEAT] again to repeat all disc, push [REPEAT] again to exit.



Select subtitle Language (subject the Type of disc)

For DVD disc, you can push [SUBTITLE] to select the language of caption, e.g. English. Press it once, the screen will display available language alternatively.



Program play (subject to the type of Disc)

When PBC is off, in the stopping state:

1. Push [PROGRAM]

The screen display following figure, programming operation is available.

Program: P00:00

2. Push number buttons to enter the number Of Chapter or track

Example: of the user want to firstly play track 5, then track 3, finally track 6, so you can enter 3, 5, 6 orderly. (You can push [CLEAR] button to escape the entered number).

3. Push [PLAY]

The player will play orderly as the user Defined.

Display playing time and state

Push [DISPLAY] button, TV screen will display current play time state, i.e. playing time, remaining time, press [DISPLAY] each time, the screen will show a time alternatively (the time displayed in the frontal panel accordingly changes), the content to be displayed each time will subject to the type of the disc.



Digest DVD video and audio content

1. Push [PBC] turn off PBC function.
2. Push [MENU]




The player will play topic image and sound of all segment of different chapters orderly in small windows (the moment you can push [STOP] to terminate the process), for each segment the player will play a small part. In one screen maximum 9 pictures can be played, the moment you can push [PREV], [NEXT] to page up or page down, or you can directly push number buttons to select a popular chapter. (please do not play the segment without content, otherwise unforeseen result may occur).

Digest VCD (SVCD) video and audio content


1. Push [STOP]
2. Push [MENU]

The screen will display following figure, then the user can select

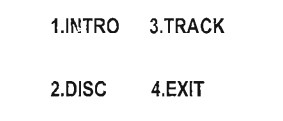

3. push [1] or [2] or [3]

The player will play topic image and sound of all segment of different chapters orderly in small windows (the moment you can push [STOP] to terminate the process), for each segment the player will play a small part. In one screen maximum 9 pictures can

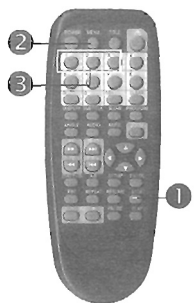

Frequent operation


Attention: what will be digested by pushing [2] or [3] will depend on the type of the disc and relate to the manufacture process of the disc.

be played, the moment you can push [PREV], [NEXT] to page up or page down, or you can directly push number buttons to select a popular chapter. (please do not play the segment without content, otherwise unforeseen result may occur).

Mp3 operation

MP3 is recently introduced disc, which is recorded with MP3 format audio program. This DVD player supports MP3 disc, you can operate following these procedures:

Push [EJECT] to eject tray, load MP3 disc, push [EJECT] again, TV screen will display following pictures

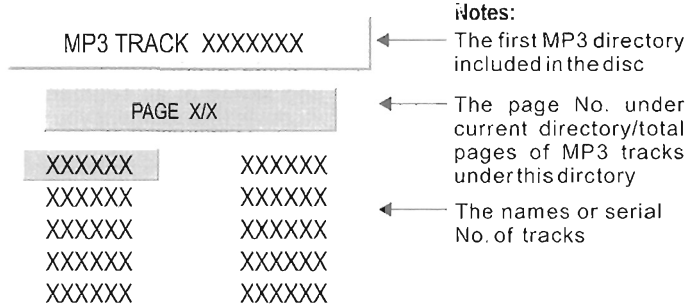

In this picture, the user can operate following this procedures:

1. Push [UP], [DOWN] [LEFT], [RIGHT] to move the lighting band to select desired track, the push [PLAY] to play.

2. If a Mp3 disc includes more than one directories, you can firstly push [STOP], then push [PROGRAM] to enable TV screen list the directory of the MP3 disc, Afterwards you can push [UP], [DOWN], [LEFT], [RIGHT] to move The lighting band to select desired track, push [play] to play.

Attention:

① While playing, you can push [PREVIOUS] or [NEXT] to play the previous track or the next one.

② While playing you can push [STOP] to back to the menu picture.

6. System setting

Push [SETUP], the screen will display system setting menu, the moment you can push [UP], [DOWN] to move the yellow lighting band to the desired item, push [ENTER] to display sub-menu. In the sub-menu push [RIGHT] to enter inferior sub-menu. You can push [UP], [DOWN] to move the yellow lighting band in all menu pictures. Push [ENTER] your selection will be valid. Push [LEFT] to escape the sub-menu in the right of the screen. Any time push [SETUP] or [RESUME] you will escape system setting state.

```

SETUP MENU-MAIN PAGE
>GENERAL SETUP<
>SPEAKER SETUP<
>DOLBY DIGITAL SETUP<
>DOLBY SURROUND SETUP<
  >PREFERENCE<
    >EXIT SETUP<
    
```

→ The yellow lighting band indicates current item

```

GENERAL SETUP
    
```

→ The explanation to the current item



Following are some examples of frequent setting the user can setting other items following their instructions.

Example 1: Set TV screen ratio mode

1. Push [SETUP] to enable the screen display the system setting picture, make sure the yellow the yellow lighting band has been located in GENERAL SETUP push [ENTER], TV screen will display following picture.

GENERAL SETUP

```

 







TV DISPLAY >>
TV TYPE          NORMAL/ PS
PICTURE MODE     NORMAL/ LS
ANGLE MARK
OSD LANG        WIDE
AUDIO OUTPUT
CAPTIONS
GENERAL SETUP
    
```

System setting

2. Push [RIGHT] to enter the sub-menu in the sub-menu in the right screen. If you want to set the screen to "WIDE", firstly push [DOWN] twice to move the yellow lighting hand to "WIDE" item, then push [ENTER],


3. Push [RESUME] to exit system setting.

   Notes: three screen ratio modes, i, e, 16:9 WIDE, 4:3 PS, 4:3 L are available for your selection to enable different discs to match TV. the relationship between the video of disc and screen ratio mode are as follows:

Video of disc	normal	4:3PS	4:3LB	16:9
4:3				
16:9				

Example 2: Set sound mix output mode

1. Push [SETUP] to enable TV screen display system setting menu picture, push [DOWN] to move the yellow lighting band to the item "SPEAKER SETUP", push [ENTER], TV screen will display

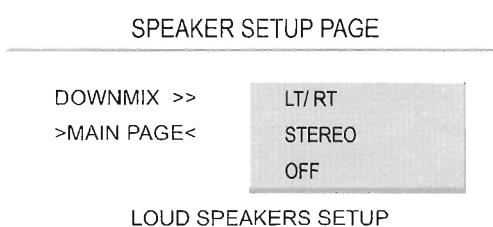

2. Push [RIGHT] to enter the sub-menu in the right screen, If you

want to set the sound mode to "STEREO", firstly push [DOWN] once to move the yellow lighting band to "STEREO" item, then push [ENTER].

3. Push [RESUME] to exit system setting page.

Example 3: Coaxial output

If the user use coaxial terminal to output audio signal, you need to set the audio output "SPDIF/RAW" or "SPDIF/PCM", you can operate following these procedures:

Push [SETUP] to enable TV screen display system setting menu picture, please firstly enter general setting sub-menu, then select the item "AUDIO OUTPUT" in the menu, then push [ENTER], TV screen will display:

GENERAL PAGE

TV DISPLAY	
TV TYPE	
PICTURE MODE	
ANGLE MARK	
OSC LANG	ANALOG
AUDIO OUTPUT >>	SPDIF/RAW
CAPTIONS	SPDIF/PCM
GENERAL SETUP	

2. Push [RIGHT] to enter the sub-menu in the right screen, push [DOWN] to move the yellow lighting band to the item "SPDIF/RAW" or "SPDIF/PCM", then push [ENTER].

3. Push [RESUME] to exit system setting.

Special indications: if you are not going to use coaxial output audio signal, you need to set audio output to "ANALOG" output, so there will be no audio signal to set audio output to "ANALOG" output, so there will be no audio signal to be output in the mix channel.

System setting

Example 4: Set age control grade

For original DVD disc, parents can prohibit the those content inadvisable to children to be played, you can operate following these procedures to set age control grade:

1. Push [POWER]

2. Push [SETUP] to enable TV screen display system setting menu picture, push [DOWN] till the yellow lighting band move to the item "PREFERENCE", push [ENTER], then push [DOWN] till the yellow lighting band move to the item "PARENTAL", TV screen will display:

PREFERENCES PAGE	
AUDIO	1G
SUBTITLE	2
DISC MENU	3PG
LOCALE	4PG-13
PARENTAL>>	5
PASSWORD	6PG-R
DEFAULTS	7NC-17
	8Adult
	NO-PARENTA

3. Push [RIGHT] to enter the sub-menu in the right of the screen, if you want to change the age control grade to 3, push [DOWN] till the yellow lighting band move to the item "3PG", the player will indicate you to enter password, if the ex-factory password has never been modified, you can push number buttons "4408" in the remote control.


4. Push [RESUME] or [SETUP] to exit system setting.

Example 5: Dolby digital setting

In SETUP MENU, select the item "DOLBY DIGITAL" in the menu, then push [ENTER], TV screen will display:

DOLBY DIGITAL SETUP	
DUAL MONO	>>STEREO
DYNAMIC RNG	LEFT MONO
	RIGHT MONO
	MIXED MONO
>MAIN PAGE<	


Push [RIGHT] to set Dolby digital audio, push [DOWN] to select "DYNAMIC RNG", then push [RIGHT], TV screen will display:

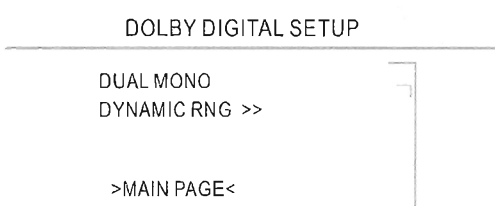


Push [UP], [DOWN] to select dynamic range, push [RESUME] to exit system setting.

Example 6: Set Operation indication or menu display language

1. Push [SETUP] to enable TV screen display system setting picture, push [ENTER], push [DOWN] till the yellow lighting band move to the item "OSDLANG", TV screen will display:

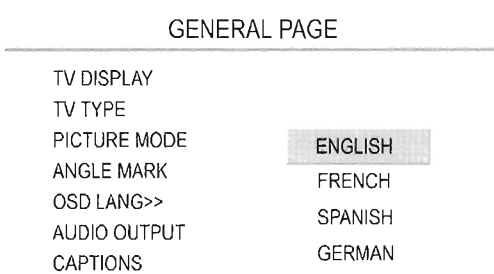

2. Push [RIGHT] to enter the sub-menu in the right of the screen. If you want to set the language of operation indication or menu display to English, you can push "UP" or "DOWN" to move the yellow lighting band to "English", then push [ENTER], the language of the menu in the screen will turn into English.
3. Push [RESUME] to exit system setting.

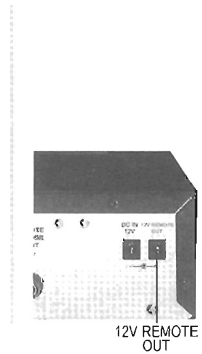

12V remote out

It provides the power of DC 12V/0.5A when power of the product is on. If you turn off power of the product, it will have no output

7. Functions of buttons in remote control

This chapter will detail the functions and operation procedures of all buttons in the remote control, for users' instant reference. Most operation procedures can be referred to relevant content of chapter 4, 5.

8.1 [PLAY]

When the DVD player is in stop, pause, slow play, fast forward, fast reverse state, you can push [PLAY] to resume normal playback.

8.2 [TITLE] (whether it works depends on the type of disc)

Push [TITLE] to display the title menu included in DVD disc. In the menu picture, you can push [UP], [DOWN], [LEFT], [RIGHT] to move the cursors to define desired item, then push [ENTER] to select the part to be played (or the sub-menu, this moment you can also push [UP], [DOWN], [LEFT], [RIGHT] to move the cursors to define desired item, then [ENTER] to play).

8.3 [PROGRAM]

Whether it works depends on the type of disc, push [PROGRAM] to enable users to change the playing order.

8.4 [EJECT]

Push the button once, the tray will be ejected, press it again to close the tray. When you want to load or unload disc, you can use this button.

8.5 [REPEAT]

Push this button to repeat chapter, title & disc.

8.6 [ZOOM]

While playing push this button to zoom out the image, push the button once to enlarge the image by two times, push it twice to enlarge it by four times, press it another time to resume normal playback.

8.7 [MENU]

While playing DVD, push this button to display the option menu included in the disc (whether it works depends on the type of the disc). When PBC is off, in stopping state push this button to digest video and audio content of the disc.

8.8[A-B]

Push [A-B] during playing at the point where repeat play is to commence (A)

8.9[NEXT] (whether it works depend on the type of disc)

While playing DVD disc, push the button to skip to next chapter; while playing SVCD and other discs, push this button to skip to next track

8.10[ANGLE] (whether it works depend on the type of disc)

while playing DVD disc with multi-angle function, push [ANGLE] to play the video in different angles at your option. Push the button each time, the player will be shift to a scene in another angle.

8.11[RESUME]

In all system setting pictures, you can push this button to terminate the setting and return to the state prior system setting.

8.12[MUTE]

Push this button to silence the sound output through analog channel.

8.13[FF]

Push this button to play fast forward silently, press it once, the disc forward at a new speed and finally return to normal playing state.

8.14[FB]

Push this button to play fast backward silently, press it once, the disc backward at a new speed and finally return to normal playing state.

8.15[SLOW]

Push this button to play slow silently, it can be played slow forward or backward, press it once to shift a speed and finally return to normal playing state.

8.16[PBC]

Push this button to shift PBC state. For DVD disc, when PBC is off, while playing you should firstly push [STOP] button, then [PBC] to open yet.

Functions of buttons in remote control



1	2	3	4
5	6	7	8
9	0	10+	CLEAR

8.17 [DISPLAY]

Push the button to display some data of time, e, g. the current playingtime, remaining time, etc.

8.18 [PREV]

While playing DVD disc, push the button to skip to previous chapter; while playing SVCD and other discs, push this button to skip to previous track.

8.19 [ENTER]

Push the button to execute the entered or the selected item.

8.20 [UP], [DOWN], [LEFT], [RIGHT]

When the screen display the menu of DVD disc or system menu, the player is in waiting state, you can push these buttons to move the cursor then select the desired item.

8.21 NUMBERBUTTONS

[0], [1]... [9] number buttons are used to enter number, e.g. No. of track, DVD chapter No., time data, etc.

8.22 [10+]

When the No. of a track or a chapter is over 9, firstly push [10+] then push relevant number buttons. The button is used to enter the number in decade of the No., press it each time, the number in decade will increase by 1.

8.23 [CLEAR]

When entering the programmed No., push [CLEAR] to cancel the entered number.

8.24 [SETUP]

Push the button, the screen will display system setting picture, the user can select some relative constant parameters. The user also can set it as needed. Detailed operation procedures please refer to chapter six.

8.25 [STOP]

While playing DVD, push the button once to pause playing, push it twice to completely stop playing. Whether this function works subject to the type of disc.

8.26 [PAUSE]

Push [PAUSE] to operate PAUSE.

8.27 [SUBTITLE]

Push this button to select caption indication language, e.g. English, etc. Press it once to change a caption Language. (This operation works only for the disc with multi subtitle encoded).

8.28 [AUDIO]

Push this key to select the language of sound on the disc, push it once to change to another language. (This operation works only for the disc with multi language audio).

8.29 [DVD/TV/IN]

1. Push [DVD/TV/IN] one time, the unit will turn to "TV" state, then push [SETUP], and choose AUTO SEARCH, push [RIGHT] of direction key, and choose ON by direction key, then push [RIGHT]. This time, the unit will search and remember TV program automatically.

2. You can choose TV program by [UP] and [DOWN] of direction key.

3. You can choose TV program by number key.

For example, if you want to choose 18th CH, please push [10⁺] then push [8].

4. You can tune finely by [LEFT] and [RIGHT] of direction key.

5. Push [DVD/TV/IN] again, the unit will turn to "INput" state, you can watch other program or play game by LINE INPUT on front panel.



Direction key



8. Technical terms

TITLE:For DVD disc it is defined as a long complete segment of image or music or a movie. Each title has a number that makes it easy to search.

TRACK: The image or music of a VCD or CD. Each track has a number for search.

CHAPTER:It is smaller than title among the units of a DVD, it is defined as a long complete segment of image or music or a movie. A title is made up of several chapters, and each chapter has a number for search.

CAPTION:The literature in TV screen bottom, generally it is translation or dialogue, also recorded in the disc.

ANGLE:For some DVD discs, they record pictures filmed from different angles, the user can watch a same picture from different angles at your option.

9. Troubleshooting

No sound

- Check if the unit is connected securely with other systems including amplifier or TV;.
- Make sure you operate the TV or amplifier correctly.
- Make sure the system setting is correct.

Disc can not be played

- Make sure the disc has been properly in the tray.
- Check whether there is only disc in the tray.
- Make sure the disc is clean

.Remote control does not work

- Remove barriers from the remote control. Replace the batteries with new ones.
- Point the remote control at the remote control sensor of the unit.
- Check whether the batteries energy is sufficient.

Twisting image

Check whether the disc is scratched or there is dirt whereof.

This player is controlled by micro computer, if any trouble occurs, please turn off the power, reopen it till 10 minutes later, when there is no trouble the moment, you can normally operate the player.

Button does not work

This may be caused by unstable electricity current or other abnormal trouble, please turn off the power, reopen it till 10 minutes later.

10. Specifications

Playable discs: DVD/SVCD/DVCD/VCD 1.0, 1.1, 2.0 (micro laser video/audio disc) CD - DA (common music laser CD), MP3 audio disc,

Video format: MPEG1, MPEG2, PCM, DOLBY DIGITAL, DTS;

Audio format: MPEG1, MPEG2, PCM, DOLBY DIGITAL, DTS; analog stereo,

Signal output: video signal: NTSC or PAL
video: 1.0Vp-p
audio: mix stereo 2Vp-p

Functional operation: please refer to chapter 7.

Output interface: RCA output, high-resolution system (S-VIDEO) output, coaxial digital output

Power voltage: DC 12v

Power consumption: 15W

Frequency response: DVD: 20Hz-20KHz

Audio signal/noise ratio: ≥ 90 dB

Weight: 2.6kg

Product dimension: 282x220x75(mm)

Accessories: audio/video cable, remote control (with batteries), user's manual, video CABLE.




Notes:

Any change to the design and specifications will not be advised.

How To Deal With Disk

How To Deal With Disk

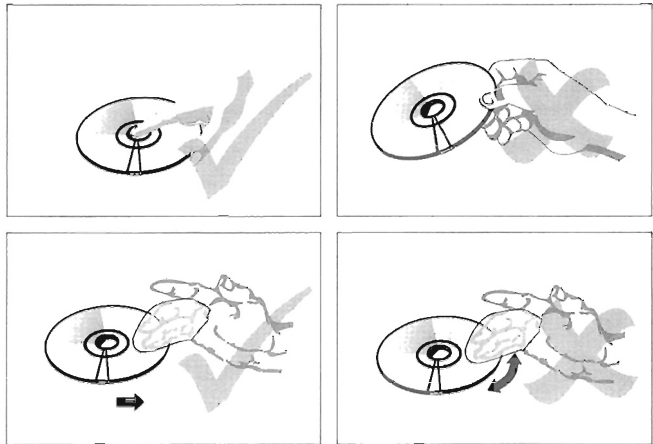

Attention

Don't write on the labeled side.

Don't use pickup cleaning preparation, phenyl, chemical solution, dispersing solution, anti-static electricity solution or any other kind of solutions to clean disk

Don't stick label or glue-based note on disk (Don't use disks with remaining glue or damaged gluey label)

Don't use scratching-preventing materials or cover, unless it is assigned to use on this machine.

Don't put or store disk at following environments.
/at moist or dusty places
/at the exit of hot air or beside heating installation.



How to hold disk

Don't touch the face carving information.

When there are stains on the face of disk

wipe gently with a wet cloth and then with a dry one.

When a disk is brought from a cold environment to a hot one, there could be steam on the face of disk. wipe with a dry, soft, smooth cloth before using.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>