



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included) for operation.

Adult assembly is required for battery replacement.

Tools required for battery replacement: Phillips screwdriver (not included).

# Battery Replacement

 
For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

1




- Open the fasteners on the bottom of the ball.

2

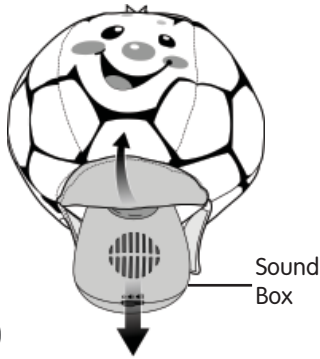

- Lift the fabric tab and remove the sound box.

 3

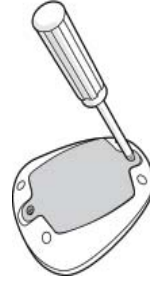


- Loosen the screws in the sound box battery compartment door with a Phillips screwdriver. Remove the door. Remove the batteries and dispose of them properly.
- Insert three, new "AA" (LR6) **alkaline** batteries.

***Hint:** We recommend using **alkaline** batteries for longer battery life.*


- Replace the battery compartment door and tighten the screws. Do not over-tighten.


# Battery Replacement

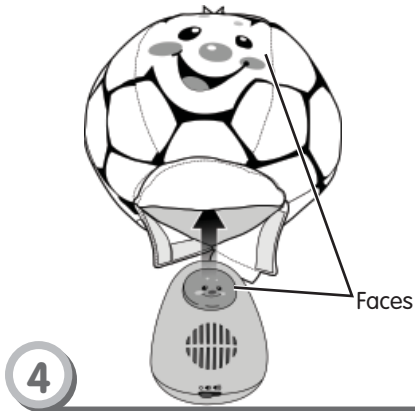 


**IMPORTANT! To ensure proper function, follow this step carefully.**

 - Align the face on the sound box with the face on the front of the ball. Fit the sound box back inside the ball.

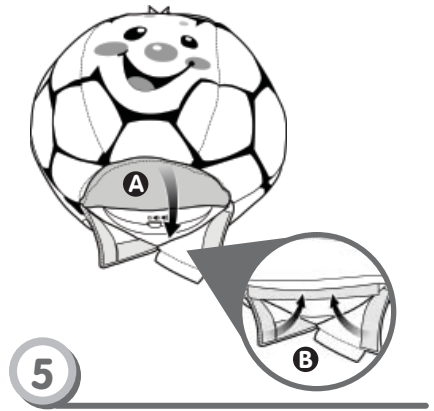

- Fold the fabric tab over the bottom of the sound box **A** and secure the fasteners **B**.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.
-  Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).


## Battery Safety Information

 



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

 - Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
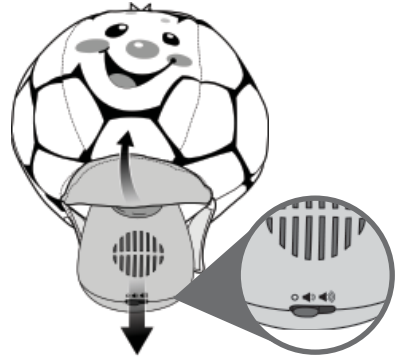
## Power/Volume Switch



- Open the fasteners on the bottom of the ball.
- Pull the sound box out and slide the power/volume switch to ON with low volume  or ON with high volume .
- Replace the sound box back inside the ball.

**Note:** Make sure the face on the sound box is aligned with the face on the front of the ball.

### Care

- The soccer ball is machine washable. First remove the sound box inside the soccer ball. Machine wash the ball in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- Do not immerse the sound box.
- After washing and drying is complete, replace the sound box inside the ball. Be sure that the sound box is replaced properly.

## 3 Interactive Modes!



- Press the nose on the front of the ball to choose a mode: **Learning**, **Music** or **Imagination**.

### **Learning Mode**

- Roll the ball for counting fun!

### **Music**

- Roll the ball to hear fun songs and silly sounds.

### **Imagination**

- Roll the ball for realistic soccer sounds!

**IMPORTANT!** If the mode (Learning or Music or Imagination) does not switch after pressing the nose on the ball, try removing and replacing the sound box inside the ball. Be sure the face and speaker on the sound box are aligned with the face on the ball.

***Hint:** The soccer ball goes into sleep mode after approximately 5 minutes of inactivity. Press the nose on the ball to wake it up.*

- When you are finished playing with the toy, open the fasteners and slide the power switch OFF **○**.

# Consumer Information

# FCC Statement



**CONSUMER ASSISTANCE**  
1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

---

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>