


# iHome™

Model iH36

**under cabinet kitchen system  
for your iPod®**

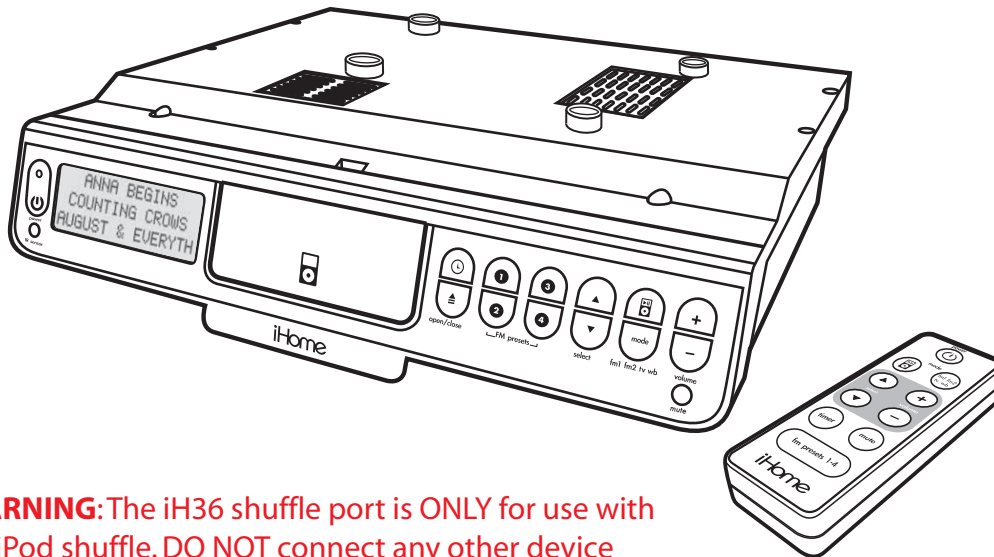

**WARNING:** The iH36 shuffle port is ONLY for use with an iPod shuffle. DO NOT connect any other device such as iPod or iPhone to this port as doing so can cause damage to the iH36, iPod/iPhone or both.



# **IMPORTANT**

**Read before proceeding**

If you have any questions regarding the operation or use of this product, please visit **[www.ihomeaudio.com/faq](http://www.ihomeaudio.com/faq)** to view answers to frequently asked questions.

To learn more about this and other iHome products, please visit us online at **[www.ihomeaudio.com](http://www.ihomeaudio.com)**

# Table of Contents

---

<b>Caution Information</b> .....	3
<b>A Consumer Guide to Product Safety</b> .....	4-6
Safety Instructions	
FCC Information	
<b>iH36 Mounting / Installation Instruction</b> .....	7-9
<b>Getting Started</b> .....	10-11
Install AC Power	
Install iPod Insert	
Install/Replace Backup Battery	
Batteries information	
Install/Replace the Remote Control Battery	
To check for iPod compatibility	
<b>Controls and Indicators</b> .....	12
<b>Maintenance</b> .....	13
<b>Setting Up</b> .....	13
Setting Time and Calendar	
<b>Charging your iPod</b> .....	13
<b>Listening to iPod</b> .....	14
<b>Listening to iPod Shuffle</b> .....	14
<b>Listening to FM Radio, TV and Weather Band</b> .....	15
<b>Presetting Your Favorite Station</b> .....	15
Presetting a Station	
Tuning into a Preset Station	
<b>Operating the Cooking Timer</b> .....	16
<b>Trouble Shooting</b> .....	16-19
<b>Warranty Information</b> .....	20



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**The symbols above are located on the top of the cabinet.**

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot. Fully insert.

**CAUTION:** To reduce the risk of fire, do not place any heating or cooking product beneath this unit

# A Consumer Guide to Product Safety

---

## IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** – This product is equipped with a polarized alternating current line plug. (a plug having one blade wider than the other) As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug by forcing the plug into the outlet
6. **Power-Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.

# A Consumer Guide to Product Safety

---

8. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
9. **Attachments** – Do not use attachments not recommended by the product manufacturer.
10. **Lightning and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
11. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
12. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cord or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
13. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
14. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged from the unit to prevent damage or corrosion.
15. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

**Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)**

**For operating instructions: 1-877-ihome01(1-877-446-6301) Toll Free**

**For any other questions: 1-800-288-2792 Toll Free**

# A Consumer Guide to Product Safety

---

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

- Consult the dealer or an experienced radio/TV technician for help.

SDI TECHNOLOGIES INC.

1299 Main Street, Rahway, NJ 07065

Tel. No. (732) 574-9000

**Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)**

**For operating instructions: 1-877-ihome01(1-877-446-6301) Toll Free**

**For any other questions: 1-800-288-2792 Toll Free**

# iH36 Mounting/Installation Instructions

## Parts Supplied

- 4 Small (1/2") Spacers
- 8 Large (1") Spacers
- 4 3 " Phillips head screws/bolts
- 4 4 1/2 " Phillips head screws/bolts
- Mounting Template A (for mounting template from inside cabinet)
- Mounting Template B (for mounting template from below cabinet)


## Tools Required

- Drill and 1/4" Drill Bit
- Masking Tape
- Scissors
- Nail or Awl
- Phillips head Screwdriver
- Tape Measure or Ruler
- Safety Goggles

## BEFORE MOUNTING

Select a convenient kitchen cabinet with adequate clearance near a working 120 volt electrical outlet. Make sure the power cord reaches the outlet easily, with some extra. **Empty the cabinet completely before attempting to install the iH36, and thoroughly clean (remove any grease, etc. from) the cabinet.**

**Caution:** To reduce the risk of fire, do not place or mount any heating or cooking appliance near this unit. Make sure it is far enough away from heat-producing products such as halogen lamps, etc.

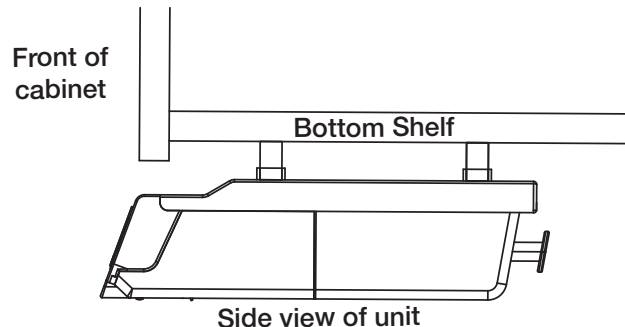



# iH36 Mounting/Installation Instructions

## Step 1. Measure the overhang height

Use a ruler or tape measure to determine the exact amount of overhang, if any. Measure from the front inside bottom edge of the cabinet bottom straight down to the end of the overhang (see figure 1) to determine the height of the overhang.


## Step 2. Determine which spacers and screws to use

Once you have your overhang measurement, look at Table 1 and find the nearest measurement in the Overhang column, then determine the combination of spacers and screw size you need. Set them apart.

### Examples:

If your cabinet has no overhang, just use 4 of the 3 inch screws with no spacers

If your cabinet has a 1 inch overhang, use 4 of the 1/2" spacers, 4 of the 1" spacers and four 4 1/2" screws.

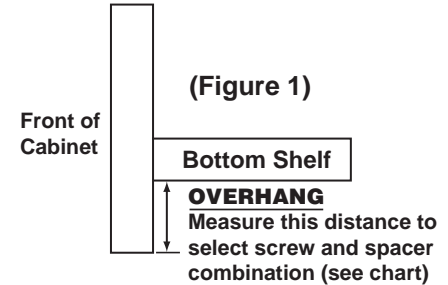

**Table 1: SPACER/SCREW SELECTION CHART**

OVERHANG	SPACERS	SCREW
0 - 3/8"	None	3" x 4
1/2 - 3/4"	1" spacer x 4	3" x 4
7/8 - 1 3/8"	1/2" spacer x 4 + 1" spacer x 4	4 1/2" x 4
1 1/2 - 1 3/4"	1" spacer x 8	4 1/2" x 4
1 7/8 - 2 1/4"	1/2" spacer x 4+ 1" spacer x 8	4 1/2" x 4

**Note:** This unit is designed for cabinets with an overhang of 2 1/4" or less. If your cabinet has an overhang longer than 2 1/4", please call a customer service representative at 1-800-228-2792.

# iH36 Mounting/Installation Instructions

## MOUNTING THE iH36

We recommend the unit be mounted flush to the front edge of the cabinet.

### 1. Select and Set Template and Drill holes

- Using a Template** First, decide which mounting method/template you prefer, the inside the cabinet template (Mounting Template A) or the under the cabinet template (Mounting Template B). Next, cut out the selected template on the line indicated depending on whether your cabinet has an overhang or not. Position the chosen Mounting Template either inside or under the cabinet with the **arrow facing the front** of the cabinet. Secure in place with tape.
- Drilling** There are 4 guide holes on the mounting template. We recommend that you start each hole before drilling by first marking the center point of the guide hole then pressing an awl or nail into the mark. Always wear safety goggles when operating a drill. For ease and accuracy of drilling, it's a good idea to drill pilot holes next using a 1/16" bit. Finally, use a sharp 1/4" drill bit to carefully drill 4 holes through the cabinet. Make sure all holes are drilled straight, and not at an angle. Remove any debris.
- Remove the template

**DRILLING TIPS:** You may first wish to place masking tape over the opposite side you are drilling to avoid splintering. Hold drill firmly to avoid the bit "walking".

### 2. Insert Spacers

- Place the needed spacers into the mounting posts on top of the unit.

### 3. Mount unit to cabinet

- From inside the cabinet, place a finishing washer above each hole and screw the 4 screws through any spacers into the mounting holes on the unit. Make sure the unit is supported until the screws are tightened.


**NOTE:** For secure mounting, the screws must go into the iH36 at least 3/8".

*OPTION:* You may prefer to countersink the drilled holes from inside the cabinet if you have the correct countersink attachment for your drill. This will make the screw heads flush with the cabinet surface.

- Tighten the screws using a Phillips head screwdriver.

**CAUTION:** DO NOT USE POWER TOOLS TO TIGHTEN SCREWS

Once the unit is securely mounted, plug into a nearby 120Volt outlet. Note that there is a built-in cord wrap on the back of the unit to wrap up any excess wire.

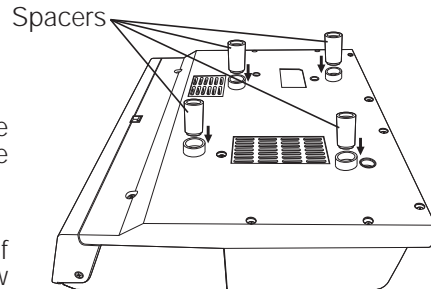

# Getting Started

Thank you for purchasing the iHome iH36 kitchen Stereo System for your iPod. Designed specifically to work with your iPod or Shuffle, this system provides high quality audio and radio performance that invites your music to come out and play. It also has a factory preset clock with the correct time already preset at the factory so you just need a few steps to make it work.

Please read the instructions carefully before operating the appliance and keep it for future reference.

## Install AC Power

Plug the AC cord into wall outlet. AC power cord should connect directly to a wall outlet. Wind up the AC cord to keep it from hanging down and contacting hot cooking appliances.

## Install iPod Insert

Your iH36 comes with 3 removable inserts and a rubber pad to ensure your iPod fits properly in the iPod drawer. Please see below table to insert/replace rubber pad to fit your iPod.

Shuffle	Mini Insert	Thin iPod Insert	Thick iPod (no Insert needed)	Nano Insert	5G iPod iPod with video
Dock into the Shuffle connector located in the bottom of the unit	Use with iPod Mini	iPod 3G 10/15/20GB iPod 4G 20 GB iPod Photo 20/30 GB	iPod 3G 30/40GB iPod 4G 40 GB iPod Photo 60 GB	iPod Nano 2/4GB	Replace rubber pad per instruction on the 5G rubber pad card

To place an insert:

1. Select the insert for your iPod (see chart above). Using the correct insert/rubber pad ensures a proper fit for your iPod.
2. Press the **Ⓜ Dock Open/Close Button** to open the iPod dock and put the insert into it gently.

(Please note that iPod must not be in a case or "skin")

**Note:** If for any reason the iPod dock does not open (power failure, etc), simply pull on the **Manual Dock Release Tab** located near the front at the top center of the unit.

# Getting Started

## Install/Replace Backup Batteries

If Backup Batteries are installed and a power failure occurs or the AC cord is accidentally disconnected, the current time and radio preset station settings will be temporarily maintained. Otherwise, you must reset the time and radio preset station settings.

Three backup batteries are installed in the unit before shipping to keep the clock running. If the unit has no display or the Battery Low Icon (located on the right of the display) is on, replace backup batteries.

1. Please make sure the AC cord is connected; otherwise all settings may be lost during battery replacement.
2. Open the battery compartment cover (located on the bottom of the unit).
3. Insert 3 "AA" batteries. Make sure the + and - ends of the batteries match the drawing inside the battery compartment. We recommend the use of alkaline batteries for longer life. Different types of batteries, or new and used batteries, are not to be mixed.
4. Close the compartment cover.

**NOTE:** When operating on battery backup, certain functions (time zone, clock adjust, DST switch) are disabled. Though the colon in the time display does not flash, the clock will work properly.

### Batteries information:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.



## Install/Replace the Remote Control Batteries

The remote control batteries are already installed at the factory. When the remote control stops operating or its range seems reduced, it is time to replace them.




1. Open the battery compartment cover (located on the bottom of the remote control unit).
2. Insert 2 "AAA" batteries. Make sure the + and - ends of the batteries match the drawing inside the battery compartment. We recommend the use of alkaline batteries for longer life. Different types of batteries, or new and used batteries, are not to be mixed.
3. Close the compartment cover.

## To check for iPod compatibility

iH36 is an advanced system and supports most updated iPod features. To make sure your iPod works properly with iH36, please update your iPod firmware with the latest version. Please check Apple's website for the same.

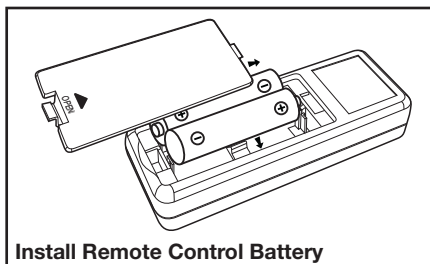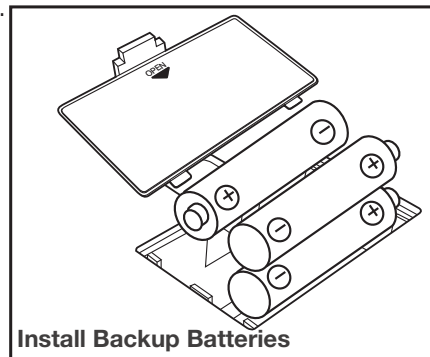

# Controls and Indicators

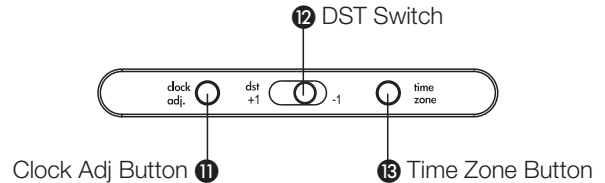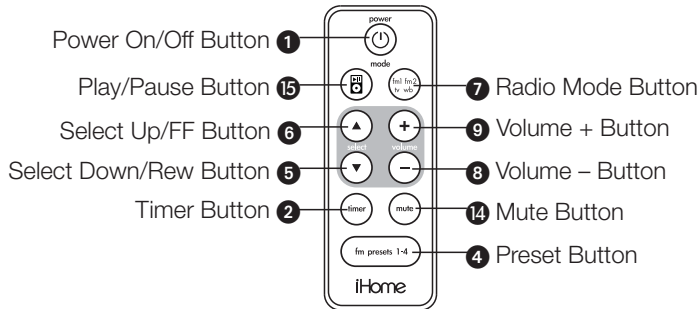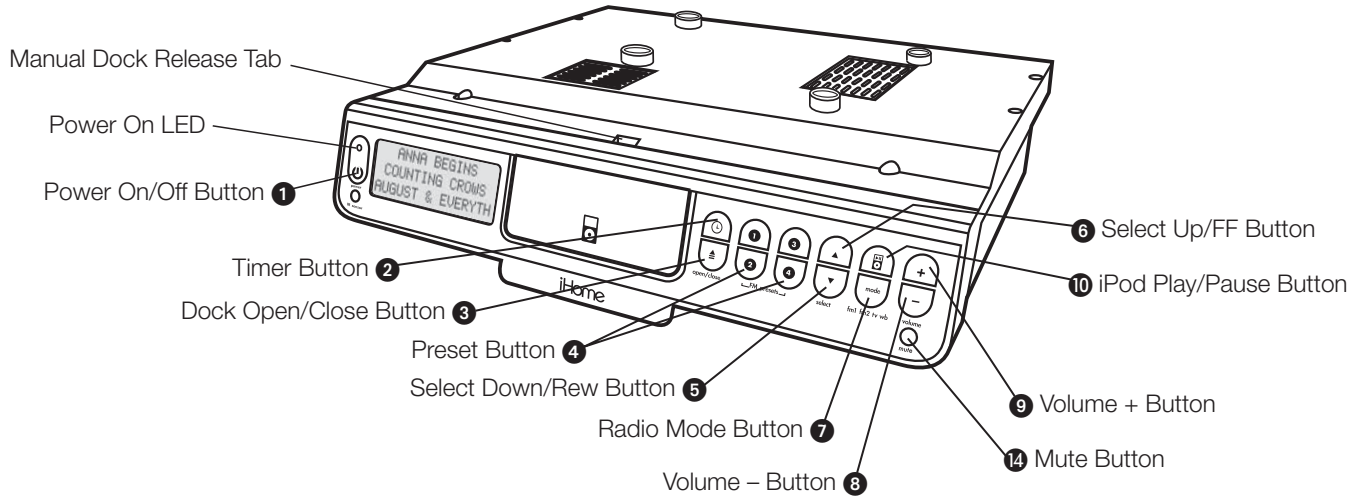

# Maintenance

---

- Place the unit away from sources of direct sunlight or excessive heat.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can mar the surface of the case.

## Setting Up

---

This unit has a Clock which is preset at the factory. It takes just a few steps to match the clock setting to where you live.

1. Depending on your location and whether or not Daylight Saving Time (DST) is in effect, set the **12 DST Switch** located on the bottom of the unit to +1 or -1 to adjust the time forward or backward one hour.
2. Press and hold the **13 Time Zone Button** located on the bottom of the unit for approx. 2 seconds until the Time Zone Indicator at the lower part of the display shows the current time zone and flashes. Press the **6 Select Up/FF** or **5 Select Down/Rew Buttons** to select the time zone.
3. Press the **13 Time Zone Button** again to (or if no key pressed for approx. 10 seconds) exit the setting mode.
4. If the time showing is not correct, please see **Setting Time and Calendar** to set the clock.

**Note:** You can adjust the contrast of the display by pressing and holding the **13 Time Zone Button** until the zone display flashes, and then pressing the **Preset 1** or **Preset 2 button** to achieve the preferred contrast.

### Setting Time and Calendar

1. Press and hold the **11 Clock Adj Button** located on the bottom of the unit for 2 seconds until the year is flashing in the display. Press the button again to accept the current setting or press the **6 Select Up** or **5 Select Down Button** until the current year is displayed. Press the **11 Clock Adj Button** to confirm year setting after adjustment.
2. The display will change to show the date flashing. Press the **11 Clock Adj Button** to accept the current setting or press the **6 Select Up** or **5 Select Down Button** until the current date is displayed. Holding the button for a few seconds will advance or reverse rapidly. Press the **11 Clock Adj Button** to confirm date setting after adjustment.
3. The time on the upper part of display will flash. Press the **6 Select Up** or **5 Select Down Button** until the current time is displayed. Holding the button for a few seconds will advance or reverse rapidly. Remember to set the correct AM or PM.
4. Press the **11 Clock Adj Button** again to (or if no key pressed for approx. 10 seconds) exit the setting mode.

## Charging your iPod

---

**Note:** Please make sure you are using the correct insert for your iPod (see Install iPod Insert on page 10) and that it is properly docked into the iH36. Failure to do so may damage your iPod.

1. Press the **3 Dock Open/Close Button** to open the iPod dock then dock your iPod into it.
2. While your iPod is docked in the system, it recharges (until fully charged).
3. Press the **3 Dock Open/Close Button** again to close the dock. The iPod will recharge whether the dock is open or not.
4. For iPod Shuffle, just plug it into the shuffle connector located on the bottom of the unit. The iPod Shuffle will keep charging until fully charged.

# Listening to Your iPod

---

**Note:** iPod Shuffle operation differs from that of other iPods. (See the Shuffle section below for more on using your Shuffle).

1. Dock the already playing iPod. The iH36 will automatically turn on and you will hear the music playing from your iPod.  
**Note:** If the playing song/ music loudness on the iPod itself is too low, the iH36 may not detect that the iPod is in play mode. Press the **10 iPod Play/Pause Button** on the main unit (or **15 Play/Pause Button** on the remote control) twice to play it.
2. When the iPod is docked and in standby mode, press the **10 iPod Play/Pause Button** on the main unit (or **15 Play/Pause Button** on the remote control) to play it. The iPod Icon will appear on the display.
3. If the dock is closed and you are not using 3rd generation iPod or iPod shuffle, playing song info will show on the display.  
**Note:** When dock is closed, you can only play songs on current playlist.  
**Note:** When using a 5G iPod (iPod with video), make sure to exit video playback mode before closing the dock.  
**Note:** DO NOT close the dock while watching a video on the 5G iPod.
4. Press the **10 iPod Play/Pause Button** again to pause play; press again to resume it.
5. Press the **9 Volume +** and **8 Volume - Button** on the main unit or the remote control to adjust the system volume. Press the **14 Mute Button** to mute the output; press the button again to release it (restore volume).
6. Press **6 Select Up/FF** or **5 Select Down/Rew Button** on the main unit or the remote control to go to the previous or next track. Press and hold while track is playing for high speed forward or reverse music search of the current track.
7. To turn off the unit, press the **1 Power On/Off Button** on the main unit or the remote control. Your iPod will continue charging while in the dock.

**Note:** Removing the iPod from the unit will not turn the iH36 off. Press the **1 Power On/Off Button** to turn off the iH36.

# Listening to iPod Shuffle

---

**Note:** The iH36 will not control the iPod Shuffle. You must switch the iPod Shuffle on or off, and play or pause it manually.

1. Switch on your iPod Shuffle and play it. Then dock it into the connector located on the bottom on the unit.
2. Press the **10 iPod Play/Pause Button** on the main unit (or the **15 Play/Pause Button** on the remote control) to play it. The iPod Icon will appear on the display.
3. Press the **9 Volume +** and **8 Volume - Button** on main unit or remote control to adjust the system volume. Press **14 Mute Button** to mute the output, press the button again to release it.  
**Noted:** You may need to adjust volume control on the iPod Shuffle to made it sound right.
4. Press **<< or >> Button** on your iPod shuffle to go to the previous or next track. Press and hold while track is playing for high speed forward or reverse music search of the current track.
5. To turn off the unit, press the **1 Power On/Off Button** on the main unit or the remote control. Please remember to turn off iPod Shuffle, too!

**Note:** Any time you wish to listen to your Shuffle, press play on your Shuffle, then press the iPod Button.

# Listening to FM Radio, TV and Weather

Note: Extend FM wire antenna fully for best reception.

1. Press the **7 Radio Mode Button** on the main unit or the remote control to play the radio. The radio frequency/channel will appear on the lower part of the display.
2. Press the **7 Radio Mode Button** to select the desired band. Each press changes the band as follows:



By using FM1 or FM2 preset mode, you may listen to FM band radio on either mode (see Presetting Your Favorite Station below).

3. Use **6 Select Up/FF** or **5 Select Down/Rew Button** to tune in to the desired station.
4. While under FM1 or FM2 mode, press and hold the **6 Select Up** or **5 Select Down Button** for approx. 2 seconds to auto seek available stations. Seek will stop at the first clear stereo signal. To seek a different station, continue as described.
5. Press the **9 Volume +** and **8 Volume - Button** on the main unit or the remote control to adjust the system volume. Press **14 Mute Button** to mute the output, press the button again to release it.
6. To turn off the unit, press the **1 Power On/Off Button** on the main unit or the remote control.

The TV tuner allows you to listen to basic broadcast channels (2-13). With TV mode selected, tune in stations as in step 3 above. The unit can also receive the NOAA weather channel for your area. There are 7 channels in all, but typically only the closest will come in. With Weather mode selected, follow step 3 above to find the weather channel for your area.

## Presetting Your Favorite Station

You can preset 16 stations: 8 for FM (4 stations in FM1, 4 stations in FM2) and 4 stations in both TV and Weather channels.

### Presetting a Station

1. Follow step 1 to 4 in Listening to Radio (above) to tune in the station you wish to preset.
2. Hold down the **4 Preset Button** you wish to preset for about 2 seconds. You will hear beep tone to confirm the station is stored.
3. To preset another station, repeat these steps. To change a preset station, tune into the desired new station and hold down the **4 Preset Button**. The new station will replace the previously preset station and the preset number will appear.

### Tuning into a Preset Station

1. Press **7 Radio Mode Button** on the main unit or the remote control to turn on the radio.
2. Press **7 Radio Mode Button** to select the band.
3. Press the desired **4 Preset Button**. The corresponding station/channel and preset info will show on the lower part of the display.
4. Press the **9 Volume +** and **8 Volume - Button** on the main unit or the remote control to adjust the system volume.
5. To turn off the unit, press the **1 Power On/Off Button** on the main unit or the remote control.



# Operating the Cooking Timer

The cooking timer can be set at one minute intervals between 1-120 minutes.

1. Press the **2 Timer Button** once to activate the cooking timer.
2. You will see "60" on the display (meaning the cooking timer will sound after 60 minutes). To adjust the timer, press and hold the **2 Timer Button** until the display flashes. Then press the **6 Select Up/FF** or **5 Select Down/Rew Button** until the time you want is displayed.
3. In a few seconds the display will change back to show the real time and the **Timer Icon** will show on the left side of the display to indicate the cooking timer is on.
4. Press the **2 Timer Button** once to view the time remaining, or press twice to turn off/cancel the timer.
5. When the time is up, a buzzer will sound. It will continue for 1 minute. Press any button to stop it immediately.

## Trouble Shooting

Symptom	Possible Problem	Solution
Unit doesn't respond (no power)	AC cord isn't plugged into a wall outlet	Plug the AC cord into a wall outlet
	Wall outlet is not functioning	Plug another device into the same outlet to confirm the outlet is working properly
iPod does not dock properly	Not using an iPod insert, or using the wrong one	Make sure the dock insert is the proper fit for your iPod (see chart on page 10)
	iPod not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
Battery Low icon always on  iPod does not respond to the unit	Batteries are weak	Replace with new batteries
	Batteries were not installed properly	Check to make sure the + and – ends match the diagram
	iPod is not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	Your iPod software is too old	Upgrade software on your iPod. For details, visit <a href="http://www.apple.com/ipod/download">http://www.apple.com/ipod/download</a>
	iPod is locked up	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for detail.

# Trouble Shooting

Symptom	Possible Problem	Solution
iPod didn't charge up	iPod is not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	iPod is locked up.	Please make sure your iPod is working properly before dock into the unit. Please refer to your iPod manual for detail.
	Problem with iPod battery batteryproblem	
Sound is distorted	Volume level is set too high	Decrease the unit and/or iPod/Shuffle volume
	Sound source is distorted	If the original sound source on your iPod is poor quality, distortion and noise are easily noticed with high-powered speakers. Try a different audio source such as a music CD.
Remote Control didn't work	Batteries are too weak	Replace with new batteries
	Remote Control is not pointed toward the IR sensor	Point the Remote Control toward the IR sensor (below the power On/Off button), and try getting closer to (within 10 feet of) the unit.
Dock is stuck / won't open	Power failure, other	Pull Manual Dock Release Tab (located center top of unit)
Shuffle is docked, yet "no iPod" appears on the display	Shuffle is not playing	Press play on your Shuffle, then the iPod button on the iH36
5G iPod (iPod with video) temporarily locks up when docked and docking drawer is closed AND next item to play is a video file.	Poor initial interaction between 5G iPod and iH36 trying to load music track of video file	Either let the 5G iPod remain idle for up to 90 seconds until the iPod unlocks, or reset the iPod by pressing and holding the MENU and center SELECT button for 6-10 seconds until the Apple logo appears.

# Solucionando problemas

Síntoma	Causa	Solución
La unidad no funciona (no circula corriente eléctrica)	La unidad se encuentra desconectado del tomacorrientes	Conecte la unidad al tomacorrientes
	El tomacorriente no funciona	Coloque otro aparato en ese mismo tomacorriente para confirmar si el que no funciona es el tomacorriente
El iPod no encastra correctamente	No ha colocado el encastre del iPod, o está utilizando el encastre incorrecto.	Verifique que el encastre sea el apropiado para su iPod
	El iPod no encastra correctamente	Quite el iPod del encastre y retire la posible obstrucción del encastre o de su iPod. Vuelva a colocar el iPod dentro del encastre.
El icono de batería baja está destellando	Las baterías están gastadas	Reemplace las baterías
	Las baterías no están instaladas correctamente	Verifique que la polaridad de las baterías (- y +) se encuentren de acuerdo al diagrama del compartimiento de baterías.
El iPod no se comunica con la unidad	El iPod no está instalado correctamente	Quite el iPod del encastre y verifique posibles obstrucciones del encastre o de su iPod. Vuelva a colocar el iPod dentro del encastre.
	Su software es obsoleto	Renueve su software. Para mayor información, dirijase a <a href="http://www.apple.com/ipod/download">http://www.apple.com/ipod/download</a>
	El iPod no responde	Verifique que su iPod funcione correctamente antes de conectarlo a la unidad. Refiérase al manual de su iPod para más detalles.

# Solucionando problemas

Síntoma	Causa	Solución
El iPod no carga	El iPod no está instalado correctamente	Quite el iPod del encastre y retire la posible obstrucción del encastre o de su iPod. Vuelva a colocar el iPod dentro del encastre.
	El iPod está trabado/no responde	Por favor asegúrese de que su iPod funcione correctamente antes de colocarlo en el encastre. Refiérase al manual de su iPod para mayor información.
	La batería del iPod podría tener algún inconveniente	
El sonido sale distorsionado	El volumen se encuentra muy alto	Baje el volumen
	El sonido sale distorsionado de la unidad	Si el sonido original de su iPod era de pobre calidad, las distorsiones y ruidos se harán más notables con los parlantes de alta potencia. Pruebe utilizar otra fuente de audio como un CD.
El control remoto no funciona	Las baterías están gastadas	Reemplace las baterías por nuevas
	No está apuntando el control remoto hacia el iH36	Apunte el control remoto hacia el iH36 y manténgase a una distancia máxima de 10 pies de la unidad.
El compartimiento está trabado/no abre	No hay corriente eléctrica, u otras causas	Tire de la lengüeta de destrabe (en la parte superior de la unidad)
El Shuffle está encastrado, pero "no iPod" aparece en el visor	El Shuffle no funciona	Oprima play en el Shuffle, luego el botón iPod en el iH36
El iPod 5G (iPod con video) puede bloquearse temporalmente cuando está conectado con el cajon cerrado Y la siguiente canción a tocar es de un archive de video.	La interacción inicial entre el iPod 5G y el iH36 es pobre cuando la música es de un archive de video.	Deje el iPod 5G sin usar por 90 segundos hasta que se desbloquee, o reajústelo oprimiendo el botones MENU y el centro SELECT por 6-10 segundos hasta que el logotipo de Apple aparezca.

# Limited 90-Day Warranty Information

---

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$30.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$30.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department  
SDI Technologies Inc.  
1330 Goodyear Dr.  
El Paso, TX 79936-6420

## Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

**Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)**  
**For operating instructions: 1-877-ihome01(1-877-446-6301) Toll Free**  
**For any other questions: 1-800-288-2792 Toll Free**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>