


Hamilton Beach®

Hand Blender

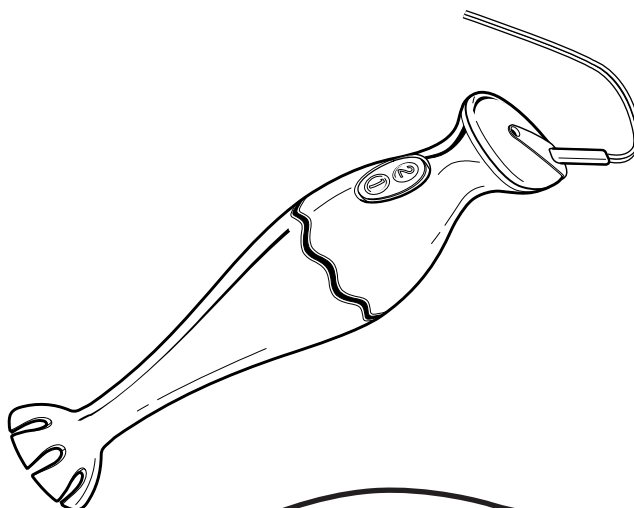


English 2
USA: 1-800-851-8900

840083300

Parts & Features

1. Speed Control
2. Motor Housing
3. MAX Line (on back)
4. Shaft
5. Blade and Blade Guard
6. High
7. Low

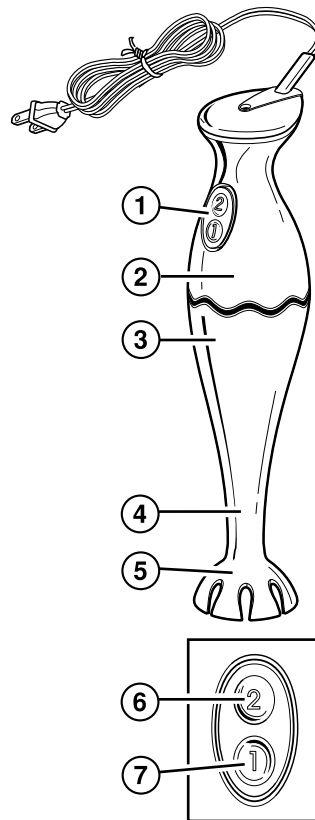

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put motor end, cord or plug in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Avoid contact with moving parts. Keep hands, hair and clothing, as well as other utensils away from blades and out of container during operation to prevent the possibility of severe injury to persons and/or damage to the appliance. A spatula or scraper may be used when the appliance is not in operation.
5. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. for use with this model may cause fire, electric shock, or injury.
6. When mixing liquids, especially hot liquids, use a tall container and make several small batches to avoid spillage.
7. Blades are sharp, handle carefully.
8. Do not use over a stove or other heat source.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter. Do not let cord contact hot surface, including the stove.
11. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
12. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.

SAVE THESE INSTRUCTIONS

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

BEFORE FIRST USE: Wash blade portion of hand blender according to instructions.

How to Use

1. Place food in suitable container for mixing. For best results, solid foods should be no larger than 1-inch chunks.
2. Plug into outlet.
3. Grasp unit in hand. Push fingertip control. Slowly move the blade through the food; up, down and sideways.
4. Do not immerse blender past the MAX line.
5. Do not operate the motor continuously for more than one minute at a time.
6. Unplug from outlet when not in use.

Helpful Hints

- To use the blender in a saucepan be sure to remove the pan from the stove as the blender is not designed for use over a heat source.
- To puree foods, a certain amount of liquid is needed. Add cooking liquid, broth, juice, milk, or cream, until desired consistency is reached.
- This appliance is not intended to chop ice. Add ice to beverage after blending.
- This appliance is not intended to beat egg whites.

Tips

- For thorough blending, move blade up and down in mixture until smooth.
- You will achieve better mixing results if you use deep, tall containers.
- For easy cleanup, unplug blender and rinse under running water immediately after using.

Blending Guide

FOOD	SPEED
Baby Food	2
Cake Mixes	1
Eggs	2
Frozen Juice Concentrate	2
Gravy or Sauces	1
Instant Pudding	1
Milk Shakes	2
Pancake Mix	1
Powdered Diet/Protein Drink Mixes	2

How To Clean

1. Unplug the unit from the outlet.
2. Hold the blade portion of the blender under hot running water to rinse clean.
3. If food particles are not easily rinsed off the blade, place a drop of dish detergent in a mixing container with one cup of warm water. Plug cord into outlet. Immerse the blade portion and operate the unit for about 10 seconds. Unplug, rinse under hot water, then dry.
4. Never hold the motor portion of the hand blender under running water. Never immerse the unit past the MAX line. Simply wipe clean with a damp cloth.

Recipes

Milk Shakes

3 scoops ice cream

$\frac{1}{2}$ to $\frac{2}{3}$ cup milk

Place ice cream in large, tall glass. Add milk. Place blender in cup and blend on speed 2 for 30 to 40 seconds. Move blender up and down in the mixture for thorough blending.

Baby Food

1 cup cooked vegetables, soft fruit, or cooked meat

$\frac{1}{4}$ to $\frac{1}{3}$ cup liquid (milk, fruit juice, water)

Cut vegetables, fruit or meat into $\frac{1}{2}$ inch cubes. Place into deep bowl. Add liquid. Blend on speed 2 for 15 seconds or until desired consistency.

Instant Pudding

Use amounts on package. Pour milk into deep bowl. Add pudding mix. Blend on speed 1 while moving blade up and down for approximately 30 seconds. Add remaining water.

Frozen Juice Concentrate

Place can of juice concentrate in wide-mouthed pitcher. Add 1 can of water. Blend on speed 2 while moving blade up and down for approximately 30 seconds. Add remaining water.

Powdered Drink Mixes

Place measured amount of powder into a large, tall glass. Add liquid and blend on speed 2 for 30 seconds.

Whipped Cream

1 cup whipping cream
2 tablespoons sugar
1 tablespoon vanilla

Place cream in deep container. Blend on speed 1 for 40 to 60 seconds. Add sugar and vanilla. Continue to blend until soft peaks form. Watch closely. It can be easily over beaten.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products or one (1) year for Hamilton Beach products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

In Mexico 01-800-71-16-100

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.

263 Yadkin Road
Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.

Picton, Ontario K0K 2T0

840083300

Web site address: www.hamiltonbeach.com

2/01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>