



DIGITAL CERAMIC HEATER

HZ-335, HZ-336 Series

IMPORTANT SAFEGUARDS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS HEATER.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

IMPORTANT INSTRUCTIONS

 
1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathroom, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic areas where it will not be tripped over.

9. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
10. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
12. To disconnect the heater, first turn controls to the **OFF** position, then grip the plug and pull it from the wall outlet. Never pull by the cord.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
14. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
15. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
18. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

SAVE THESE INSTRUCTIONS.


BASIC CONTROL PANEL OPERATION:

POWER

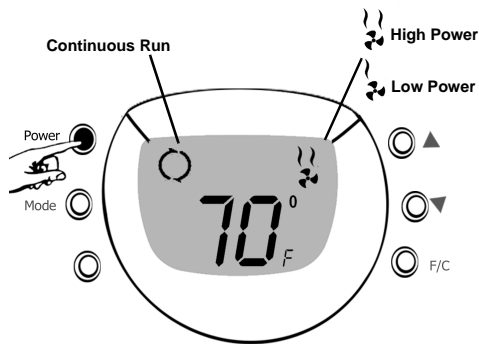


- Press Power once to start the heater on High Power, Continuous Run.
- Press Power again to change to Low Power, Continuous Run.
- Press Power a third time to turn the heater off.

 MODE: SET TEMPERATURE

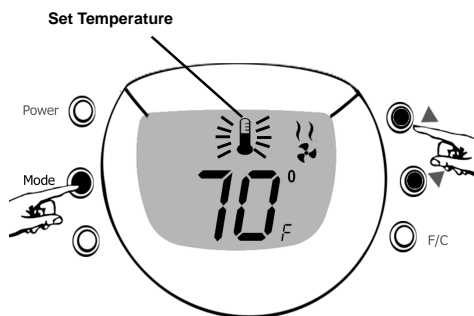


- Press Mode until the Temperature icon blinks. The current room temperature will appear.
- Use the Up or Down arrows to set the desired temperature.
- The Temperature icon will stop blinking and the current room temperature will reappear after the desired temperature is set.
- The heater will turn-off shortly after the desired temperature is reached and the Power light above the display will blink.
- The heater will turn back on when the room temperature drops approximately 2 degrees below the desired temperature. The Power light will stop blinking and will remain lit.

 MODE: SET TIMER

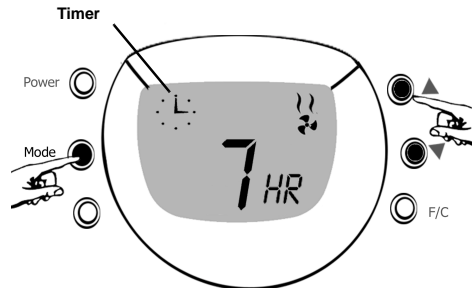


- Press Mode until the Timer icon blinks. The Hour display will appear.
- Use the Up or Down arrows to set an operation time between 1 and 10 hours.
- The heater will turn-off when time runs out.

 FAHRENHEIT/CELSIUS

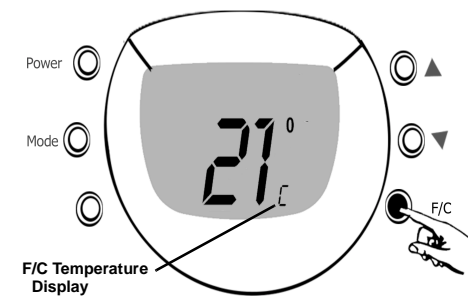

- F/C feature functions from only the Power or Set Temperature screens.
- Press the F/C button to toggle between Fahrenheit and Celsius.

 OSCILLATION

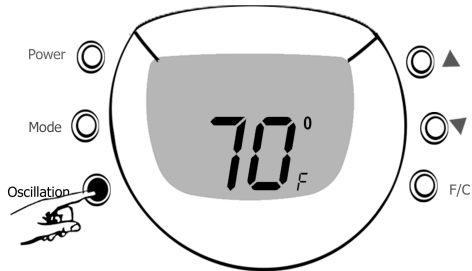

- The Oscillation feature functions in any power or mode setting.
- Press the Oscillation button to toggle this feature on and off.

REMOTE CONTROL OPERATION (HZ-336 SERIES):

Two (2) AAA batteries required.

Model HZ-336:

 
Remote Control included when originally purchased.

Model: HZ-335:

Remote Control may be purchased separately at: www.honeywellconsumerproducts.com


The Remote Control works the same as the corresponding buttons on the Control Panel. The Control Panel display on the heater will show the appropriate icons when the various functions are activated.

POWER:

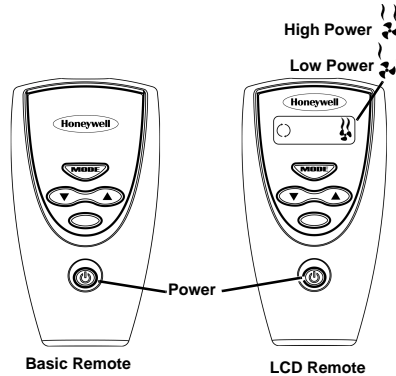


- Press Power once to start the heater on High Power, Continuous Run.
- Press Power again to change to Low Power, Continuous Run.
- Press Power a third time to turn the heater off.

 MODE: SET TEMPERATURE

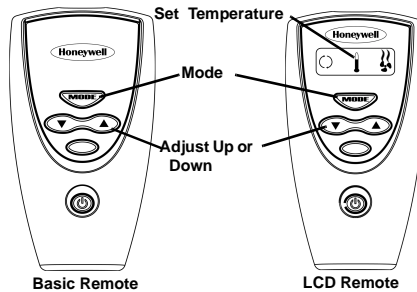


- Press Mode until the Temperature icon blinks. The current room temperature will appear.
- Use the Up or Down arrows to set the desired temperature.
- The Temperature icon will stop blinking and the current room temperature will reappear after the desired temperature is set.
- The heater will turn-off shortly after the desired temperature is reached and the Power light above the display will blink.
- The heater will turn back on when the room temperature drops approximately 2 degrees below the desired temperature. The Power light will stop blinking and will remain lit.

 MODE: SET TIMER

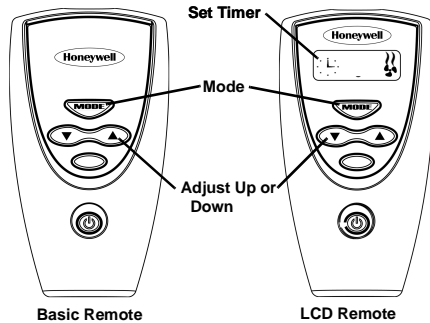

- Press Mode until the Timer icon blinks. The Hour display will appear.
- Use the Up or Down arrows to set an operation time between 1 and 10 hours.
- The heater will turn-off when time runs out.

 OSCILLATION

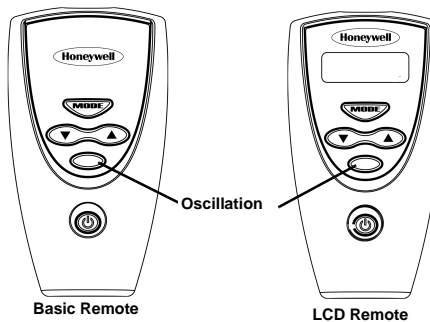

- The Oscillation feature functions in any power or mode setting.
- Press the Oscillation button to toggle this feature on and off.

TROUBLESHOOTING:

If your heater shuts off unexpectedly, safety features may have been activated to prevent overheating. If this happens:

- Be sure the power cord is plugged into a working electrical outlet.
- Check your thermostat setting. The unit may simply be off because you have reached your desired heat setting.
- Check for any obstructions. If you find one, turn the heater OFF and unplug it. Wait at least 10 minutes to allow the heater to cool completely before removing any obstruction.

When done, plug-in the heater and follow the OPERATION INSTRUCTIONS.

For more troubleshooting tips, visit our website at: www.honeywellconsumerproducts.com

NOTE: IF YOU CONTINUE TO EXPERIENCE A PROBLEM, PLEASE RETURN THE HEATER TO THE PLACE OF ORIGINAL PURCHASE OR SEE YOUR WARRANTY. DO NOT ATTEMPT TO OPEN THE HEATER YOURSELF. DOING SO MAY VOID YOUR WARRANTY AND CAUSE DAMAGE TO THE HEATER OR PERSONAL INJURY. IF YOU HAVE ANY QUESTIONS REGARDING THIS HEATER, PLEASE CALL OR WRITE:

Honeywell
Consumer Relations Department
250 Turnpike Road
Southborough, MA 01772
Toll Free 1-800-332-1110
E-mail: honeywell@protocolusa.com

CLEANING AND STORAGE:

We recommend that the heater be cleaned at least once a month and before off-season storage.

- Turn the heater OFF and unplug it. Allow it to cool completely.
- Use only a dry cloth to clean the external surfaces of the heater. **DO NOT USE WATER, WAX, POLISH, OR ANY CHEMICAL SOLUTION.**
- Clean your heater using the above-mentioned steps, then pack the heater in its original container and store it in a cool, dry place.
- This heater does not disassemble.

ACCESSORIES:

Your HZ-335 or HZ-336 series heater is compatible with both the Basic and Digital LCD Remote Control. To upgrade your heater, or to get a listing of heater accessories, visit our website at: www.honeywellconsumerproducts.com

ELECTRICAL RATING:

This product is rated 12.5 Amps (1500 Watts) at 120 VAC, 60 Hz.

5 YEAR LIMITED WARRANTY

You should first read all instructions before attempting to use this product. Register your product on-line at

www.honeywellconsumerproducts.com or complete and return the Customer Response Card within 7 days.

- A. This 5 year limited warranty applies to repair or replacement of product found to be defective in material or workmanship. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty.
- **HONEYWELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.** Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.
- B. At its option, Honeywell will repair or replace this product if it is found to be defective in material or workmanship. Defective product should be returned to the place of purchase in accordance with store policy. Thereafter, while within the warranty period defective product may be returned to Honeywell.
- C. This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.
- D. Return defective product to Honeywell Consumer Products with a brief description of the problem. Include proof of purchase and a \$10 US/\$14.50 CAN check or money order for handling, return packing and shipping charges. Please include your name, address and day-

time phone number. You must prepay shipping charges. Send to:

In the US:

Honeywell
Attn: Returns Department
4755 Southpoint Drive
Memphis, TN 38118 USA

In Canada:

Honeywell
Attn: Returns Department
510 Bronte Street S.
Milton, ON L9T 2X6 Canada

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>