

Honeywell

Long-Range Weather Forecaster

(TE532ELW)
USER MANUAL

TABLE OF CONTENTS

INTRODUCTION	3
PRODUCT OVERVIEW	4
BEFORE YOU BEGIN	8
BATTERY INSTALLATION	9
LOW BATTERY WARNING	9
GETTING STARTED	10
PLACEMENT OF THE UNITS	10
REMOTE AND INDOOR TEMPERATURE & HUMIDITY	11
AUTO-SCANNING	11
PROGRAMMABLE TEMPERATURE ALARM	12
COMFORT LEVEL INDICATORS	13
WEATHER FORECAST	13
MAXIMUM AND MINIMUM READINGS	14
LOST COMMUNICATION	14
TRANSMISSION COLLISION	15
WWVB RADIO CONTROLLED TIME	15
ATOMIC CLOCK	16
TIME AND CALENDAR DISPLAY MODES	16
MANUAL SETTINGS	17
CLOCK ALARMS	17
SNOOZE	19
BACKLIGHT	19
PRECAUTIONS	19
TROUBLESHOOTING	20
SPECIFICATIONS	21
FCC STATEMENT	22
DECLARATION OF CONFORMITY	23
STANDARD WARRANTY INFORMATION	24

2

HONEYWELL TE532ELW & TS15C MANUAL (ENG)
SIZE: W65 X H105 (mm)
BY WING TSUI 29/03/07

INTRODUCTION

Thank you for selecting the Honeywell Wireless Long-Range Weather Forecaster. This device combines precise time keeping with monitoring and displaying the weather conditions from up to three remote locations.

In this package you will find:

- One main unit (receiver)
- One remote sensor (transmitter) TS35C
- One User Manual

Please keep this manual handy as you use your new item. It contains practical step-by-step instructions, as well as technical specifications and precautions you should know.

3

PRODUCT OVERVIEW


MAIN UNIT

FEATURES

- New Double-Tool Design
- Time automatically sets to the US Atomic Clock
- 12 or 24 hours Time Format
- Dual crescendo Time Alarm with Snooze
- Day of the week displayed in English, Spanish, French, German and Italian
- Weather Forecast in Sunny, Partly Cloudy, Cloudy, Rainy and Snowy icons
- Long-Range Wireless Reception of the Temperature and Humidity from the Remote Sensor to the Main Unit from up to 328 feet (100 meters) away
- Multi-Channel Capability to Monitor Temperature and Humidity in up to 3 Remote Locations
- Three Remote Channels Auto-Scan feature
- Minimum and maximum memory for indoor and remote temperature and humidity
- Indoor and Remote Temperature and Humidity display
- Comfort Level Indicators – Comfort, Wet and Dry
- Programmable High/Low Temperature Alarm
- Programmable Ice Warning Alarm
- Low Battery Indicators
- Enhanced Blue Backlight

4

FRONT/REAR VIEW

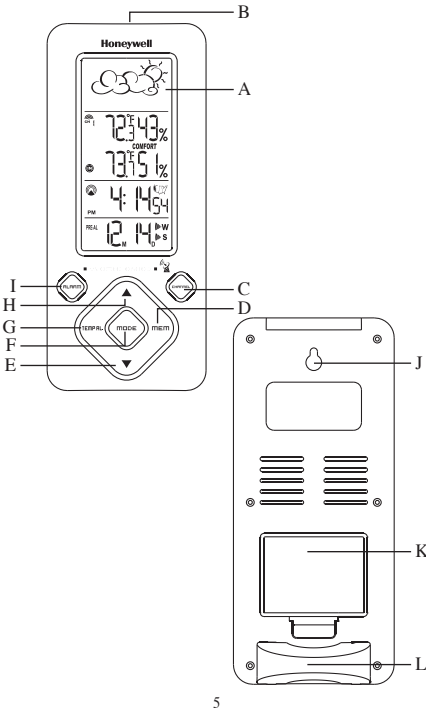

A. WEATHER AND TIME IN EASY-TO READ DIGITS

B. SNOOZE/LIGHT button

- Stops the clock's alarm temporarily
- Activates a backlight for 5 seconds

C. CHANNEL button

- Recalls a different remote sensor reading – 1, 2 or 3
- Activates the remote channels auto-scan feature
- Activates the remote channels search

D. MEM button

- Toggles between current, minimum, maximum readings of the indoor and remote temperature & humidity
- Clears the temperature and humidity memory

E. DOWN (▼) button

- Decreases the parameters
- Activates manual remote channels search
- Disables time alarms (W) and (S) and Ice Warning Alarm

F. MODE button

- Toggles between time modes - time with seconds and time with the day of the week
- Activates clock's manual programming mode

G. TEMP AL button

- Activates a Programmable Temperature Alarm Mode for all three remote channel

H. UP (▲) button

- Increases the parameters
- Activates US Time Zone selection mode
- Activates manual search for atomic time signal
- Enables time alarms (W) and (S) and Ice Warning Alarm

I. ALARM button

- Allows toggling between the calendar display and three time alarm modes
- Allows programming available alarms

J. WALL- MOUNT RECESSED HOLE

- Keeps the unit on the wall

K. BATTERY COMPARTMENT

- Accommodates 2 (two) UM-3 or AA 1.5V alkaline batteries

L. REMOVABLE TABLE STAND

- Holds unit in upright position on a flat surface


5

6

REMOTE SENSOR

FEATURES

- New double-tool design
- Remote temperature and humidity transmission to the main unit via 433 MHz frequency
- Case can be wall mounted using built-in hanger
- Selection of the temperature display in Celsius or Fahrenheit
- Three channel selection
- LCD displays temperature, humidity and channel

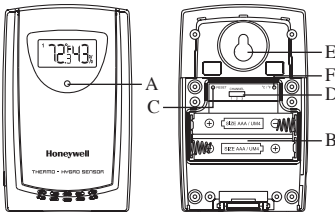

A. LED INDICATOR

- Flashes once when the remote sensor transmits a reading to the main unit.
- Flashes twice when battery power is low.

B. BATTERY COMPARTMENT

- Holds two AAA-size batteries

C. RESET

- Resets all previous settings

D. CHANNEL SWITCH

- Selects the desired channel -1, 2 or 3

E. WALL-MOUNT RECESSED OPENING

- Keeps the remote sensor on the wall

F. °C/ °F SWITCH

- Selects the temperature display in Celsius or Fahrenheit

7

BEFORE YOU BEGIN

- We recommend using alkaline batteries for the remote sensor and main unit when temperatures are above 32°F (0°C). We recommend using lithium batteries for the remote sensor when temperatures are below 32°F (0°C).
- Avoid using rechargeable batteries. (Rechargeable batteries cannot maintain correct power requirements).
- **ALWAYS** install batteries in the **remote sensor before** the main unit.
- Insert batteries before first use, matching the polarity in the battery compartment
- Press **RESET** after each battery change with a paper clip or similar tool.
- Remove protective plastic screen from LCD display (if any).
- During an initial setup, place the main unit close to the remote sensor.
- After reception is established (the remote temperature will appear on the main unit's display), position the remote sensor and the main unit within the effective transmission range of 328 feet (100 meters).
- The remote sensor can be placed **indoors or outdoors, depending on the area where the temperature and humidity are intended to be measured**. If you intend measuring outdoor elements, place remote sensor outdoors.
- The main unit must be placed indoors.

NOTE:

1. Avoid pressing any buttons on the main unit **before the remote readings are displayed**.
2. The effective operating range may be influenced by the surrounding building materials and how the receiver and transmitter are positioned.
3. Place the remote sensor so that it faces the main unit (receiver), minimizing obstructions such as doors, walls, and furniture.
4. Though the remote sensors are weather-resistant, they should be placed away from direct sunlight, rain or snow. The best suggested location for the remote sensor for outdoors is under the eave on the north side of the building.

8

NOTE: When the temperature falls below freezing, the batteries in the outdoor remote sensor may have reduced voltage supply and a shorter effective range. We recommend using lithium batteries at temperatures of 32°F (0°C) and below.

BATTERY INSTALLATION

REMOTE SENSOR

NOTE: Install the batteries; select the channel and temperature in °C or °F before mounting the remote sensor.

- Remove the screws from the battery compartment with a small Phillips screwdriver.
- Set the channel. The switch is located in the battery compartment. Channel 1 is typically selected if only one remote sensor is being used.
- Install 2 “AAA” size alkaline batteries (not included) matching the polarities shown in the battery compartment.
- Replace the battery compartment door and secure the screws.
- Secure the remote sensor in the desired location.

MAIN UNIT

- Remove the battery compartment door.
- Install 2 batteries (UM-3 or “AA” size 1.5V) matching the polarity as shown in the battery compartment.
- Replace the battery compartment door.

LOW BATTERY WARNING

A low-battery indicator [🔋] will appear next to the indoor or remote data reading line of the main unit warning that the corresponding batteries need replacement.

GETTING STARTED WEATHER DISPLAY

After batteries are installed; remote sensor will transmit temperature and humidity data at 45 second intervals. The main unit may take up to two minutes to receive the initial readings. Upon successful reception, remote temperature will appear under the weather forecast section of the main unit’s display (the default remote channel is channel one). The main unit will automatically update readings at 45-second intervals.

After communication between the main unit and remote sensor has been established, secure the remote sensor in the desired location.

If no signal is received from the remote sensor within two minutes, dashes [- - -] will be displayed. Press and hold the DOWN (▼) button on the main unit for two seconds to initiate another signal search.

PLACEMENT OF THE UNITS

The main unit can be placed on any flat surface **indoors**. The remote sensor can be placed **indoors** or **outdoors**, on a flat surface or mounted on the wall.

REMOTE AND INDOOR TEMPERATURE & HUMIDITY

The remote temperature and humidity information line is located right below the weather forecast line of the main unit’s display.

The wave icon is located above the remote channel number indicates the reception status from the corresponding remote sensor.

There are three following types of the reception status may be displayed:

The unit is in a searching mode.	
Temperature and readings is securely registered.	
No signals detected.	

The indoor temperature and humidity with the icon (🌡️) is located below the remote temperature and humidity information line.

NOTE: If the indoor or remote temperature or humidity goes above or below operating range stated in specifications, the main unit’s display (weather) will show dashes “- - -” on the corresponding line.

AUTO-SCANNING

Press and hold the CHANNEL button for 2 seconds – the icon “🔄” will appear on the main unit display to the left of the COMFORT LEVEL indicator.

All three remote channels data will be displayed one-by-one automatically with 11 seconds delay in the following sequence: Channel 1, Channel 2 and Channel 3.

To exit from scanning mode, press and hold the CHANNEL button for 2 seconds, and the icon “🔄” will disappear, returning the main unit display to the default display mode.

PROGRAMMABLE TEMPERATURE ALARM

This product allows manual programming of a **HIGH** and **LOW** temperature alarms for all three remote channels at the same time. Once the actual remote temperature will reach the pre-set high or low limits, the alarm will sound. The alarm can be set for temperature readings between -58 °F and 158°F.

To program the temperature alarm for all three remote channels,

- Press the **TEMP AL** button once to enter into the **High Temperature Alarm** programming mode – the abbreviation “**OF**” with the high temperature limit symbol (▲) will be displayed on the remote temperature line
- Press and hold **TEMP AL** button until the abbreviation “**OF**” will flash
- Use **UP(▲)** or **DOWN(▼)** arrow buttons to adjust the higher temperature limit
- Press the **TEMP AL** button to confirm the selected value
- Press the **TEMP AL** button once to enter into the **Low Temperature Alarm** programming mode – the abbreviation “**OF**” with the low temperature limit symbol (▼) will be displayed on the remote temperature line
- Press and hold **TEMP AL** button until the abbreviation “**OF**” will flash
- Use **UP(▲)** or **DOWN(▼)** arrow buttons to adjust the lower temperature limit
- Press the **TEMP AL** button to confirm the selected value

COMFORT LEVEL INDICATORS






This product is capable of detecting and displaying the current indoor comfort levels of surrounding environment. The comfort level is displayed on the weather station portion of the main unit's display. It is based on the combination of the current indoor temperature and humidity readings.

There are following comfort levels may be displayed: **COMFORT** (comfortable); **WET** (wet) and **DRY** (dry)

Indicator displayed	Temperature Range	Humidity Range	Shows current condition
COMFORT	20°C to 25°C (68°F to 77°F)	40%RH- 70%RH	Ideal for both relative humidity and temperature
WET	-5°C to 50°C (23°F to 122°F)	OVER 70%RH	Contains excess moisture
DRY	-5°C to 50°C (23°F to 122°F)	Below 40%RH	Contains inadequate moisture

WEATHER FORECAST

This unit is capable of detecting the atmospheric pressure changes. Based on collected weather data, it forecasts the weather for the next 12 to 24 hours.

When the display shows...					
Forecast is...	Sunny	Partly Cloudy	Cloudy	Rainy	Snowy

13

NOTE: The weather forecast accuracy is approximately 70%. The main unit display shows forecasted (predicted) not current conditions. The SUNNY icon indicates clear weather, even when displayed during the night-time.

MAXIMUM AND MINIMUM READINGS

The maximum and minimum record of the indoor and remote temperature and humidity will be automatically stored in the memory of the main unit (receiver).

To display the minimum, maximum or the current reading press **MEM** button.

If no button is pressed for the next 15 seconds, the unit will return to the current temperature and humidity display.

To clear the memory, press and hold **MEM** button for two seconds and all previously stored readings will be erased.

LOST COMMUNICATION

If the main unit display line for the remote sensor reading goes blank, press and hold **DOWN** (▼) button for 2 seconds to begin a new signal search. If the signal still isn't received, please make sure that:

- The remote sensor is in its proper location.
- The distance between main unit and remote sensor(s) is not over 328 feet (100 meters)
- The path between units is clear of obstacles. Shorten the distance if necessary.
- Fresh batteries are installed correctly in both remote sensor and main unit.

If there is no reception, please perform the following steps:

- Bring the main unit and remote sensor close together.
- Remove four (4) small screws from the back of the remote sensor with small Phillips screwdriver, and open the battery compartment.
- Remove the batteries from the battery compartment and reinstall them in the same manner. Remote sensor LED indicator will flash showing transmission of the signal.

14

- Remove the batteries from the main unit and reinstall them in the same manner.
- On the main unit select the same channel number using **CHANNEL** button as set on the remote sensor. The remote temperature and humidity appeared on the main unit's display will show that transmission is being received successfully.

TRANSMISSION COLLISION

Signals from the other household devices such as wireless doorbells, home security systems, and entry control, may interfere with this product or cause temporary reception interruption. This is normal and will not affect the general performance of the product. The transmission and reception of the temperature and humidity readings will resume once the interference subsides.

WWVB RADIO CONTROLLED TIME

The NIST (National Institute of Standards and Technology) radio station (WWVB) is located in Ft. Collins, Colorado. It transmits an exact time signal continuously throughout the most of the continental United States at 60 KHz frequency. The Long-Range Weather Forecaster can receive this WWVB signal through the internal antenna from up to 2,000 miles away. Due to the nature of the Earth's ionosphere, reception can be limited during the daylight hours. The radio controlled clock will search for an alternate station that receives the atomic time signal from the NIST Atomic clock in Boulder, Colorado.

The WWVB tower icon on the unit's display will flash indicating a radio signal reception from the WWVB station. If the tower icon is not fully lit, or if the time and date are not set automatically, please consider the following:

- During night-time hours, atmospheric disturbances are typically less severe and radio signal reception may improve. A single daily reception is sufficient enough to keep the clock accuracy within 1 second.

15

- Make sure the unit is positioned at 8 feet (2 meters) distance from any interference source such as a TV, computer monitor, microwave, etc.
- Within concrete wall rooms such as basements or office buildings, the received signal may be weakened. Always place the Weather Forecaster near the window for better reception.

ATOMIC CLOCK

Immediately after establishing communication between the main unit and remote sensor, the atomic time signal receiver will open and start to search for the atomic time signal.

The search usually takes between 5-8 minutes.

NOTE: Do not press any buttons on the main unit during auto search as it may interrupt product's operation, and you will need to start set up procedure again.

Once the atomic time signal is received, the date and time will be set automatically, and the [🕒] icon will appear.

NOTE: It is necessary to set your Time Zone, having in mind that the default zone is a US Pacific Standard Time (PST). (Refer to **MANUAL SETTINGS** section)

If the time signal has not been received in 8 minutes, you may use the **MODE** button to set the time and date manually. (Refer to the **MANUAL SETTINGS** section).

After the clock is set manually, place the Weather Forecaster by the window for the better reception. The atomic clock receiver is programmed that it will continue to search for the atomic time signal daily for every hour between 1:00 am and 4:30 am.

Once the time signal has been successfully received, the time and date will be updated automatically.

TIME AND CALENDAR DISPLAY MODES

The Long-Range Weather Forecaster displays current time in two display modes – in hour-minutes-seconds format and in hour-minutes-day.

The date is displayed in month-date format.

16

MANUAL SETTINGS

It is necessary to set the desired US TIME ZONE.

TIME ZONE

- Press **MODE** button **once** so that the **Day of the Week** abbreviation is displayed to the right of the time; for example: **pm 2:37tu**
- Select the Time Zone by pressing and holding **UP (▲)** button for 3 seconds
- Keep holding **UP (▲)** button until the desired US Time Zone (Pacific, Mountain, Central or Eastern) is highlighted on the display's US map, located to the right of the time display and above the day of the week
- Release the **UP (▲)** button. The Time Zone is set

CLOCK

- Press and hold **MODE** button for 3 seconds: the year will flash. Press **UP (▲)** or **DOWN (▼)** to change flashing digits.
- After the year is set, press **MODE** button to confirm and move to the next parameter (month)
- Continue setting month, date, hour, minutes, language for the day of the week and temperature in Fahrenheit or Celsius
- Press **MODE** for the last time to return to the time of day with seconds, after the last parameter is set

CLOCK ALARMS

The Long-Range Weather Forecaster has two time alarms – Weekday alarm (W) and Single day alarm (S) - and one Ice Warning Alarm (PRE-AL).

- If **Weekday (W)** alarm is activated, it will sound at the set time and the alarm icon will flash Mondays through Fridays
- If **Single (S)** day alarm is activated, it will sound at the set time and the alarm icon will flash only for this specific day and will not activate on subsequent days
- If **Ice Warning Alarm (PRE-AL)** is activated, it will sound at the set time and alarm icon will flash once the remote temperature for Channel One (1) will reach 32°F(0°C) and below

NOTE: Ice Warning Alarm can be set only if one or both - Weekday or Single alarm - are programmed.

17

SETTING THE WEEKDAY (W) AND SINGLE DAY (S) ALARMS

- Press **ALARM** button once to enter into the alarms setting mode. The default alarm is a Weekday alarm (W). The abbreviation "**OFF**" with a letter "**W**" next to it will be displayed, if the alarm has not been set previously
- Press and hold **ALARM** button for two seconds. The hour digit will flash
- Adjust the hour using **UP (▲)** or **DOWN (▼)** buttons
- Press **ALARM** button again. The minute digits will flash
- Adjust the minutes using **UP (▲)** or **DOWN (▼)** buttons
- Press **ALARM** button again to confirm and the weekday alarm time will be set
- Set **Single (S)** day alarm if desired in the same manner

SETTING THE ICE WARNING ALARM (PRE-AL)

If Weekday (W) or Single day (S) alarm is set, the Ice Warning Alarm (Pre-AL) can be programmed.

- Press **ALARM** button once to enter into the Ice Warning Alarm setting mode. The abbreviation **OFF** with a **PRE-AL** next to it will be displayed.
- Press and hold **ALARM** button for two seconds. The number **30** will flash, meaning that if selected, the alarm will sound 30 minutes earlier than the Weekday or Single alarm.
- Select the desired Ice Warning Alarm interval in 15 minutes increments between 15 and 90 minutes, using **UP (▲)** or **DOWN (▼)** buttons
- Press **ALARM** button to confirm and exit from the alarm setting mode.

ACTIVATING THE ALARM

- Press **ALARM** button to enter into the desired alarm mode.
- Press **UP (▲)** to activate or **DOWN (▼)** to deactivate desired alarm. When alarms are activated, the corresponding icons **W**, **S** or **PRE-AL** will be displayed.

18

SNOOZE

When the time alarm sounds, press the **SNOOZE/LIGHT** button to temporarily stop it. After the **SNOOZE/LIGHT** is depressed, the time alarm sound will resume in four minutes. If the alarm is not disabled after that, it will sound for two more minutes and then will stop by itself.

BACKLIGHT

The backlight feature is enabled only after the time is set. To activate the backlight press the **SNOOZE/LIGHT** button once, and both – clock and weather station displays - will light up for five seconds.

PRECAUTIONS

This product is engineered to give you years of satisfactory service if handled carefully. Here are a few precautions:

- Do not immerse the units in water.
- Do not clean the units with abrasive or corrosive materials. They may scratch the plastic parts and corrode the electronic circuits.
- Do not subject the product to excessive force, shock, dust, temperature, or humidity, which may result in malfunctions, shorter lifespan, damaged batteries, and damaged parts.
- Do not tamper with the units internal components. Doing so will invalidate the warranty and may cause damage. These units contain no user-serviceable parts.
- Use only fresh batteries. Do not mix new and old batteries.
- Read the user's manual thoroughly before operating the units.

19

TROUBLESHOOTING

Check here before contacting customer service.

Issue	Symptom	Solution
Main unit	US Atomic Time signal is not received	Place unit by the window and keep it there overnight
Remote sensor	Cannot locate remote sensor	Check batteries Check location
		Press and hold DOWN (▼) button on the main unit to search for the signal form the remote sensor
	Cannot change the channel	Press " RESET " after setting the channel
	Cannot change the °C to °F and back	Press " RESET " after setting °C/F
	Data does not match data on the main unit	Initiate manual sensor search (Press and hold DOWN (▼) button on the main unit)

20

SPECIFICATIONS

Main Unit

Indoor Temperature

Proposed operating range : 23.0°F to 122.0°F
(-5°C to +50°C)
: 0.2°F (0.1°C)

Temperature resolution

Indoor Humidity

Proposed operating range : 30%RH to 80%RH
Humidity resolution : 1%

Comfort level indicators – **COMFORT**, **WET** and **DRY**

User-selectable (°F or °C) temperature display

Weather Forecast in five large graphic icons: Sunny, Partly

Cloudy, Cloudy, Rainy and Snowy

Remote channels auto-scan feature

Maximum number of remote sensors : 3 (one included)

Readings update interval : every 45 seconds

EL backlight

Low battery indicators – for each remote channel and main unit

Lock

Precise atomic time

4 US Time Zones

12/24 hour time format

Crescendo 4 minutes alarm with 5 minutes snooze

Remote Sensor

Remote Temperature

Proposed operating range with alkaline

batteries : -4°F to + 158°F

(-20°C to + 70°C)

Proposed operating range with lithium

batteries : -38.8°F to +158°F

(-38.8°C to + 70°C)

Temperature resolution : 0.1°C/0.2°F

RF Transmission Frequency : 433 MHz

RF range : Maximum 328

feet (100 meters)

Temperature transmission cycle : approximately

45 seconds

Low battery indicator

Wall-mount of Table stand

21

Power

Main unit: 2 AA size (UM-3) 1.5V batteries (not included)

Remote Sensor: 2 AAA size 1.5V batteries (not included)

Dimensions

Main unit: 3.5(L) x 8.02(H) x 1.14(D) inches

Remote sensor: 2.35(L) x 3.77(H) x 0.86(D) inches

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment had been tested and found to comply with the limits for a Class B Digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment, installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to improve or correct turning the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

22

DECLARATION OF CONFORMITY

We

Name: Hideki Electronics, Inc.

Address: 7865 SW Mohawk

Tualatin, OR 97062

declare that the product

Product No.: TE532ELW

Product Name: Honeywell Long-Range Weather Forecaster

Manufacturer: Hideki Electronics Ltd.

Address: Unit 2304-06, 23/F Riley House, 88 Lei Muk

Road, Kwai Chung, New Territories, Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation

is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received,

including interference that may cause undesired operation.

The information above is not to be used as a contact for support or sales.

Please call our customer service hotline (refer to the Standard Warranty Information) for all injuries instead.

23

STANDARD WARRANTY INFORMATION

This product is warranted from manufacturing defects for **one year** from date of retail purchase. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and repair. Note that online product registration is required to ensure valid warranty protection.

To register your product, go to our Company website at:

www.honeywellweatherstations.com. Click Online

Product Registration under the Customer Service menu.

Should you require assistance with this product and its

operation, please contact our **Customer Service Hotline**

1(866) 443 3543.

Please direct all returns to the place of the original purchase.

Should this not be possible, contact Hideki Customer Service

Hotline for assistance and to obtain a Return Merchandise

Authorization (RMA). Returns without a return authorization

will be refused. Please retain your original receipt as you

may be asked to provide a copy for proof of purchase.

Hideki Electronics, Inc. reserves the right to repair or replace

the product at our option.

Copyright (2007) Hideki Electronics Inc. All Rights Reserved.

The Honeywell Trademark is used under license from

Honeywell Intellectual Properties Inc.

Honeywell International Inc. makes no representations or

warranties with respect to this product.

All user manual contents and information are subject to

change.

MIH532001

24

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>