

OPERATING INSTRUCTIONS



BOSCH

OPERATING INSTRUCTIONS

DiBos
4.998.137.631 A1

Contents

Introduction and safety instructions	3	Looking at, printing, saving, swapping out, and deleting archive images	17
Introduction to the system	4	Deleting archives / searching for archive images and additional data	18
Password	4	Connecting backup drive and / swapping out archive images on diskette	19
Logging on	4	Formatting a CD	20
Changing users/logging off	4	Swapping out data on CD	22
Exiting the system / ending the program	4	Alarm simulation	23
The basic live image window	5	Connection with a remote station	24
General information	6	Searching for and looking at archive images from the remote station	26
Basic window menu bar	7	Notes	27
Basic window toolbar / alarm simulation bar	8		
Basic window status bar / connection window	9		
Controlling a dome camera	10		
The basic image archive window	12		
Image archive menu bar	13		
Image archive toolbar	14		
Image archive toolbar / alarm simulation bar	15		
Image archive status bar / connection window	16		
Recorder buttons			

Introduction and safety instructions

What do these operating instructions tell you?

These operating instructions provide you with all relevant information that you need in order to perform the tasks described in the table of contents quickly and easily.

You will find more detailed information about the respective screens online on your system if you press the F1 key or click the Help button.

Caution!

To avoid electrical shock, do not remove the cover. Leave all maintenance to qualified personnel.

Warning!

To avoid fire or electrical shock, never expose the device to rain or humidity.

Warning!

Installation should only be undertaken by qualified customer service personnel in accordance with all applicable electrical regulations.

Power connection!

Devices with or without power cords have voltage in the device as soon as the power cord is plugged into the outlet. However, the device is only ready for use if the power switch (ON/OFF) is on ON. If you unplug the power cable from the outlet, the voltage supply to the device is completely halted.

Note

If you are not able to accomplish some of the described steps of this manual, it may be that you don't have the right authority level. In this case please contact your authorized dealer.

Notes on cleaning

When cleaning the surface, be sure that you do not use any caustic or scrubbing cleansers and that no liquid gets inside the device.

<p>The device may only be operated by trained persons! For security reasons and in order to avoid faulty operation, any authorization code required for operation should only be communicated to these persons.</p>

Service station: _____

Telephone: _____

Introduction to the system

When the computer is booted, the system runs automatically in the background and is able to respond to signals and record images. You must only log on if you wish to perform operating tasks. Only authorized users have access to operate the system, based on a password.

Depending on your access privileges, with the user interface you can:

- view live images for monitoring purposes and manually switch camera views
- open the image archive and retrieve, print, and delete saved images
- perform system configuration
- perform an alarm simulation

You must log on to the system in order to commence operation.

After you have switched on the system and the live image screen appears, you will see a dialog box in the middle of the screen that invites you to log on.

Password

For the password, there are no restrictions as to the type and number of characters permitted.

You can change the password on the System menu.

Logging on

Enter your user name and password and confirm with **OK**. You are now on the live image.

The live image consists of the live image basic window, which is also displayed if no video station was selected or one or several connection windows


Changing users/logging off

On the System menu, you can change users or log off. During a change of user, the system continues to run in the background. This is recommended if you leave the system.

Exiting the system / ending the program


Select **System** from the menu bar and click **Exit system**.

Logon screen

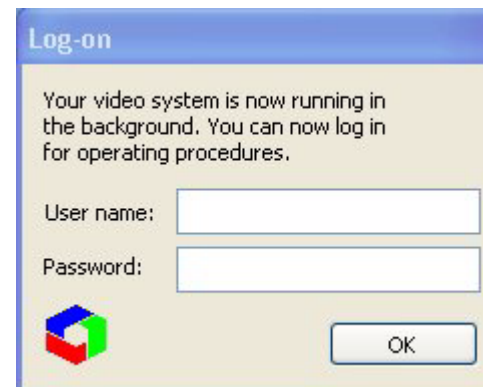

The basic live image window

General information

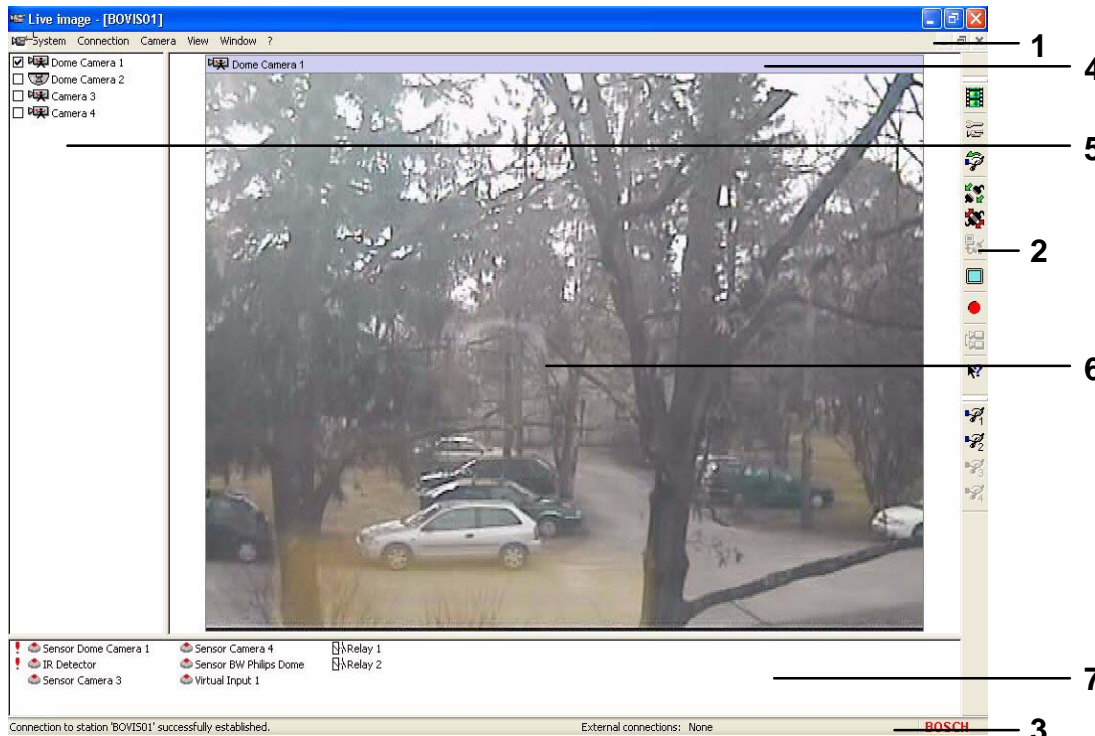

The basic live image window

- 1 Menu bar
- 2 Toolbar
- 3 Status bar

Connection window

- 4 Title bar of the connection window for the selected station
- 5 Display all configured cameras of the selected station
- 6 Display of selected camera images
- 7 Display of status of all configured alarm inputs of the selected station and relay statuses

Display of several live images

You can display several live images, depending on the number of connected and configured cameras. The live images are always arranged automatically from left to right in consecutive rows.



For each camera marked with a , a live image is shown.

The basic live image window

General information



Camera deactivated




Camera activated: if you click this box, you can activate the camera and show the live image.



If several cameras are selected and activated with the left mouse button (highlighted in blue), these camera images can all be shown together. Click to show and hide the camera images.



If you click the Ctrl key and click the left mouse button on selected cameras, you can combine these into non-continuous camera blocks.

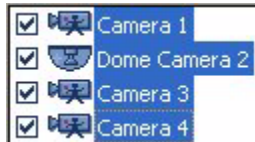

If you click the Shift key and click the left mouse button on the first and last selected cameras, you can create continuous blocks.



If you click this button (in the upper right corner), you will minimize (depending out the configuration) the basic window. This gives you the opportunity to look at the minimized images and to edit texts in the interface simultaneously.



Click to return to a full-sized image.

The menu bar of the basic window in the live image

System

Image archive: change to the image archive
Configuration: change to the configuration
Alarm simulation: trigger an alarm or other actions
Change user: log the user off and log on screen for new user
Change password: change the password
Exit system: end the program (administrator)

Connection

Establish connection: establish connection via ISDN/network/modem
Terminate connection: terminate connection via ISDN/network/modem
Local connection: establish local connection (live image)

Camera

Camera switching: to the next camera selected with
Image quality: image compression can be changed
save displayed
images: Activate and deactivate automatic saving
from all images displayed

View

Toolbar: on/off
Status bar: on/off
Alarm simulation bar: on/off
Full Screen mode: enlarges the image of the selected camera
to full-screen size














Windows

Tile: open windows are displayed next to one another
Cascade: open windows are displayed overlapping one another (cascading)
Arrange icons: icons can be deposited at the bottom of the window
Station X: all stations with a connection are displayed

?

Help topics: calling up online Help
Info: Info about the system, e.g. version and serial number

Basic window toolbar / alarm simulation bar in live image


Icon	Name	Explanation	Icon	Name	Explanation
	Image archive	Look at, search for, swap out or print saved images in local/remote archives.		Automatic camera switchover	Switchover of all cameras displayed.
	Configuration	Hardware, image saving, image transmission, and user settings. Not active with integrated operating station.		Help	If you place the mouse pointer over an object, you will receive help with that object.
	Alarm simulation	The configured alarm simulation buttons will be called up.		Alarm simulation	Buttons for the configured alarm simulation signals or other configured actions.
	Connect	with a remote station (network/ISDN/DSL/modem)	The alarm simulation bar can be embedded in the toolbar or free-standing.		
	Terminate	established connection will be terminated.	Embedded		
	Local connection	Connection will be established to the local system.		Alarm simulation 1 triggered Alarm simulation 2 not triggered Alarm simulation 3 and 4 not configured	
	Full Screen mode	Enlarges the image of the selected camera to full-screen size.	Free-standing		
	Save images displayed	Activate, deactivate automatic saving of all images displayed. With simultaneous generation of a separate archive in the image archive with the name <Computername>_normal.			


Basic window toolbar / connection window in live image


The **Status bar** (lowermost line of the screen) contains help information about the menu you are currently using. It shows the name of the remote station to which an external connection has just been established.

The **Title bar** contains:

- the window title with the name of the selected station and
- the buttons to minimize, maximize and close the window.




 Clicking minimizes the window and places it at the bottom edge of the screen.

 Clicking restores the window to normal size.

 Terminates the existing connection



Display of the existing / approved cameras


On the left side of the screen, you will find a list of the configured cameras.


 Camera 1 Existing / approved cameras will be displayed in live image.
  Dome Camera 2
  Camera 3


Display of the configured alarm inputs

The lower portion of the image displays all configured alarm inputs.

  Sensor BW Philips Dome Configured alarm inputs are displayed in the live image

 : Contact input or video motion detector of a camera


 : Foyer card reader / barcode reader


 Relay 1 on Configured relay outputs can be activated and deactivated by clicking with the right mouse button

Status display of the configured alarm inputs

The statuses of all configured alarm inputs are displayed as follows.

no icon Input is in standby



 Input has triggered



 Input does not exist as hardware

Control of a dome camera


 Dome Camera 2 Configured dome camera


If a dome camera is configured, an arrow will appear in its live image if the user moves the mouse (variable speed) over the live image. With the left mouse button, you can control the camera in the direction of the activated arrow.

 e.g. to the left  e.g. up

 e.g. to the right  e.g. down

A magnifying glass appears in the middle of the screen. If you see a + sign, this means that you are zooming in on the image. If you see a – sign, the camera angle is getting larger.

 Zoom in: reduce camera angle (zoom in)

 Zoom out: enlarge camera angle (zoom out)

Note

Depending where you place the mouse cursor you operate with a variable speed.

By clicking the right mouse button on the live image, you activate the following menu:

- Dome camera control
- Presets saved
- Macros saved

Dome camera control



Here you can set the focus (sharp/ blurred) and aperture (open / close).

Presets saved

In the configuration, you can call up set camera positions here.

Macros saved

Call up saved camera commands. (Start/end macros).

Note

Presets and macros are to be configured in the set up in advance.

Please also use the online help

The image archive of the basic window


Information about image archive

You can also use the Image archive menu to open and close live image display. It enables access to and searching in:

- local and remote video system image archives and
- existing files on hard disk or diskettes.

In the image archive you have the following possibilities:

- Start configuration (in addition to the image archive)
- Call alarm simulation
- Establish an ISDN, network or modem connection to a remote station (in addition to the connection to the local station); the remote archive tree is thus shown under the local archive tree
- Swap out saved images
- Print saved images
- Search for saved images

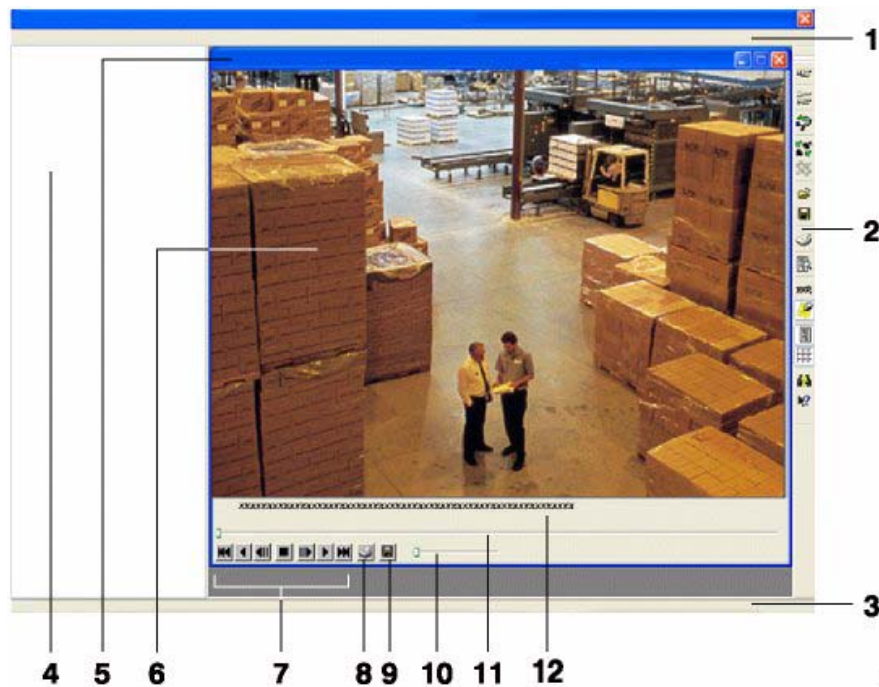

Basic live image window

- 1 Menu bar of the image archive basic window
- 2 Toolbar of the image archive basic window
- 3 Status bar of the image archive basic window
- 4 Tree structure of configured archives

Image display window


- 5 Title bar of saved image
- 6 Display of saved images
- 7 Recorder buttons for playing back saved images
- 8 Print the displayed image
- 9 Save images on drive or diskette
- 10 Set the playback speed
- 11 Scrollbars for setting image playback speed
- 12 Image information about the saved image e.g. date, time, camera no., image resolution, etc.

The image archive of the basic window

Several archive images tiled

You can display several archive images next to one another (tiled), up to a maximum of 8. The archive images are always arranged from left to right consecutively and in a row. In each image, you can use the functions of the recorder buttons.

Selecting menu tree for archive images

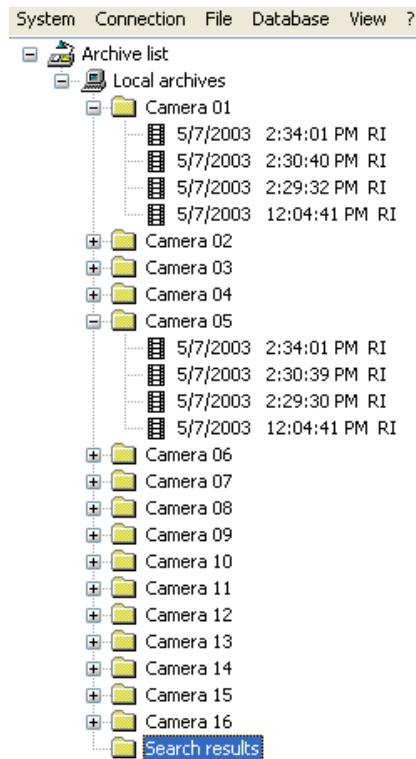

Example of image archives



Image archive menu bar

System

Live image: change to the live image
Configuration: change to the configuration
Alarm simulation: trigger an alarm (depending on the configuration)
Close image archive: close image archive basic window, return to the live image
Exit system: log off the system

Connect

Establish connection: establish connection via network/ISDN/modem
Terminate connection: terminate connection via network/ISDN/modem

File

Open: open files to compare images
Logbook: search for saved files
Print comment: enter a print comment about the current cluster
Setup printer: vary the print image layout, setup or selection of available printers

Database

Search dialog (individual images): find images in archives
Search dialog (Smart Search): the search dialog enables searching for and finding images in which motion has occurred
Update archive list: changes will be saved
Database information: query about type, size, etc.
Show backup drive: show and select
Swap out backup: on external data medium

see also searching for archive images

View

Toolbar: on/off
Status bar: on/off
Alarm simulation bar: on/off
Archive list: on/off

?

Help topics: call up online Help
Info: Info about the system, e.g. version and serial number

Image archive toolbar

















Icon	Name	Explanation	Icon	Name	Explanation
	Live image	Switchover to live image display.		Print	The selected image can be printed with additional information.
	Configuration	Hardware, image saving, image transmission, and user settings. Not active with integrated operating station.		Search dialog (single image)	Search and find images in local or remote archives and their automatic saving.
	Alarm simulation	Alarm simulation can be called up depending on the configuration.		Images in original size	Possible display of the image in original size.
	Connect	Establish a connection with a remote station via ISDN/network/modem.		Image information on/off	The display of image information can be deactivated in favor of a larger window display.
	Terminate	Established connection will be terminated.		Archive list on/off	Display of the archive list can be deactivated.
	Open	Image archives located on hard disk or diskette can be opened and displayed.		Arrange all windows	Automatically arranges all windows.
	Save as	Selected images can be swapped out on hard disk or diskette.		Help topics	Call up online Help
				Help	Help for image archive

Image archive toolbar / alarm simulation bar

Icon	Name	Explanation
	Alarm simulation	Buttons for the configured alarm simulation signals or other configured actions.

The **alarm simulation bar** can be embedded in the toolbar or free-standing.

Embedded



Alarm simulation 1 triggered

Alarm simulation 2 not triggered

Alarm simulation 3 and 4 not configured

Free-standing



Image archive status bar / connection window / recorder buttons

The **Status bar** (lowermost line of the screen) contains help information about the menu you are currently using. It shows the name of the remote station to which an external connection has just been established.

The **Title bar** contains:

- the window title with the name of the selected station and
- the buttons to minimize, maximize and close the window.



Clicking minimizes the window and places it at the bottom edge of the screen.




Clicking restores the window to normal size.




Terminates the existing connection

Display of configured archives

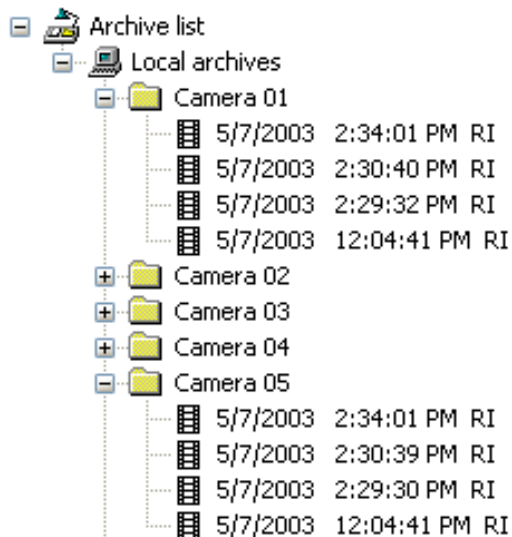

On the left side of the screen, you will find a list of the configured archives.

The recorder buttons

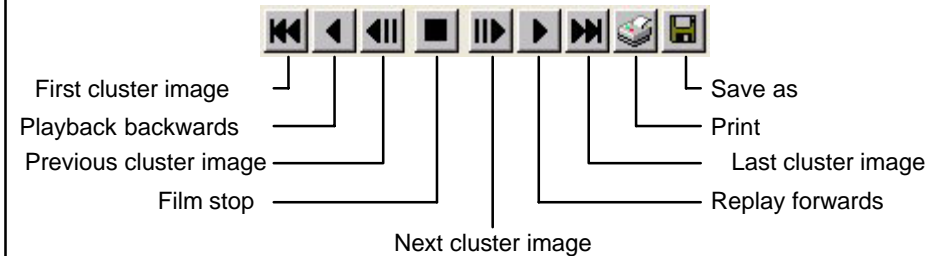

Changes the playback speed.

1 / 120
Jumps ahead within the images of a cluster.

show detected cells This information (detected motion in the image) is only available for images that were recorded with activated motion detection function.

Example: movement in image



Looking at, printing, saving, swapping out, and deleting archive images

You are now on the live image means you are logged into the system.

- Looking at archive images**
1. From the **System** menu, select the **Image archive** command. The image archive will be opened.
 2. Open the archive by clicking in front of the archive name.
 3. Double-click on the first entry of the relevant day. You will see the first image of the saved film sequence.
 4. Let the film run ventually reduce the playback speed. To do this, use the recorder buttons at the bottom of the image window.

- Print archive images**
1. Use the recorder buttons to navigate to the images that you would like to print. Keep in mind that you can only print the image that is currently displayed on the screen.
 2. If necessary, change the format on the **File/Setup printer** menu and on the **File/Print comment** menu, enter a comment about the cluster. This note will only be printed in panel format.
 3. Click the **Print** icon, which you will find at the buttons of the image window.

- Save archive images**
- Use the recorder buttons to navigate to the images that you would like to save. Keep in mind that you can only save the image that is currently displayed on the screen.
- Click on the **Save** icon, which you will find at the bottom of the image window and on the **Save as** dialog box, enter the file name with the ending .jpg. Saving will occur without any additional image information!
- or with the ending HTML (recommended). Saving occurs with additional image information!

Swap out archive images

1. Your backup drive must be connected. If not, please connect it.
2. From the **Database** menu, select the command **Show backup drive**. A dialog box for selecting the backup drive appears.
3. On the **Selection backup drive** dialog box, click on the drive. Confirm with **OK**.
4. From the **Database** menu, select the **Swap out backup** command. A dialog box for searching the archive will open.
5. Enter the archive to be swapped out and if necessary, additional criteria, and click the **Search** button.
The system will search.
6. Enter the backup archive name and confirm with **OK**.
7. On the **Database** menu, deactivate the command **Show backup drive**.

Delete archive images

Before exiting the system, make sure there is sufficient storage space, e.g. by deleting. If you click the left mouse button on the relevant cluster and then click the right mouse button, you will delete it.

Attention:

Some backup drives may only be removed or connected when DiBos is switched off!
For details, read the manual for your backup drive.

Deleting archives / searching for archive images and additional data


You are now on the live image

Deleting old search results


1. From the **System** menu, select the **Image archive** command. The image archive will be opened.
2. On the archive tree, click on the + sign in front of the archive. The archive will be opened, the image clusters will be shown.
3. Select the clusters to be deleted in the archive by clicking with the right mouse button and selecting the **Delete** command from the menu that opens. You will see another confirmation box.
4. Confirm the deletion with **Yes**.

Image search for additional data

5. From the **Database** menu, select the **Search (single images)** command. A dialog box for searching the archive will open.
6. Enter the search criteria and/or the archives to be searched and click the **Search** button. The images found will be saved in the local archive **Search results**.
7. The images found in the search results archive can be looked at, printed, saved, and swapped out.

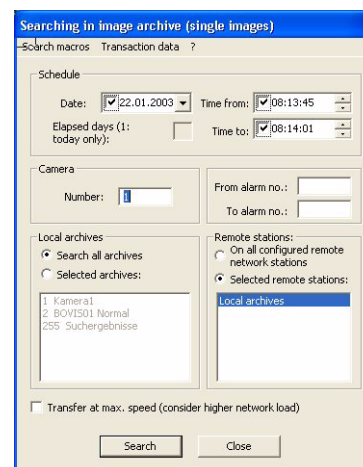

Search dialog (single images)

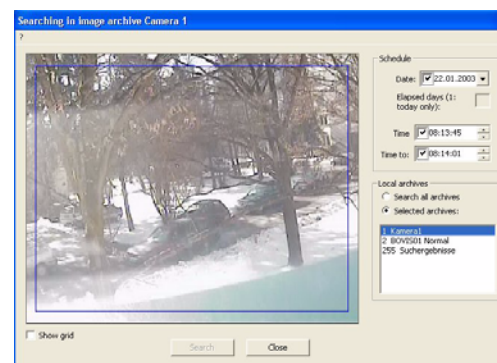

Search dialog (motion information)

For a targeted search, an image selection can be displayed on the camera image. If you click the left mouse button, you will see a (+) sign. You can set several selections next to one another or individually. If you click the right mouse button, you will see a (-) sign. Now you can modify or remove image selections. Enter the search criteria and click Search.

Note

This function is only working for images which one record through the internal motion detection, not for continuously recorded images.

Connecting backup drive and / swapping out archive images on diskette

Saving saved archive images on diskette

- Saving archive images**
(single images)
1. Carry out steps 1 – 4 under **Looking at saved archive images**.
 2. Use the recorder buttons to navigate to the images that you want to save. Keep in mind that you can only save the image that is currently displayed on the screen.
 3. Click on the Save icon, which you will find at the bottom of the image window and on the Save as dialog box, enter the file name with the ending .jpg.

Connecting a backup drive

- Connect backup drive**
1. Exit DiBos from the **System** menu with the **Exit DiBos** command . You must have administrator authorization to do this.
 2. Switch the computer off.
 3. Connect the backup medium.
 4. Switch the computer on and log on.

Swapping out saved archive images on a backup drive


- Images**
1. Your backup drive must be connected. If not, see **Connecting a backup drive**.
 2. From the **System** menu, select the **Image archive** command. The image archive will be opened.
 3. From the **Database** menu, select the **Show backup drive** command . A dialog box for selecting the backup drive appears.
 4. On the **Select backup drive** dialog box, click on the drive. Confirm with **OK**.
 5. From the **Database** menu, select the **Swap out backup** command. A dialog box for searching the archive will open.
 6. Enter the archive to be swapped out and, if necessary, additional criteria and click **Search**. The system will search.
 7. Enter the new backup archive name and confirm with **OK**.
 8. On the **Database** menu, deactivate the command **Show backup drive**.

Formatting a CD

Call up the taskbar. It is located below your status bar. If it is not shown, call it up with the keyboard using the Windows key. You will find the CD icon on the right side of the taskbar. Click on the dialog box for the desired action and confirm. Formatting (CD RW) can take up to 20 minutes. Bosch recommends using CD-R discs as they do not require as long of a formatting time.



If you see a red character, this CD is already formatted.

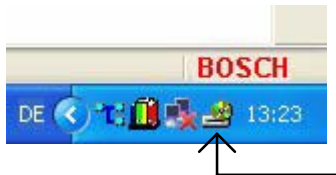


Double-click on this icon. If the icon does not have a red character, this CD must be formatted.



After you double-click, this dialog window will be activated. Place a blank CD in the drive and click **Format CD**.



Enter a name. Continue with **Start format**. The CD is formatted.

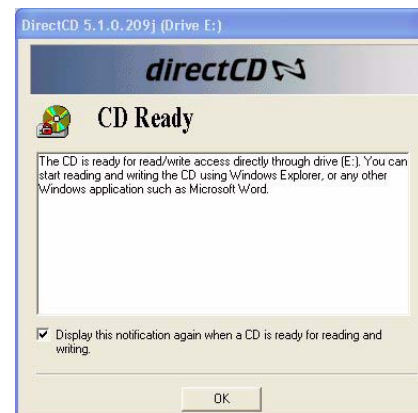


The CD is ready for read/write access. Confirm with **OK**

Formatting a CD



If you want to eject the CD, click the **Eject** button.

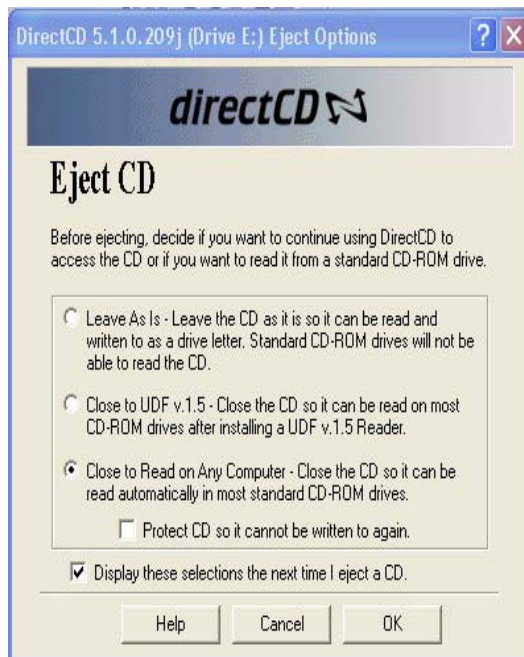

Click next to one of the options and confirm with **OK**.

Swapping out data on CD

Change from the live image to the image archive. Proceed as follows:

- Place a formatted CD in the drive
- From the **Database** menu,
 - **select**
 - **Show backup drive** and confirm

From the **Database** menu,

- select **Swap out backup**
- the **Search in image archive** dialog box will appear

Searching in image archive (single images)

Search macros Transaction data ?

Schedule

Date: 22.01.2003 Time from: 08:13:45

Elapsed days (1: today only): Time to: 08:14:01

Camera

Number: From alarm no.: To alarm no.:

Local archives

Search all archives Selected archives:

1 Kamera1
2 BOVIS01 Normal
255 Suchergebnisse

Remote stations:

On all configured remote network stations Selected remote stations:

Local archives


Transfer at max. speed (consider higher network load)

Search Close

Enter the **Date**, **Time**, **Camera no.** and the **Remote station**. Click search.

- **The name of the backup archive** will be shown
- **Confirm** or change archive name and **confirm**
- The **Remote backup storage** dialog box will appear
- Data will be swapped out
- Wait until the search procedure has ended
- Click **Finish**

From the **Database** menu,
click **Show backup drive**

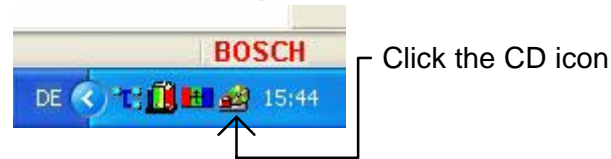

Select the corresponding option and confirm with **OK**
The CD is ejected

DirectCD 5.1.0.209j (Drive E:) Eject Options

directCD

Eject CD

Before ejecting, decide if you want to continue using DirectCD to access the CD or if you want to read it from a standard CD-ROM drive.

Leave As Is - Leave the CD as it is so it can be read and written to as a drive letter. Standard CD-ROM drives will not be able to read the CD.

Close to UDF v.1.5 - Close the CD so it can be read on most CD-ROM drives after installing a UDF v.1.5 Reader.

Close to Read on Any Computer - Close the CD so it can be read automatically in most standard CD-ROM drives.

Protect CD so it cannot be written to again.




Display these selections the next time I eject a CD.

Help Cancel OK


Alarm simulation




If alarm simulation signals are configured, you will be able to see this from the buttons shown (see alarm simulation bar) and from whether the **Alarm simulation** element is active on the **System** menu.

If you select alarm simulation, a dialog box in which you can trigger alarms for a maximum of four detectors will appear. Another click on the alarm button will cancel the simulation.

  Detectors8 The alarm is represented on the simulation detector (connection window) by a red exclamation point.
 Detectors9

A second possibility for alarm simulation is to use the alarm simulation bar.

 To carry out an alarm simulation, click on the corresponding simulation button. Thus the color of the button changes and the alarm is represented on the simulation detector (connection window) by a red exclamation point.

  Detectors8
 Detectors9

Connection with a remote station

Incoming alarm connection

You are on the live image view of an image receiver

Automatic connection established by a remote station on alarm

On alarm, an external station automatically establishes image transmission to your system and the images transmitted can be saved automatically by the receiver in the archive **<Remote station> Alarm.**

Camera selection for external station

Click on the icons for the individual cameras to see their images.

On the **Display** menu, you can display several cameras per remote station simultaneously.

During image transmission, you can cancel image saving. This can be useful if no relevant procedures are running and you wish to save storage space in your archive.

In this case, deactivate by clicking

- Save received images **on the Camera menu** or
- the icon on the right-hand side of the screen (red circle).

Note: Deactivating the saving process relates only to the current signal. A new signal is saved automatically.

If saving should be continued, activate it by clicking

- the **Save received images** command from the **Camera** menu or
- the icon on the right-hand side of the screen.

Disconnect

On the Connect menu, click the command and confirm the query as to whether you really want to disconnect with **Yes**.

Connection with a remote station

Looking at live images, performing control procedures on a remote station

You are now on the live image

Establish connection

From the **Connection** menu, select the **Connection** command.
The Connection dialog box opens.
Select the desired connection type, e.g. **ISDN/network**.
Click on the remote station in the list box and confirm with **OK**.
The connection to the remote station is established.

Select camera

In the image window, on the icons for the individual cameras to see their images. On the **Display** menu, you can display several cameras per remote station simultaneously.

From the **Camera** menu, select the **Camera switchover** command.

The Automatic camera switchover dialog box opens.

In the dialog box, specify the cameras that should be affected by the switchover. If necessary, consult the online Help.

Control relay outputs

From the **Relay** menu, select the **Relay...** command. The relay output is controlled (e.g. light on). Clicking the command again will reset the control procedure.

Disconnect

On the Connect menu, click the **Disconnect** command and confirm the query as to whether you really want to disconnect with **Yes**.

Searching for and looking at archive images from the remote station

You are now on the live image

- Open image archive** From the **System** menu, select the **Image archive** command. The image archive will be opened.
- Establish connection** From the **Connection** menu, select the **establish connection** command. The **Connection** dialog box opens. Select the desired connection type, e.g. **ISDN/network/modem**. Click on the remote station in the box and confirm with **OK**. The connection to the remote station is established. In the archive tree, the archives of the remote station will appear under its name.
- Select remote station** By selecting the remote station, you can the area to be searched on the remote station on the next dialog; you can limit the search area to particular archives.

Search for images on the remote station

From the **Database** menu, select the **Search dialog (single images)** command. A dialog box for searching the archive will open. Enter the search criteria and/or the archives to be searched and click the **Search** button. The images found will be saved on your system in the **<Remote station> Search** archive.

Looking at archive images of the remote station

Open the archive by clicking on the symbol in front of the archive name. Double-click on the relevant entry. You will see the first image of the saved film sequence. Let the film run. To do this, use the recorder buttons at the bottom of the image window. On the **Connection** menu, click the **Disconnect** command and confirm the query as to whether you really want to disconnect with **Yes**.

Disconnect

Notes

BOSCH

Bosch Security Systems
850 Greenfield Road, Lancaster, PA 17601
Phone: 800-326-3270, Fax: 717-735-6560

614-4.998.137.631
Edition: 2
Status: February 03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>