


ViPower Aluminum 2.5" External Enclosure Installation Guide

* Please refer to this installation guide for the following products: VPA2-2528, VPA2-25118, VPA2-25011, VPA2-25018

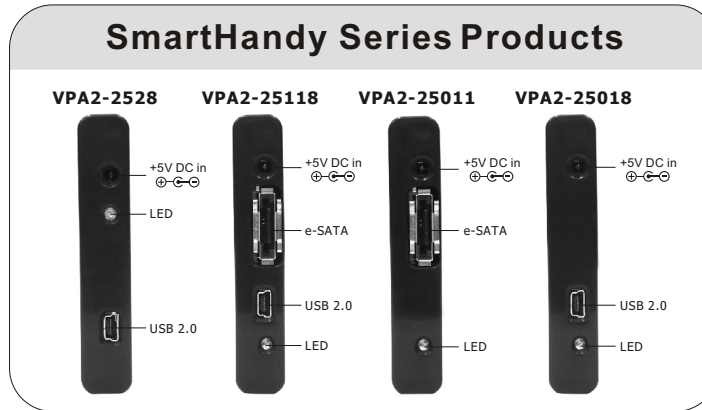


Step. **1**




Remove two retaining screws on the front panel

Step. **4**

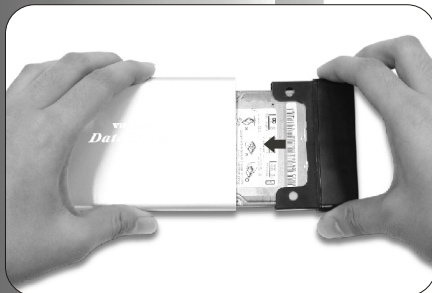

Slide in the HDD into the case

Step. **2**

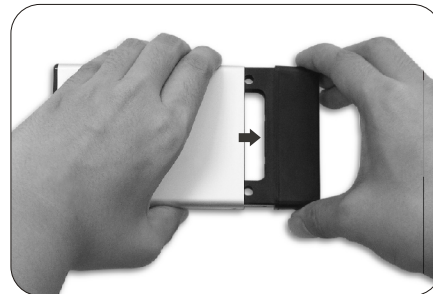


Take out the front panel

Step. **5**




Secure the front panel


Step. **3**

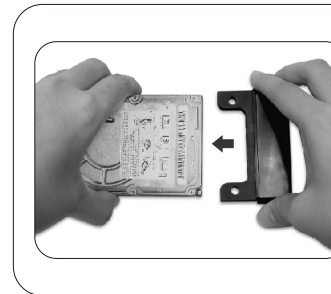

Connect the HDD with the front panel

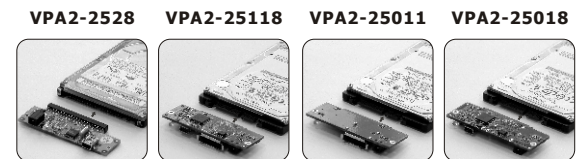

Step. **6**

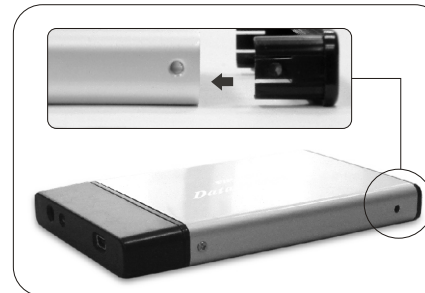

Unique screwless design for easy installation

Step. **7**



Installation completed

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>