


Installation Instructions for: **DELUXE SHOWERHEAD**
BODY SIDE SPRAY




1660.100 SERIES
1660.120 SERIES

ROUGHING-IN DIMENSIONS

DELUXE SHOWERHEAD

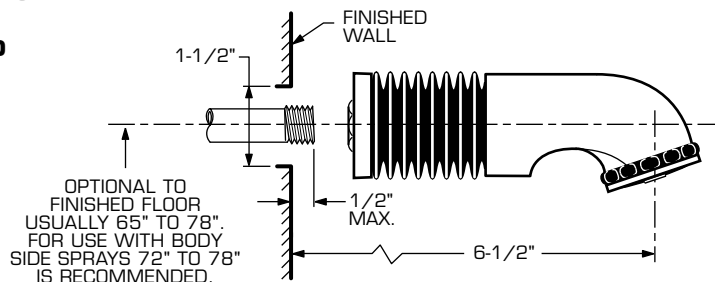

BODY SIDE SPRAY

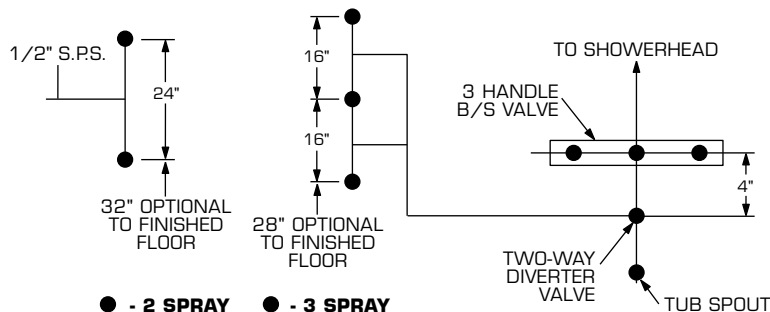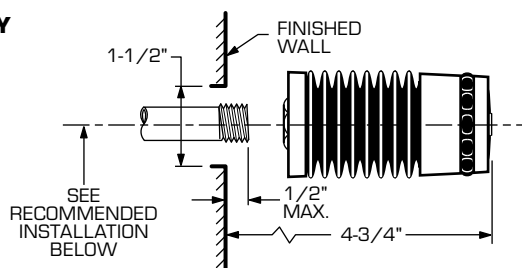

RECOMMENDED INSTALLATION FOR MULTIPLE BODY SIDE SPRAYS:

- Each installed BODY SIDE SPRAY requires 2.5 GPM for an adequate spray flow.
- For maximum flow, use Amarilis 3-Handle Bath/Shower Valve 8030 or 8031 Series.
- Connect multiple body side sprays to spout outlet of valve.
- Provide two-way diverter valve for addition of tub spout.
- Connect deluxe showerhead to shower outlet of valve.

1 ROUGHING-IN


- Prepare shower connection nipples per roughing-in dimensions. See diagram for recommended 2 and 3 BODY SIDE SPRAY installation.
- Cap nipples, turn on water supplies and check for leaks.

2 SHOWERHEAD INSTALLATION

- Slide ESCUTCHEON forward and compress BELLOWS to expose supply connectors.
- Turn on water supplies and check for leaks.
- Use adjustable wrench to install SHOWERHEAD.
- Push ESCUTCHEON back until seated flush against wall.

3 SERVICE

- To increase swivel tension:
 - Compress BELLOWS towards rear to expose ball joint. Wrench tighten COUPLING NUT to increase tension.
- The FLOW REGULATOR may accumulate debris causing reduced water flow. To clean, remove SHOWERHEAD, then:
 - Remove ESCUTCHEON and BELLOWS.
 - Unscrew SUPPLY CONNECTOR to remove FLOW REGULATOR.
 - Clean FLOW REGULATOR, re-assemble and install SHOWERHEAD.

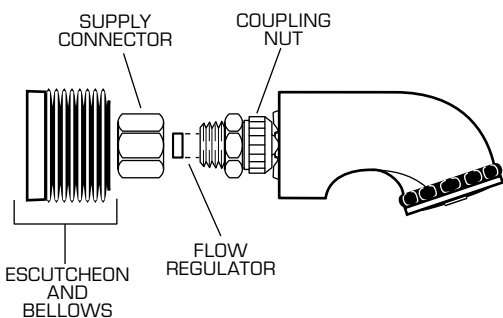

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>